

MITSUBISHI

Mitsubishi Industrial Robot

RV-6SD-SUL Series INSTRUCTION MANUAL

ROBOT ARM SETUP & MAINTENANCE

MELFA
BFP-A8674

Safety Precautions

Always read the following precautions and the separate "Safety Manual" before starting use of the robot to learn the required measures to be taken.

CAUTION

All teaching work must be carried out by an operator who has received special training. (This also applies to maintenance work with the power source turned ON.)
Enforcement of safety training

CAUTION

For teaching work, prepare a work plan related to the methods and procedures of operating the robot, and to the measures to be taken when an error occurs or when restarting. Carry out work following this plan. (This also applies to maintenance work with the power source turned ON.)
Preparation of work plan

WARNING

Prepare a device that allows operation to be stopped immediately during teaching work. (This also applies to maintenance work with the power source turned ON.)
Setting of emergency stop switch

CAUTION

During teaching work, place a sign indicating that teaching work is in progress on the start switch, etc. (This also applies to maintenance work with the power source turned ON.)
Indication of teaching work in progress

WARNING

Provide a fence or enclosure during operation to prevent contact of the operator and robot.
Installation of safety fence

CAUTION

Establish a set signaling method to the related operators for starting work, and follow this method.
Signaling of operation start

CAUTION

As a principle turn the power OFF during maintenance work. Place a sign indicating that maintenance work is in progress on the start switch, etc.
Indication of maintenance work in progress

CAUTION

Before starting work, inspect the robot, emergency stop switch and other related devices, etc., and confirm that there are no errors.
Inspection before starting work

The points of the precautions given in the separate "Safety Manual" are given below.
Refer to the actual "Safety Manual" for details.

⚠ CAUTION

Use the robot within the environment given in the specifications. Failure to do so could lead to a drop or reliability or faults. (Temperature, humidity, atmosphere, noise environment, etc.)

⚠ CAUTION

Transport the robot with the designated transportation posture. Transporting the robot in a non-designated posture could lead to personal injuries or faults from dropping.

⚠ CAUTION

Always use the robot installed on a secure table. Use in an instable posture could lead to positional deviation and vibration.

⚠ CAUTION

Wire the cable as far away from noise sources as possible. If placed near a noise source, positional deviation or malfunction could occur.

⚠ CAUTION

Do not apply excessive force on the connector or excessively bend the cable. Failure to observe this could lead to contact defects or wire breakage.

⚠ CAUTION

Make sure that the workpiece weight, including the hand, does not exceed the rated load or tolerable torque. Exceeding these values could lead to alarms or faults.

⚠ WARNING

Securely install the hand and tool, and securely grasp the workpiece. Failure to observe this could lead to personal injuries or damage if the object comes off or flies off during operation.

⚠ WARNING

Securely ground the robot and controller. Failure to observe this could lead to malfunctioning by noise or to electric shock accidents.

⚠ CAUTION

Indicate the operation state during robot operation. Failure to indicate the state could lead to operators approaching the robot or to incorrect operation.

⚠ WARNING

When carrying out teaching work in the robot's movement range, always secure the priority right for the robot control. Failure to observe this could lead to personal injuries or damage if the robot is started with external commands.

⚠ CAUTION

Keep the jog speed as low as possible, and always watch the robot. Failure to do so could lead to interference with the workpiece or peripheral devices.

⚠ CAUTION

After editing the program, always confirm the operation with step operation before starting automatic operation. Failure to do so could lead to interference with peripheral devices because of programming mistakes, etc.

⚠ CAUTION

Make sure that if the safety fence entrance door is opened during automatic operation, the door is locked or that the robot will automatically stop. Failure to do so could lead to personal injuries.

⚠ CAUTION

Never carry out modifications based on personal judgments, or use non-designated maintenance parts.

Failure to observe this could lead to faults or failures.

⚠ WARNING

When the robot arm has to be moved by hand from an external area, do not place hands or fingers in the openings. Failure to observe this could lead to hands or fingers catching depending on the posture.

⚠CAUTION

Do not stop the robot or apply emergency stop by turning the robot controller's main power OFF. If the robot controller main power is turned OFF during automatic operation, the robot accuracy could be adversely affected. Moreover, it may interfere with the peripheral device by drop or move by inertia of the arm.

⚠CAUTION

Do not turn off the main power to the robot controller while rewriting the internal information of the robot controller such as the program or parameters.

If the main power to the robot controller is turned off while in automatic operation or rewriting the program or parameters, the internal information of the robot controller may be damaged.

*Description of the plate

The attention plate is attached to the robot arm. To use the robot safely, please be sure to keep the matter of the statement to the plate.

Attention plate attachment position

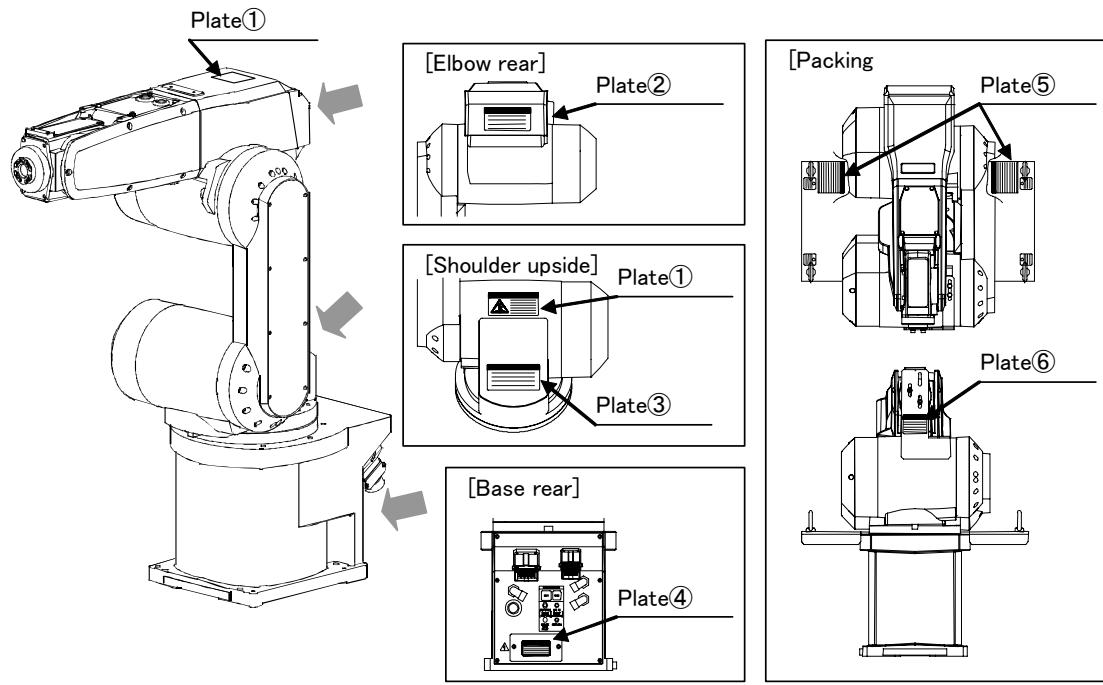


Plate written details

Attention plate		Details
①	<p>⚠ 注意 CAUTION VORSICHT</p>  <p>この表面は高温につき、さわらないでください。 Do not touch this surface for the high temperature. Die Oberfläche darf nicht berührt werden! Es besteht Verbrennungsgefahr.</p>	Do not touch this surface for the high temperature.
②	<p>⚠ 注意 CAUTION VORSICHT</p> <p>ブレーキ解除時は、このカバーとロボット本体との干渉に注意してください。保護性能(IP)やクリーン性能に影響する恐れがあります。 Be careful of interference with the robot itself and this cover at the time of brake release. When it occurs, a protection and a clean spec. may decrease.</p> <p>Achten Sie darauf, dass es beim Lösen der Bremse zu keiner Berührung zwischen dieser Gehäuseabdeckung und dem Roboterarm selbst kommt. Die Schutzart- und die Reinraumklasse können sich dadurch verschlechtern.</p>	Be careful of interference with the robot itself and this cover at the time of brake release. When it occurs, a protection and a clean spec. may decrease.

③	 注意 CAUTION VORSICHT <p>カバーの裏面にロボットの原点設定の重要なデータが記録されています。モータや減速機の交換時には取扱説明書にもとづいて必ず原点設定の作業を行った後、新しいデータを記録してください。 The important robot origin setting data is recorded on the rear side of this robot. After replacing the motor or reduction gears, follow the origin according to the instruction manual, and record the new data. Die wichtigen „Origin“-Bezugspunktdaten des Roboters sind auf der Rückseite dieser Abdeckung vermerkt. Nach dem Austausch eines Motors oder eines Untersetzungsgetriebes müssen die „Origin“-Bezugspunktdaten entsprechend der Betriebsanweisung neu eingestellt und auf dem Datentafel unter dieser Abdeckung vermerkt werden.</p>	<p>The important robot origin setting data is recorded on the rear side of this robot. After replacing the motor or reduction gears, follow the origin according to the instruction manual, and record the new data.</p>
④	 CAUTION <p>The battery is stored in this. Replace only with battery type. Part No. A6BAT Made by Mitsubishi Electric Corporation.</p>	<p>The battery is stored in this. Replace only with battery type. Part No. A6BAT Made by Mitsubishi Electric Corporation.</p>
⑤	 注意 CAUTION VORSICHT <ul style="list-style-type: none"> ■ パックの下げる位置にリフトのワイヤを掛けて搬送してください。 ■ ロボットを輸送する際には、再搬時の状態のまま搬送してください。 ■ そうでない場合には重心位置が狂い危険です。 ■ 脱着機ロボットを操作する前に、この注意書きを取り外してから運動してください。 ■ Attach the lift wires to the suspension position marked with ①, and then transport. ■ Always transport the robot in the state found when unpacked. If the state is changed or jigs removed, the center of gravity will deviate causing a hazardous situation. ■ Always remove these jigs before operating the robot after installation. ■ Müssen Sie die Tragseile an den mit ① gekennzeichneten Transportseilen befestigen. ■ Transportieren Sie den unverpackten Roboter immer in der Position, in der er sich beim Auspacken befand. In jeder anderen Position oder wenn die Transportsicherung entfernt wurde, wird sich der Schwerpunkt des Roboters verschieben und es können gefährliche Situationen entstehen. ■ Nach der Installation und vor der ersten Inbetriebnahme muß die Transportsicherung entfernt werden. 	<ul style="list-style-type: none"> ■ Attach the lift wires to the suspension position marked with ①, and then transport. ■ Always transport the robot in the state found when unpacked. If the state is changed or jigs removed, the center of gravity will deviate causing a hazardous situation. ■ Always remove these jigs before operating the robot after installation.
⑥	 注意 CAUTION VORSICHT <p>ロボットを操作する前に、この固定板と固定用ネジを取り外してください。ロボットを運搬する際には、この固定板を必ず取り付けてください。 Always remove the fixing plate and screws before operating the robot. Always install this fixing plate before transporting the robot. Die Fixierungsplatte und die Schraube muß vor der Inbetriebnahme immer entfernt werden. Für den Transport muß die Fixierungsplatte immer installiert sein.</p>	<p>Always remove the fixing plate and screws before operating the robot. Always install this fixing plate before transporting the robot.</p>

Revision history

Date of Point	Instruction Manual No.	Revision Details
2008-05-15	BFP-A8674	First print

■ Introduction

Thank you for purchasing the Mitsubishi industrial robot.

This instruction manual explains procedures to be taken for unpacking, installing, servicing and inspecting the robot arm.

Always read through this manual before starting use to ensure correct usage of the robot.

The contents of this manual correspond to the following robot types.

- 〈Type〉
- RV-6SD-SUL series: Standard arm
 - RV-6SDL-SUL series: Long arm

- No part of this manual may be reproduced by any means or in any form, without prior consent from Mitsubishi.
- The details of this manual are subject to change without notice.
- An effort has been made to make full descriptions in this manual. However, if any discrepancies or unclear points are found, please contact your dealer.
- The information contained in this document has been written to be accurate as much as possible. Please interpret that items not described in this document "cannot be performed.". Please contact your nearest dealer if you find any doubtful, wrong or skipped point.

CONTENTS

	Page
1 Before starting use	1-1
1.1 Using the instruction manuals	1-1
1.1.1 The details of each instruction manuals	1-1
1.1.2 Symbols used in instruction manual	1-2
1.2 Safety Precautions	1-3
1.2.1 Precautions given in the separate Safety Manual	1-4
2 Unpacking to Installation	2-6
2.1 Confirming the product	2-6
2.2 Installation	2-7
2.2.1 Unpacking	2-7
2.2.2 Transportation procedures (Transporting with a crane)	2-8
2.2.3 Installation procedures	2-9
2.2.4 Grounding procedures	2-10
(1) Grounding methods	2-10
(2) Grounding procedures	2-10
2.2.5 Connecting with the controller	2-11
(1) Connection of the machine cable	2-11
(2) Use of the brake release box	2-12
2.3 Spare wiring	2-14
2.3.1 Fore arm area	2-14
2.3.2 Base area	2-16
2.3.3 Connection of piping for air pressurization	2-18
2.3.4 Connection of piping for suction	2-18
2.4 Setting the origin	2-19
2.4.1 Installing the teaching pendant (T/B)	2-19
2.4.2 Setting the origin with the origin data input method	2-20
(1) Confirming the origin data	2-20
(2) Turning ON the control power	2-20
(3) Preparing the T/B	2-21
(4) Selecting the origin setting method	2-22
(5) Inputting the origin data	2-23
(6) Installing the shoulder cover B	2-24
2.5 Confirming the operation	2-25
(1) JOINT jog operation	2-28
(2) XYZ jog operation	2-30
(3) TOOL jog operation	2-32
(4) 3-axis XYZ jog operation	2-34
(5) CYLINDER jog operation	2-36
1 Installing the option devices	3-38
1.1 Installing the solenoid valve set (1S-VD01-02/VD02-02/VD03-02/VD04-02)	3-38
1.2 Installing the hand input cable	3-41
1.3 Installing the hand output cable	3-42
1.4 Changing the operating range	3-43
1.4.1 J1 axis	3-43
1.4.2 J2 and J3 axis	3-44
1 Basic operations	4-47
1 Maintenance and Inspection	5-48
1.1 Maintenance and inspection interval	5-48
1.2 Inspection items	5-49
1.2.1 Daily inspection items	5-49
1.2.2 Periodic inspection	5-50
1.3 Maintenance and inspection procedures	5-51

	Page
1.3.1 Robot arm structure	5-51
1.3.2 Installing/removing the cover	5-53
1.3.3 Inspection, maintenance and replacement of timing belt	5-55
(1) Timing belt replacement period	5-55
(2) Inspection, maintenance and replacement of J5-axis timing belt	5-56
(3) Timing belt tension	5-57
1.3.4 Lubrication	5-58
(1) Lubrication position and specifications	5-58
(2) Lubrication method	5-59
1.3.5 Stopper exchange	5-60
1.3.6 Replacing the backup battery	5-61
(1) Replacing the robot arm battery	5-61
1.4 Maintenance parts	5-63
1.5 Resetting the origin	5-64
1.5.1 Jig method	5-65
(1) J1 axis origin setting	5-66
(2) J2 axis origin setting	5-68
(3) J3 axis origin setting	5-71
(4) J4 axis origin setting (6-axis type only)	5-74
(5) J5 axis origin setting	5-76
(6) J6 axis origin setting	5-79
1.5.2 ABS origin method	5-81
(1) Select the T/B	5-82
1.5.3 User origin method	5-83
1.5.4 Recording the origin data	5-85
(1) Confirming the origin data label	5-85
(2) Confirming the origin data	5-85
(3) Recording the origin data	5-85
(4) Installing the cover	5-85
1Appendix	Appendix-86
Appendix 1 : Configuration flag	Appendix-86

1 Before starting use


This chapter explains the details and usage methods of the instruction manuals, the basic terminology and the safety precautions.

1.1 Using the instruction manuals


1.1.1 The details of each instruction manuals

The contents and purposes of the documents enclosed with this product are shown below. Use these documents according to the application.


For special specifications, a separate instruction manual describing the special section may be enclosed.

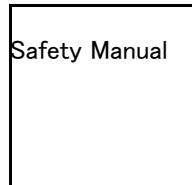


Safety Manual
Explains the common precautions and safety measures to be taken for robot handling, system design and manufacture to ensure safety of the operators involved with the robot.

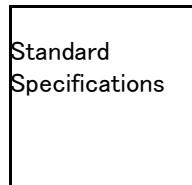


Standard Specifications
Explains the product's standard specifications, factory-set special specifications, option configuration and maintenance parts, etc. Precautions for safety and technology, when incorporating the robot, are also explained.

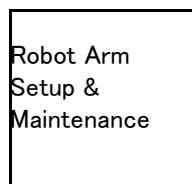


Robot Arm Setup & Maintenance
Explains the procedures required to operate the robot arm (unpacking, transportation, installation, confirmation of operation), and the maintenance and inspection procedures.

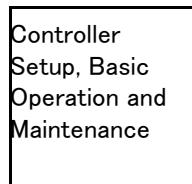

Controller Setup, Basic Operation and Maintenance
Explains the procedures required to operate the controller (unpacking, transportation, installation, confirmation of operation), basic operation from creating the program to automatic operation, and the maintenance and inspection procedures.

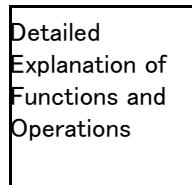

Detailed Explanation of Functions and Operations
Explains details on the functions and operations such as each function and operation, commands used in the program, connection with the external input/output device, and parameters, etc.

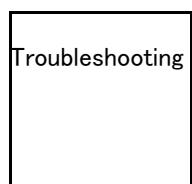

Troubleshooting
Explains the causes and remedies to be taken when an error occurs. Explanations are given for each error No.

1.1.2 Symbols used in instruction manual

The symbols and expressions shown in [Table 1-1](#) are used throughout this instruction manual. Learn the meaning of these symbols before reading this instruction manual.

Table 1-1 : Symbols in instruction manual

Symbol	Meaning
 DANGER	Precaution indicating cases where there is a risk of operator fatality or serious injury if handling is mistaken. Always observe these precautions to safely use the robot.
 WARNING	Precaution indicating cases where the operator could be subject to fatalities or serious injuries if handling is mistaken. Always observe these precautions to safely use the robot.
 CAUTION	Precaution indicating cases where operator could be subject to injury or physical damage could occur if handling is mistaken. Always observe these precautions to safely use the robot.
[JOG]	If a word is enclosed in brackets or a box in the text, this refers to a key on the teaching pendant.
[RESET] + [EXE] (A) (B)	This indicates to press the (B) key while holding down the (A) key. In this example, the [RESET] key is pressed while holding down the [+EXE] key.
T/B	This indicates the teaching pendant.
O/P	This indicates the operating panel on the front of the controller.

1.2 Safety Precautions

Always read the following precautions and the separate "Safety Manual" before starting use of the robot to learn the required measures to be taken.

⚠ CAUTION

All teaching work must be carried out by an operator who has received special training.
(This also applies to maintenance work with the power source turned ON.)

Enforcement of safety training

⚠ CAUTION

For teaching work, prepare a work plan related to the methods and procedures of operating the robot, and to the measures to be taken when an error occurs or when restarting. Carry out work following this plan. (This also applies to maintenance work with the power source turned ON.)

Preparation of work plan

⚠ WARNING

Prepare a device that allows operation to be stopped immediately during teaching work.
(This also applies to maintenance work with the power source turned ON.)

Setting of emergency stop switch

⚠ CAUTION

During teaching work, place a sign indicating that teaching work is in progress on the start switch, etc. (This also applies to maintenance work with the power source turned ON.)

Indication of teaching work in progress

⚠ DANGER

Provide a fence or enclosure during operation to prevent contact of the operator and robot.

Installation of safety fence

⚠ CAUTION

Establish a set signaling method to the related operators for starting work, and follow this method.

Signaling of operation start

⚠ CAUTION

As a principle turn the power OFF during maintenance work. Place a sign indicating that maintenance work is in progress on the start switch, etc.

Indication of maintenance work in progress

⚠ CAUTION

Before starting work, inspect the robot, emergency stop switch and other related devices, etc., and confirm that there are no errors.

Inspection before starting work

1.2.1 Precautions given in the separate Safety Manual

The points of the precautions given in the separate "Safety Manual" are given below.
Refer to the actual "Safety Manual" for details.

DANGER

If the automatic operation of the robot is operated by two or more control equipment, design the right management of operation of each equipment of the customer.

CAUTION

Use the robot within the environment given in the specifications. Failure to do so could lead to a drop or reliability or faults. (Temperature, humidity, atmosphere, noise environment, etc.)

CAUTION

Transport the robot with the designated transportation posture. Transporting the robot in a non-designated posture could lead to personal injuries or faults from dropping.

CAUTION

Always use the robot installed on a secure table. Use in an instable posture could lead to positional deviation and vibration.

CAUTION

Wire the cable as far away from noise sources as possible. If placed near a noise source, positional deviation or malfunction could occur.

CAUTION

Do not apply excessive force on the connector or excessively bend the cable. Failure to observe this could lead to contact defects or wire breakage.

CAUTION

Make sure that the workpiece weight, including the hand, does not exceed the rated load or tolerable torque. Exceeding these values could lead to alarms or faults.

WARNING

Securely install the hand and tool, and securely grasp the workpiece. Failure to observe this could lead to personal injuries or damage if the object comes off or flies off during operation.

WARNING

Securely ground the robot and controller. Failure to observe this could lead to malfunctioning by noise or to electric shock accidents.

CAUTION

Indicate the operation state during robot operation. Failure to indicate the state could lead to operators approaching the robot or to incorrect operation.

WARNING

When carrying out teaching work in the robot's movement range, always secure the priority right for the robot control. Failure to observe this could lead to personal injuries or damage if the robot is started with external commands.

CAUTION

Keep the jog speed as low as possible, and always watch the robot. Failure to do so could lead to interference with the workpiece or peripheral devices.

CAUTION

After editing the program, always confirm the operation with step operation before starting automatic operation. Failure to do so could lead to interference with peripheral devices because of programming mistakes, etc.

Make sure that if the safety fence entrance door is opened during automatic operation, the door is locked or that the robot will automatically stop. Failure to do so could lead to personal injuries.

CAUTION

Never carry out modifications based on personal judgments, or use non-designated maintenance parts.

Failure to observe this could lead to faults or failures.

WARNING

When the robot arm has to be moved by hand from an external area, do not place hands or fingers in the openings. Failure to observe this could lead to hands or fingers catching depending on the posture.

CAUTION

Do not stop the robot or apply emergency stop by turning the robot controller's main power OFF.

If the robot controller main power is turned OFF during automatic operation, the robot accuracy could be adversely affected.

CAUTION

Do not turn off the main power to the robot controller while rewriting the internal information of the robot controller such as the program or parameters. If the main power to the robot controller is turned off while in automatic operation or rewriting the program or parameters , the internal information of the robot controller may be damaged.

DANGER

When the SSCNETIII cable is removed, install the cap in the connector.

If the cap is not installed, there is a possibility of malfunctioning by adhesion of the dust etc.

DANGER

Don't remove the SSCNETIII cable, when the power supply of the robot controller is turned on. Don't face squarely the light emitted from the tip of the SSCNETIII connector or the cable. If light strikes the eyes, there is a possibility of feeling the sense of incongruity for the eyes. (The light source of SSCNETIII is equivalent to the class 1 specified to JISC6802 and IEC60825-1.)

2 Unpacking to Installation

2.1 Confirming the product

The standard configuration of the robot arm, part of the purchased product, is shown in [Table 2-1](#).

Confirm the parts.

Users who have purchased optional products should refer to the separate "Standard Specifications".

Table 2-1 : Standard configuration

No.	Part name	Type	Qty.	Remarks
1	Robot arm	RV-6SD-SUL/6SDL-SUL series	1 unit	
2	Guarantee card		1 copy	
3	Installation bolts	M8x40	4 pcs.	
4	Spring washer for installation bolts	For M8	4 pcs.	
5	Plain washer for installation bolts	For M8	4 pcs.	
6	Suspension fitting		2 pcs.	This is installed in the robot arm at the time of shipment.
7	Suspension fitting installation bolt	M10x25	1 set	
8	Spring washer for suspension fitting installation bolt	For M10	4 pcs.	
9	Plain washer for suspension fitting installation bolt	For M10	4 pcs.	
10	Eye bolt	M10	4 pcs.	
11	Nut for eye bolt	For M10	4 pcs.	
12	Fixing plates		1 pcs.	
13	Fixing plate installation bolt	M5x12	1 set	
14	Plain washer for fixing plate	For M5	4 pcs.	

2.2 Installation

2.2.1 Unpacking

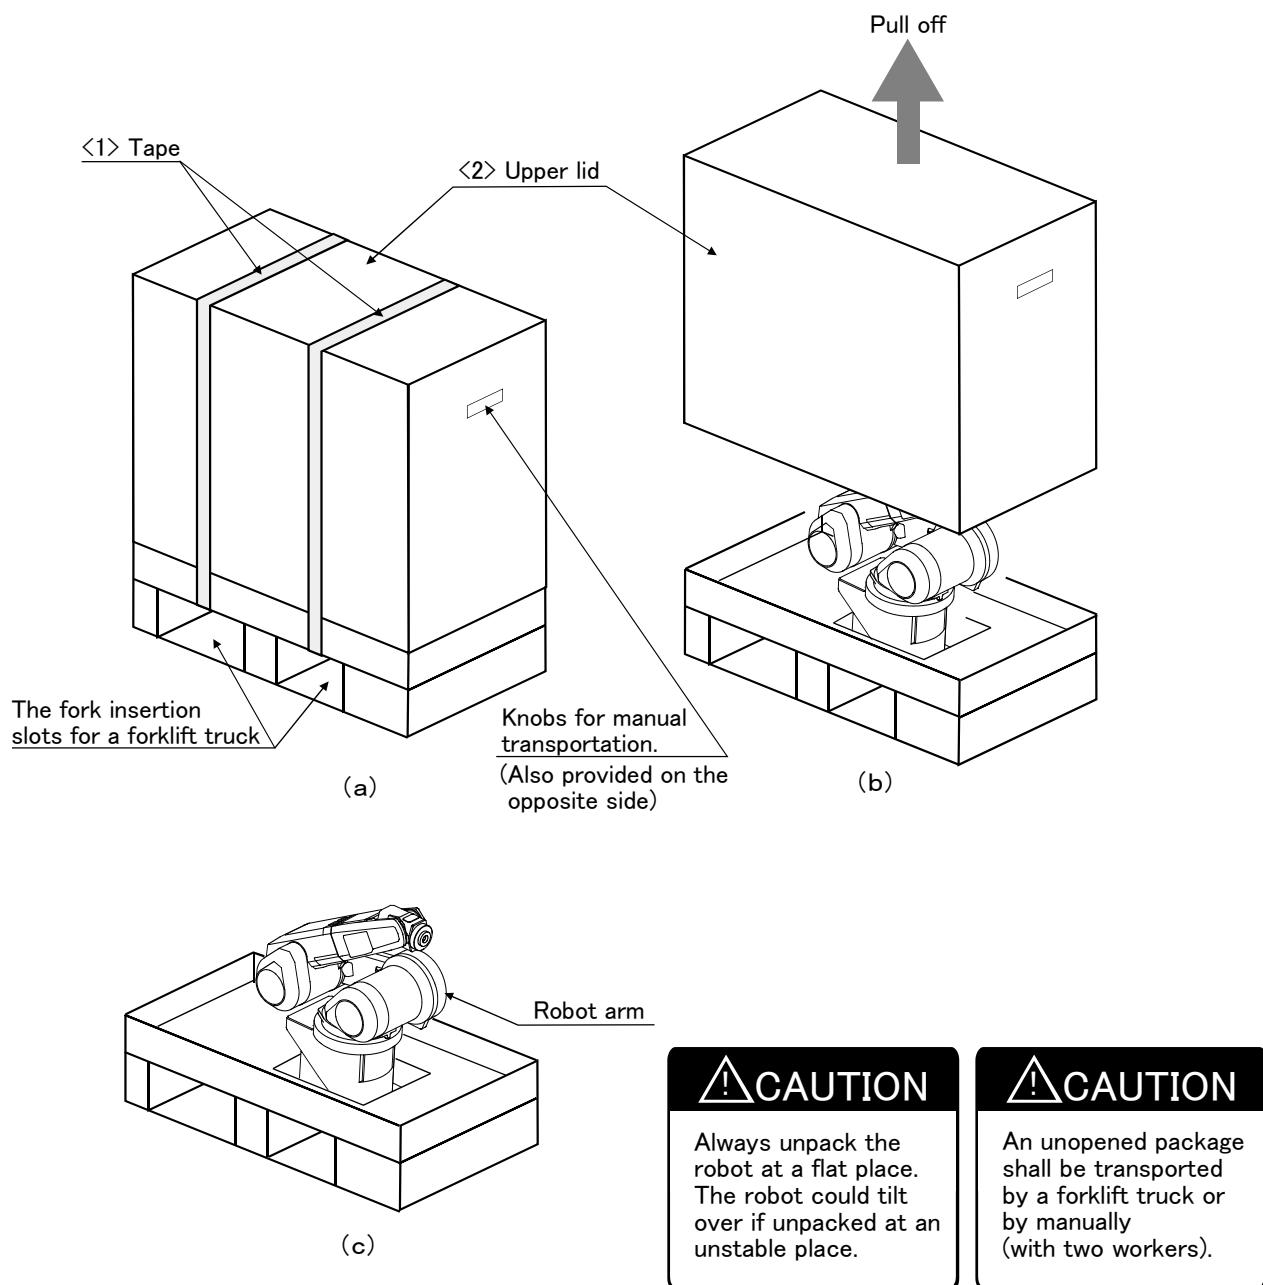


Fig.2-1 : Unpacking the robot arm

The robot is shipped from the factory in cardboard and plywood frame packing. Always refer to Fig. 2-1 and unpack the robot. Handle the robot arm according to “[2.2.2 Transportation procedures \(Transporting with a crane\)](#)”.

The unpacking process is shown below.

- 1) Using a knife, etc., slit the tape <1> fixing the upper lid <2> of the cardboard box. ([Fig. 2-1 \(a\)](#))
- 2) Pull the upper lid <2> of the cardboard box off with both hands. ([Fig. 2-1 \(b\)](#))
- 3) Remove the hexagon socket bolts <3> (four positions) connecting the sleeper and the base unit. ([Fig. 2-1 \(c\)](#))
- 4) This completes the unpacking.

2.2.2 Transportation procedures (Transporting with a crane)

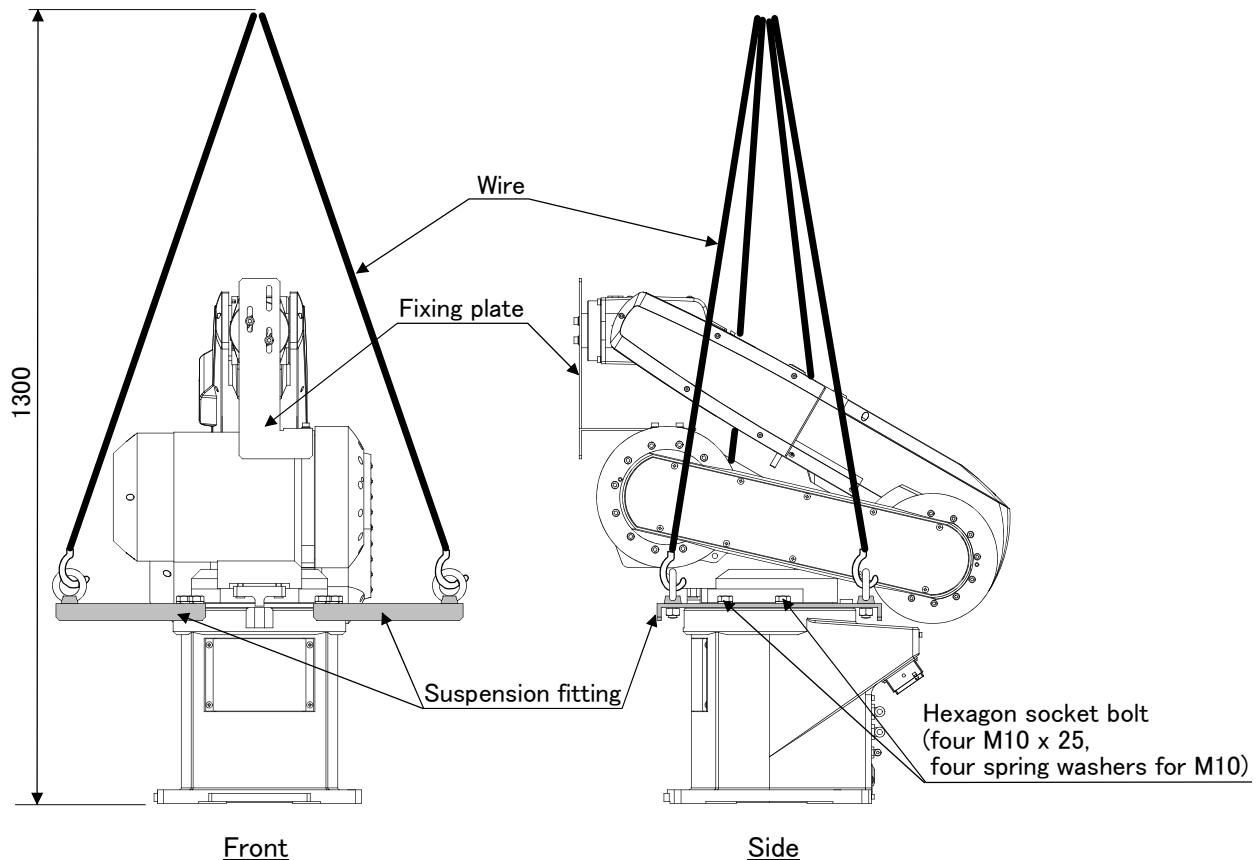


Fig.2-2 : Transportation procedures (transporting with a crane)

- 1) Attach the suspension fittings to the left and right sides of the shoulder section, and securely fix with bolts (four M10 x 25, four spring washers for M10). At this time, fix two of the suspension fitting's three holes at the side closest to the robot front. Install the fixing plate to the flange face. (M5x12: Four)
 - 2) Catch wires in the eye bolts installed on the suspension fittings, and quietly suspend the arm.
 - 3) At this time, make sure that the wires, etc., do not interfere with the robot arm or covers. Always place cloth, etc., at interfering places.
 - 4) When transferring to the installation place, take care not to apply vibration or impact.
 - 5) After installing at the installation place, remove the above suspension fittings.
 - 6) Always follow the above procedures and methods to transport the robot for secondary transportation, such as when changing the installation position.
- If the arm is directly suspended without using the specified suspension fittings, or if it is suspended in the work posture, the configuration devices could be damaged, and the transportation workers will be subject to risk due to an inadequate center of gravity position.

2.2.3 Installation procedures

- 1) The robot installation surface has been machine finished. Use the installation holes (4- ϕ 9 holes) opened at the four corners of the base, and securely fix the robot with the enclosed installation bolts (M8 x 40 hexagon socket bolts).
- 2) Installation of the robot arm is a very important step for ensuring the optimum functions of the robot. Observe the following points when designing. Install the robot on a level surface.
- 3) It is recommended that the surface roughness of the table onto which the robot is to be installed by 6.3a or more. If the installation surface is rough, the contact with the table will be poor, and positional deviation could occur when the robot moves.

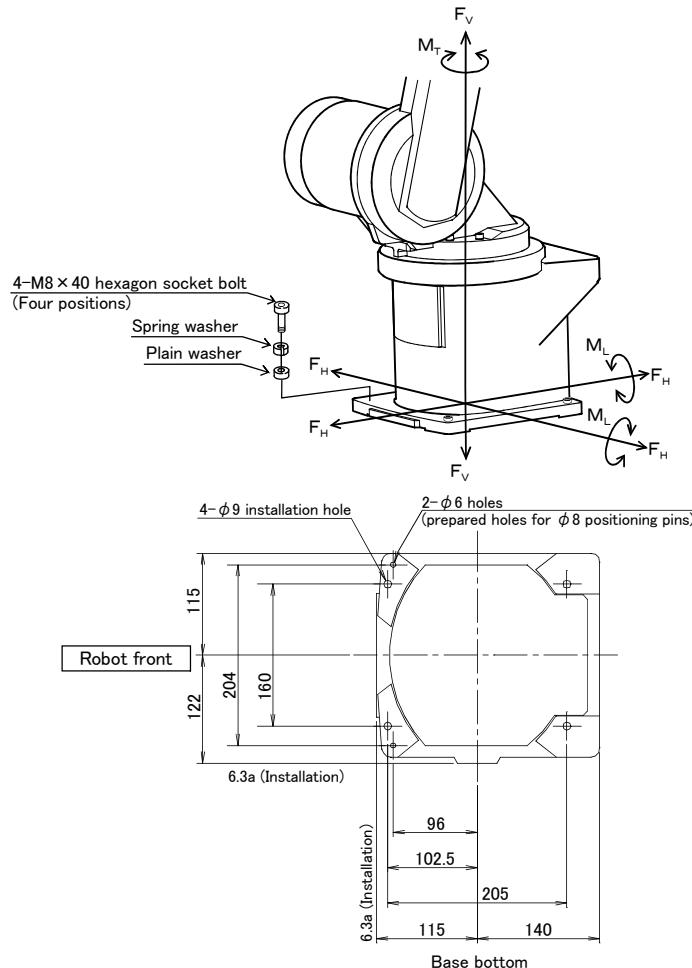


Fig.2-3 : Installation dimensions

表 2-2 : Strength of the installation side (reference)

Item	Unit	Value
Falling moment : ML	N m (ft lbf)	892(658)
Twist moment : MT	N m (ft lbf)	892(658)
Horizontal translation power : FH	N(lbf)	800(180)
Vertical translation power : FV	N(lbf)	1,400(315)



Please secure the maintenance space required for connection of the machine cable, and exchange of the backup battery in the rear.

2.2.4 Grounding procedures

(1) Grounding methods

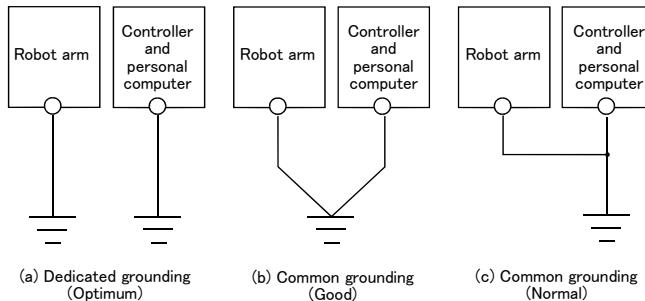


Fig.2-4 : Grounding methods

(2) Grounding procedures

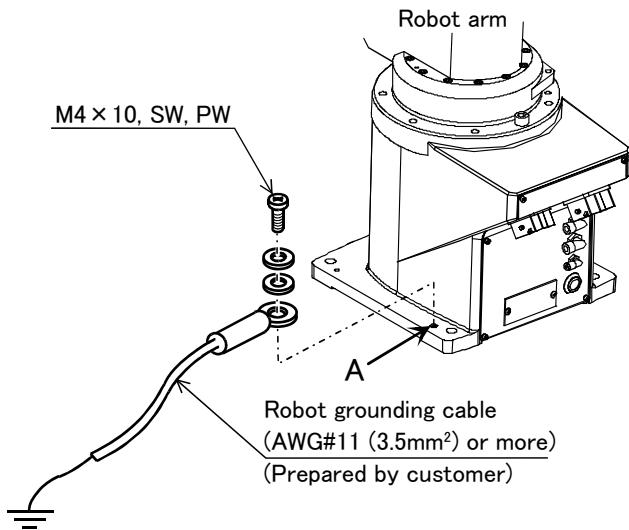


Fig.2-5 : Connecting the grounding cable

- 1) There are three grounding methods as shown in Fig. 2-4, but the dedicated grounding (Fig. 2-4 (a)) should be used for the robot arm and controller when possible. (Refer to the separate "Controller Setup, Basic Operation and Maintenance" for details on the controller grounding.)
- 2) Use Class D grounding (grounding resistance 100Ω or less). Dedicated grounding separated from the other devices should be used.
- 3) Use a AWG#11(3.5mm^2) or more stranded wire for the grounding wire. The grounding point should be as close to the robot arm and controller as possible, and the length of the grounding wire should be short.

- 1) Prepare the grounding cable (AWG#11(3.5mm^2) or more) and robot side installation screw and washer.
- 2) If there is rust or paint on the grounding screw section (A), remove it with a file, etc.
- 3) Connect the grounding cable to the grounding screw section.

2.2.5 Connecting with the controller

(1) Connection of the machine cable


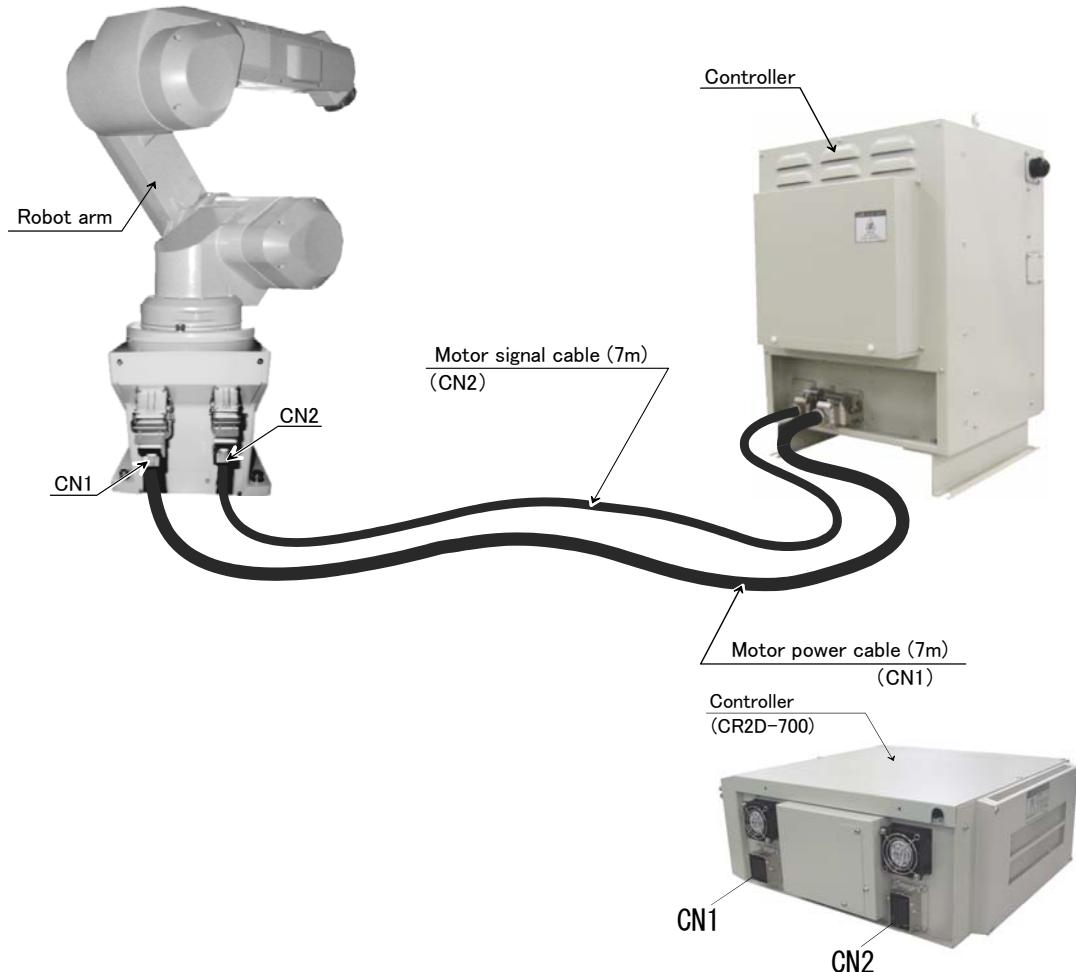


Fig.2-6 : Connecting the machine cables

Carry out the following procedure after installing the controller referring to the separate "Controller Setup, Basic Operation and Maintenance" manual.

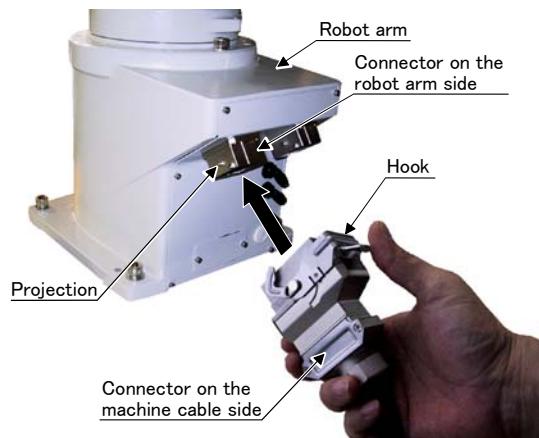


1) Make sure that the power switch on the front of the controller is turned OFF.

2) Connect the machine cable to its corresponding connector on the robot arm side.

3) After connecting the connector, insert the hook attached to the connector on the machine cable side to the rear of the projection of the robot arm connector to fix securely in place.

⚠ CAUTION

Be careful not to get your hand pinched.

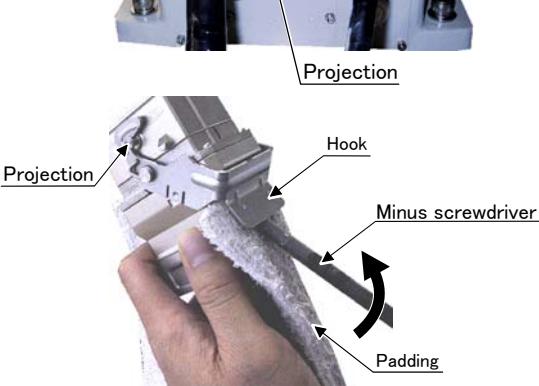

4) To remove the cable, insert a minus screwdriver into the hook while padding with a cloth, and remove the cable by lifting the hook.

⚠ CAUTION

The machine cable connectors are dedicated for the controller side and robot arm side, so take special care when connecting.

If connected incorrectly, the connector pins could bend or break. Thus, even if connected correctly, the robot will not operate correctly, creating a dangerous situation.

⚠ CAUTION

Take special care to the leading of the connection cable. If the cable is pulled with force or bent excessively, wires could break or the connector could be damaged.

(2) Use of the brake release box

The box which can release the brake of each axis individually in the emergency is attached. Describe the installation method and usage in the following.

⚠ CAUTION

Due to the robot configuration, when the brakes are released, the robot arm will drop with its own weight depending on the released axis.

Always assign an operator other than the T/B operator to prevent the arm from dropping. This operation must be carried out with the T/B operator giving signals.

(a) Installation method and usage

Place the brake release box near the robot arm (abbreviation less than 1m in radius) so that can be immediately used for the emergency.

- 1) Make sure that the power switch on the front of the controller is turned OFF.
- 2) Connect the power supply of the brake release box.
- 3) Remove the machine cable (CN1 connector) of the robot arm side.
- 4) Connect CN1 of the brake release box to the CN1 connector of the robot arm side.
- 5) Press the [POWER] switch, and turn ON the power supply of the brake release box. (The lamp lighted.)
- 6) Set the changeover switch to the axial number to release the brake of.
- 7) If the "BREAK OPEN" button is pushed, only while pushing, the brake is released intermittently.
Note) Because of to inhibit immediate drop, the brake released intermittently.
- 8) If brake release operation is completed, press the "POWER" switch, and turn off the power supply.
- 9) Remove the CN1 connector of the brake release box from the robot arm.
- 10) Connect the CN1 connector of the machine cable to the robot arm as before.

Brake release operation is completion.

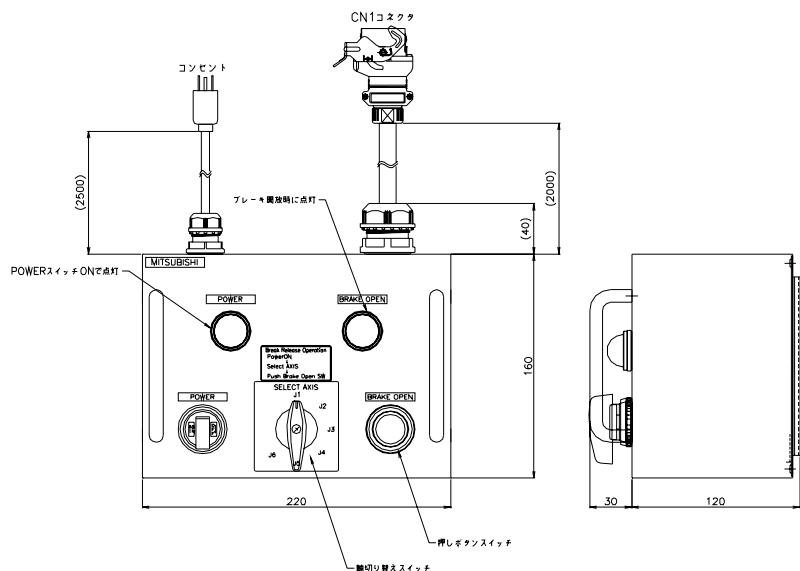


Fig.2-7 : Brake release box

2.3 Spare wiring

The interior of the spare wiring (AWG#28(0.1mm²) x4 pair (a total of eight cores) cab tire cable) is carried out to the robot arm from the base portion to the forehand arm side piece.

In this case, the cable clamp (refer to following) is needed separately for wiring leading about out of the robot. Please prepare of the customer in advance.

Table 2-3 : Incentive item of cable clamp

Type	diameter of fit electric wire	Installation hole(mm)	Maker
OA-W1606	φ 4 ~ 6	φ 21	OHM ELECTRIC CO., LTD.



Do this work after turning OFF the power supply of the robot controller.

2.3.1 Fore arm area

- 1) Remove safety socket (4) (M 4 x 8:4 book) which has stopped No.2 arm-cover C (3) or electromagnetic valve (5), and remove No.2 arm-cover C (3) or electromagnetic valve (5).

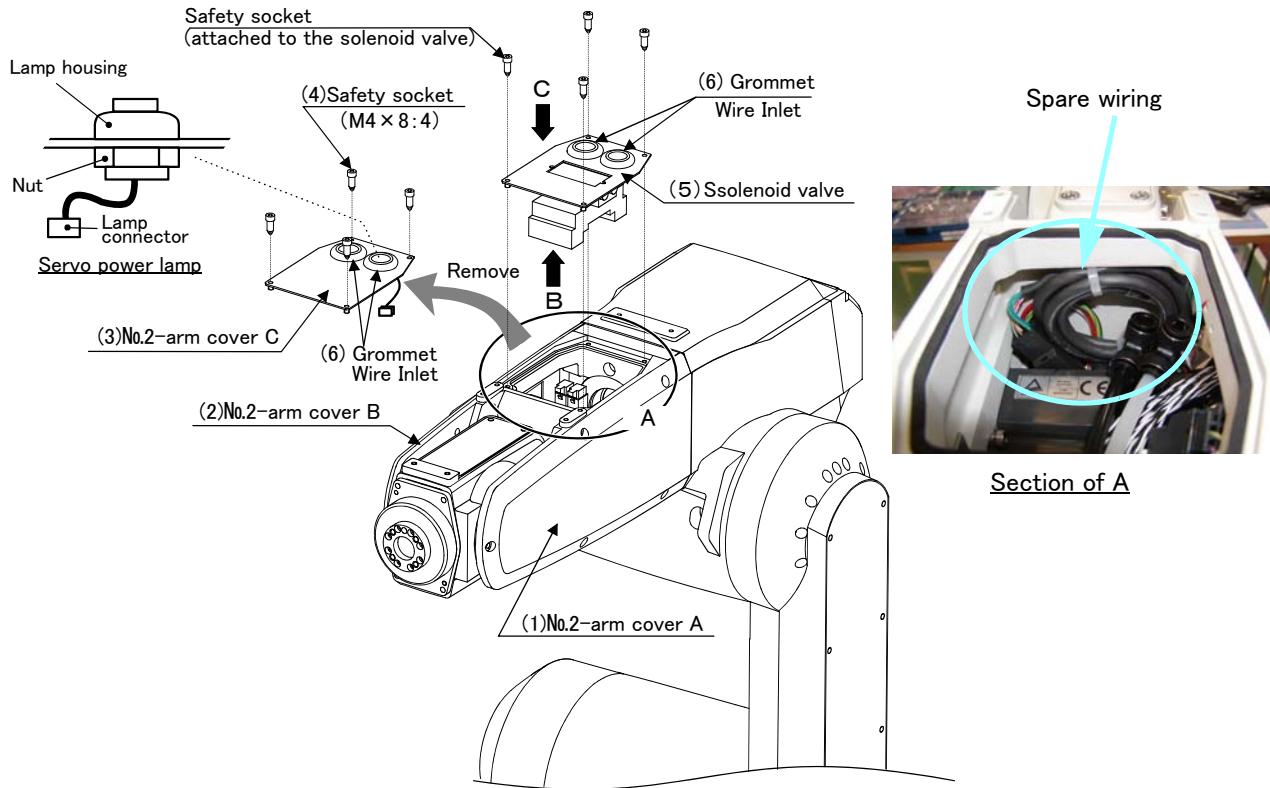


Fig.2-8 : Drawer of spare wiring (For arm side)

- 2) Take out the spare wiring (ADD) stored in the A section. (The spare wiring by the side of the fore arm is separable by the connector)
- 3) Since spare wiring is bundled in the union band, it removes the union band.
- 4) The connector is attached to spare wiring to both ends. Cut spare wiring near the connector (from the connector end to the about 10~20mm), and let spare wiring pass to the cable clamp (customer preparation).
- 5) Remove one either among the grommets of No.2 arm cover C(3) or solenoid valve (5). After removing the grommet, the seal material which remained in the hole area of the sheet metal removes.
- 6) Remove the lock nut of attachment in the cable clamp.
- 7) Let the ADD connector side of spare wiring pass in the hole area of the cover, and surely fix with the lock nut.

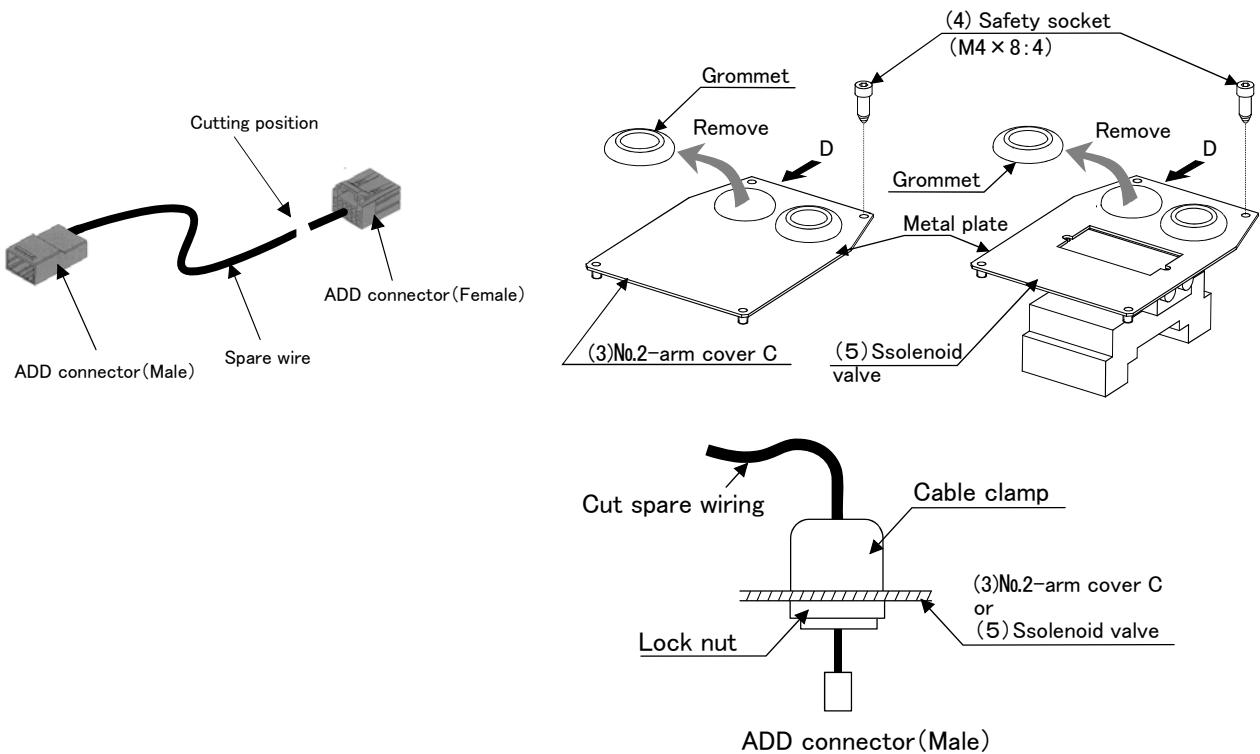


Fig.2-9 : Installation and connection of spare wiring

- 8) Connect "ADD" of the pulled-out spare wiring with the connector of "ADD" stored by the part A.
- 9) Install No.2 arm-cover C (3) or solenoid valve (5) as before. Be careful not to damage the seal material of the shape of the sponge pasting on "A section". If it damages, there is a possibility that protection specification may fall.
- 10) If the installation is completed, No.2 arm-cover B (2) will be installed as before. Be careful not to insert the cable

⚠ CAUTION

When pulling out spare wiring, keep big power from being added to the cable, the air hose, etc.

⚠ CAUTION

Please check packing not being broken or not having stripped at the time of cover installing and removing. Please contact the dealer, if it is broken or has stripped. If you use it, packing broken or stripped, oil mist etc. will invade in the arm and will cause failure.

2.3.2 Base area

- 1) Remove installation bolt (1) and remove CONBOX cover (2).



CONBOX cover (2) is completely inseparable with the robot arm.

When you install and remove the cover, be careful of the cable etc. If too much power is applied, the robot may malfunction by the breaking of the cable etc.

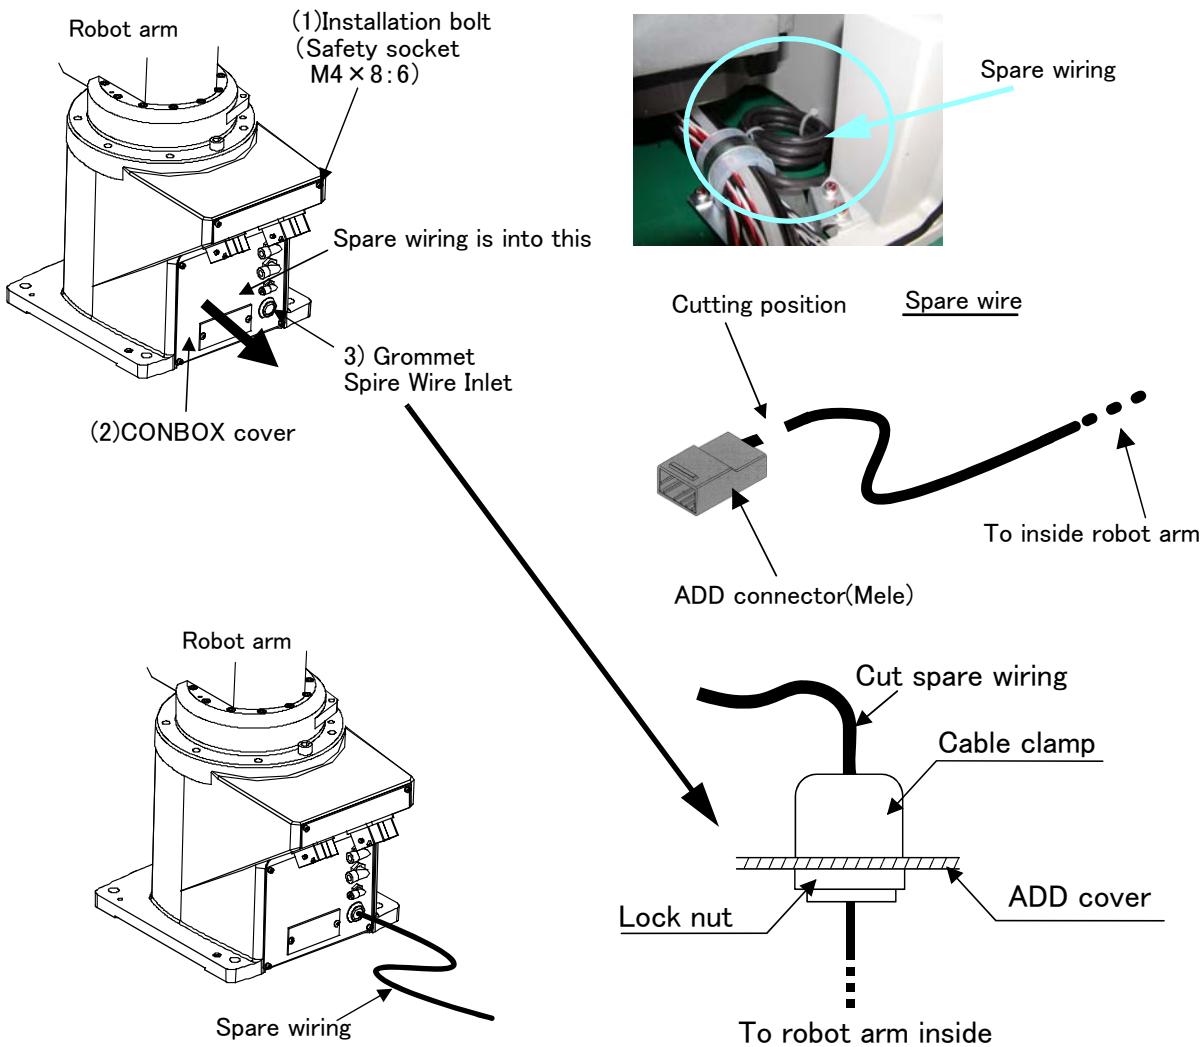


Fig.2-10 : Pull out spare wiring(Base area)

- 2) Move CONBOX cover (2) and secure the access space to spare wiring. Be careful of the cables and air hoses which are connected into the robot arm.
- 3) Take out spare wiring(ADD). Spare wiring of this part is inseparable.
- 4) Remove the union band of spare wiring.
- 5) Cut spare wiring near the connector (from the connector end to the about 10~20mm)
- 6) Remove the grommet of CONBOX cover (2). Remove the seal material which remained in the hole area of the metal plate .
- 7) Remove the lock nut of attachment in the cable clamp (customer preparation).
- 8) Let spare wiring pass from the robot arm side of CONBOX cover (2) in the hole after removing the grommet.
Let the lock nut pass to spare wiring previously at this time.
- 9) The tip area of spare wiring pass to the cable clamp. And fix with the lock nut securely. 予

10) Install CONBOX cover(2) as before. Be careful not to damage the seal material of the shape of the sponge pasting on "A section" If it damages, there is a possibility that protection specification may fall. Also be careful not to insert the cable

⚠ CAUTION

When pulling out spare wiring, keep big power from being added to the cable, the air hose, etc.

⚠ CAUTION

Please check packing not being broken or not having stripped at the time of cover installing and removing. Please contact the dealer, if it is broken or has stripped. If you use it, packing broken or stripped, oil mist etc. will invade in the arm and will cause failure.

2.3.3 Connection of piping for air pressurization

In use in oil mist environment, protection performance can be improved by pressurizing the inside of the robot arm. Please connect the phi8 air hose to the joint for pressurization of the robot arm base portion "AIR PURGE", and pressurize the inside of the robot arm.

Refer to the section of "Protection specification and the environment" of the "Standard specifications" separate volume.

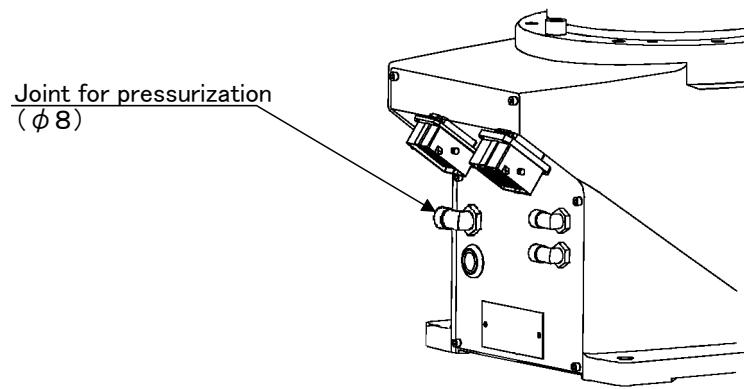


Fig.2-11 : Air purge

2.3.4 Connection of piping for suction

In use of the robot of clean specification, please connect the phi8 air hose to the joint for suction of the robot body base portion "VACUUM", and suck the inside of the robot body.

Refer to the section of "Clean specification" of the "Standard specifications" separate volume.

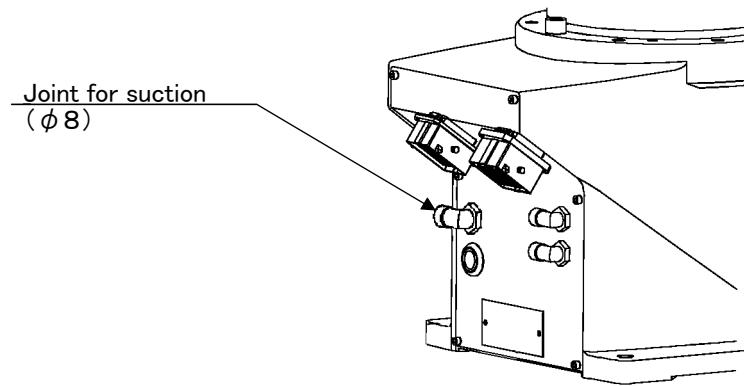


Fig.2-12 : Vacuum

2.4 Setting the origin

The origin is set so that the robot can be used with a high accuracy. After purchasing the robot, always carry out this step before starting work. This step must also be carried out if the combination of robot and controller being used is changed.

There are several methods for setting the origin, but the origin data input method will be explained here. Refer to “[5.5 Resetting the origin](#)” on page 56 for the other methods.

The teaching pendant is required for this operation.

[Caution] If the origin data at shipment is erased due to out of battery, it is necessary to set the origin again.

Refer to “[5.5 Resetting the origin](#)” on page 56 and reset the origin using the jig method or ABS method.

2.4.1 Installing the teaching pendant (T/B)

When installing and removing the T/B, turn off the controller power supply. If T/B is installed or removed in the state of power supply ON, emergency stop alarm will occur.

If you use the robot wherein T/B is removed, please install the attached dummy connector. With the connector, put the dummy connector or draw it out.



CAUTION

Please do not pull the cable of T/B strongly or do not bend it too much.

It becomes the breaking of a wire of the cable and the cause of breakage of the connector. Please installing and removing so that stress does not start the cable with the connector itself.

Explain the installation method of T/B below.

- 1) Check that the POWER (power supply) switch of the robot controller is OFF.
- 2) Connects T/B connector to the robot controller. Use as the upper surface the lock lever shown in [Fig. 2-13](#), and push in until there is sound.

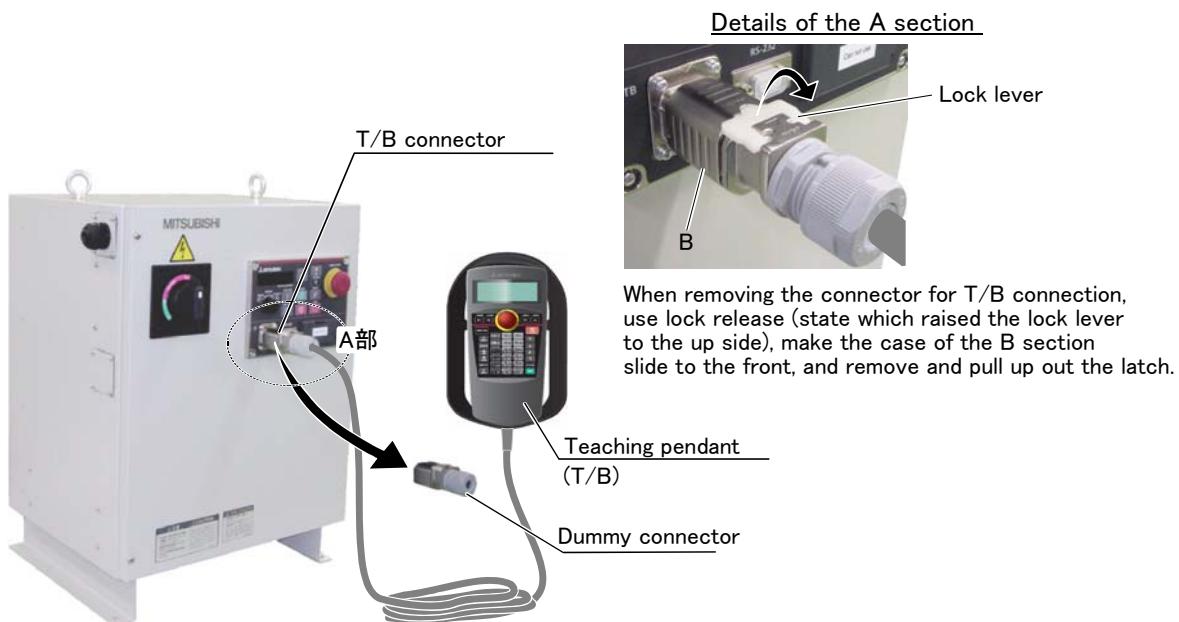


図 2-13 : Installing and removing the T/B

The installation of T/B is finished.

◇◆◇ If error C0150 occurs ◇◆◇

At the time of the first power supply injection, error:C0150 (the serial number of the robot arm has not been set up) occur the robot after purchase.

Parameter: Please input the serial number of the robot body into RBSERIAL. Refer to “instructions manual / controller setup, and basic operation & maintenance” for the operation method.

2.4.2 Setting the origin with the origin data input method

(1) Confirming the origin data

- Origin data history table (Origin Data History) Serial No.ES804008

Date	Default
D	V!#S29			
J 1	06DTYY			
J 2	2?HL9X			
J 3	1CP55V			
J 4	T6!M\$Y			
J 5	Z2IJ%Z			
J 6	A12%Z0			
Method	E	E · N · S P	E · N · S P	E · N · S P

(O: O(Alphabet), 0: Zero)

Note) Meanings of symbols in method column

E: Jig method

N: Not used

SP: Not used

The origin data to be input is noted in the origin data sheet enclosed with the arm, or on the origin data history table attached to the back side of the shoulder cover B. (Refer to [Fig. 2-14](#)).

Referring to "[5.3.2 Installing/removing the cover](#)" on page 45, remove the shoulder cover B, and confirm the value.

The value given in the default setting column is the origin settings set with the calibration jig before shipment.

Fig.2-14 : Origin data label (an example)



WARNING

Always install/remove the cover with the controller control power turned OFF.
Failure to do so could lead to physical damage or personal injury should the robot start moving due to incorrect operations.

(2) Turning ON the control power



CAUTION

Confirm that there are no operators near the robot before turning the power ON.

1) Turn the controller [POWER] switch ON.


The control power will be turned ON, and "o. 100" will appear on the STATUS NUMBER display on the front of the controller.

(3) Preparing the T/B



Next, prepare to use the T/B

1) Set the [MODE] switch on the front of the controller to "MANUAL".

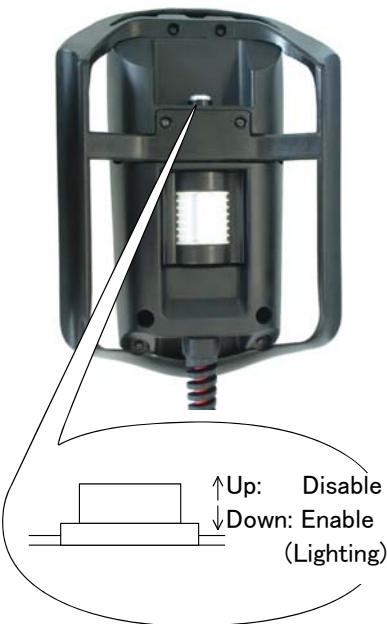

2) Set the T/B [ENABLE] switch to "ENABLE". The menu selection screen will appear.


The following operations are carried out with the T/B.

◆◆◆ Operating from the T/B ◆◆◆


Always set the [MODE] switch (mode selection key switch) on the front of the controller to "MANNUAL", and then set the T/B [ENABLE] switch to "ENABLE".

When the T/B is valid, only operations from the T/B are possible. Operations from the controller or external signals will not be accepted.


(4) Selecting the origin setting method

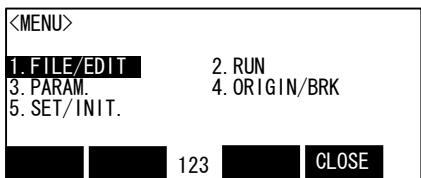


1) Press the [4] key on the menu screen, and display the refetr, break screen.

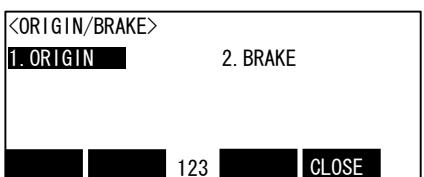

2) Press the [1] key on the refetr, break screen, and display the origin setting method selection screen.

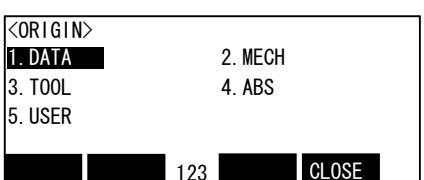

3) Press the [1] key on the origin setting method selection screen, and select the data input method.

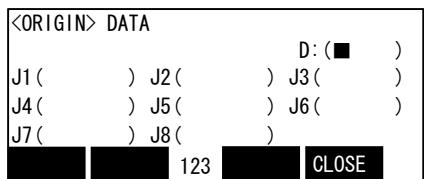

4) Display the origin data input screen

◆◆◆ Selecting a menu ◆◆◆

The menu can be selected with one of the following methods.

A: Press the numeral key for the No. of the item to be selected.

B: Using the [↓] and [↑] keys, etc., move the cursor to the item to be selected, and then press the [INP] key.

(5) Inputting the origin data




Input the value confirmed in section “(1) Confirming the origin data” on page 20.


The correspondence of the origin data label value and axis to be input is shown in Fig. 2-15.

Fig.2-15 : Correspondence of origin data label and axis

The method for inputting the origin data is explained below. The value shown in Fig. 2-14 will be input as an example.

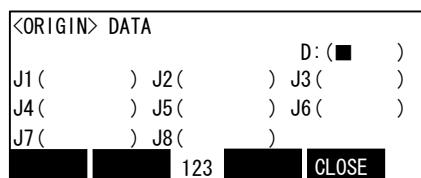

1) Confirm that the cursor is at the “D” position on the T/B display screen.

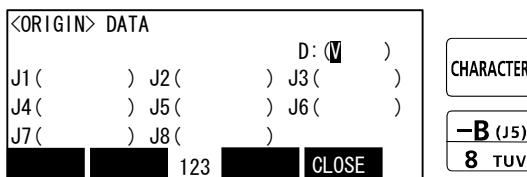


2) Input the D value V!%S29.

Inputting “V”

Press the [VWX] key once while holding down the [CHAR] key. “V” will appear, so release the [CHAR] key. “V” will be set.

Inputting “!”

Press the [%] key three times while holding down the [CHAR] key. “!” will appear, so release the [CHAR] key. “!” will be set.

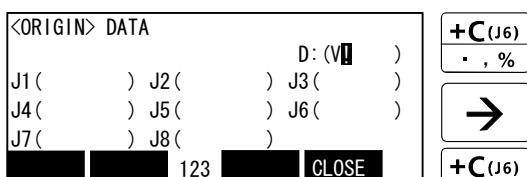

In the same manner, while holding down the [CHAR] key, press the [%] key twice, and the [STU] key once (input “S”).


Release the [CHAR] key, and press the [2] key (input “2”) and then the [9] key (input “9”).

V!%S29 will appear at the “D” data on the teaching pendant screen.


3) Press the [↓] key, and move the cursor to the J1 input position.


4) Input the J1 value in the same manner as above.

5) Input the J2, J3, J4, J5 and J6 values in the same manner.

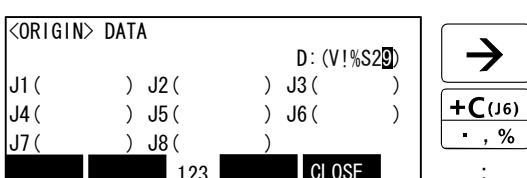


:
:
:

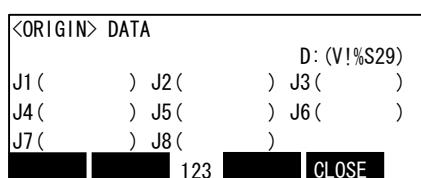

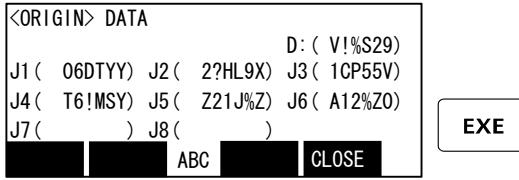

6) After inputting all of the values, press the [EXE] key. The origin setting confirmation screen will appear.

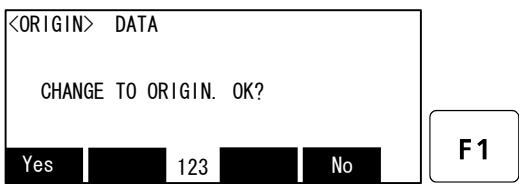

7) Press [F1] to end the origin setting

◆◆◆ Moving the cursor ◆◆◆

Press the [↑], [↓], [←] and [→] keys.

◆◆◆ Inputting characters ◆◆◆

Hold down the [C H A R A C T E R] key and press the key with the character to be input on the lower right. Three characters will scroll each time the character key is pressed.

◆◆◆ Correcting an input ◆◆◆

After returning one character by pressing the [C L E A R] key, input the character again.

(6) Installing the shoulder cover B

Return the shoulder coverB, removed in section “[\(1\) Confirming the origin data](#)” on page 20 to its original position. This completes the setting of the origin with the origin data input method.



WARNING

Always remove and install the cover with the controller power turned OFF. Failure to do so could lead to the robot moving because of incorrect operations, or to physical damage or personal injury.

◆◆◆ If the origin input data is incorrect ◆◆◆

If the origin input data is incorrect, the alarm No. 1760 (origin setting data illegal) will occur when origin data input. In this case, reconfirm the value input for the origin data.

2.5 Confirming the operation

In this section, the robot will be moved manually using the T/B to confirm that the operation is correct. Moving the robot manually is called "jog operation". This operation includes the JOINT jog that moves each axis, the XYZ jog that moves along the base coordinate system, the TOOL jog that moves along the tool coordinate system, and the CYLINDER jog that moves along the circular arc.

This operation is carried out while pressing the deadman switch on the back of the T/B.

⚠ CAUTION

The robot will move during this operation. Make sure that there are no operators near the robot, and that there are no obstacles, such as tools, in the robot operation range.

⚠ CAUTION


To immediately stop the robot, release the deadman switch on the back of the T/B. The servo power will turn OFF, and the robot will stop.

The robot will also stop if the [EMG.STOP] switch (emergency stop switch) on the front of the T/B or the [EMG.STOP] switch (emergency stop) on the front of the controller is pressed.

⚠ WARNING


Confirm that the origin has been set. If the origin has not been set, "****" will appear at the current position display on the teaching pendant, the JOINT jog operation will take place in any jog mode selected.

Refer to "[2.4 Setting the origin](#)" on page 19 for details on setting the origin.

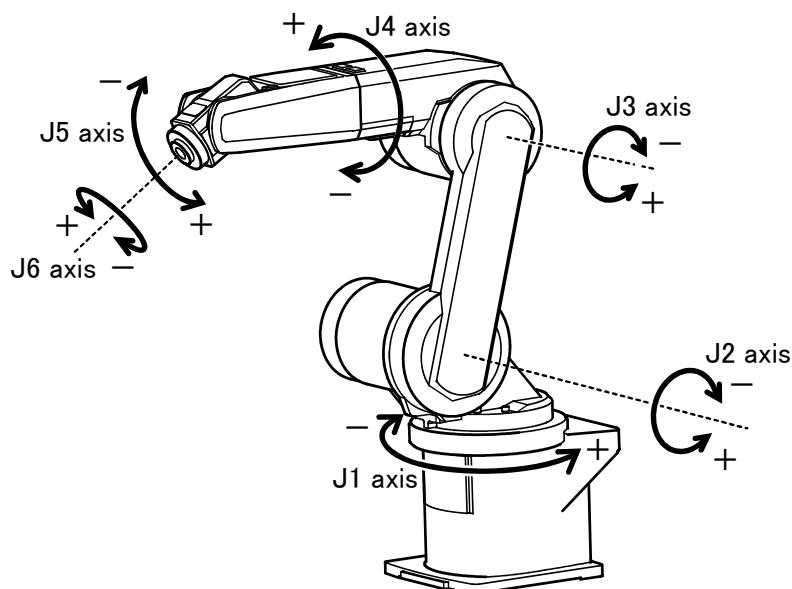


* Each axis moves independently.

Fig.2-16 : JOINT jog operation

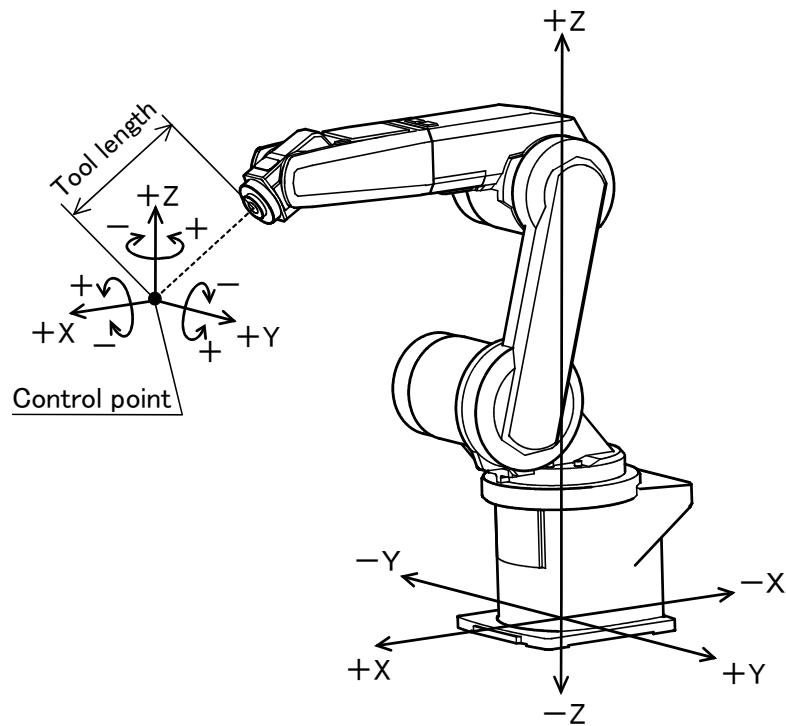


* While maintaining the flange surface posture, the axis moves straight along the base coordinate system.
Also, while maintaining the flange surface position, the flange surface posture changes.

Fig.2-17 : XYZ jog operation

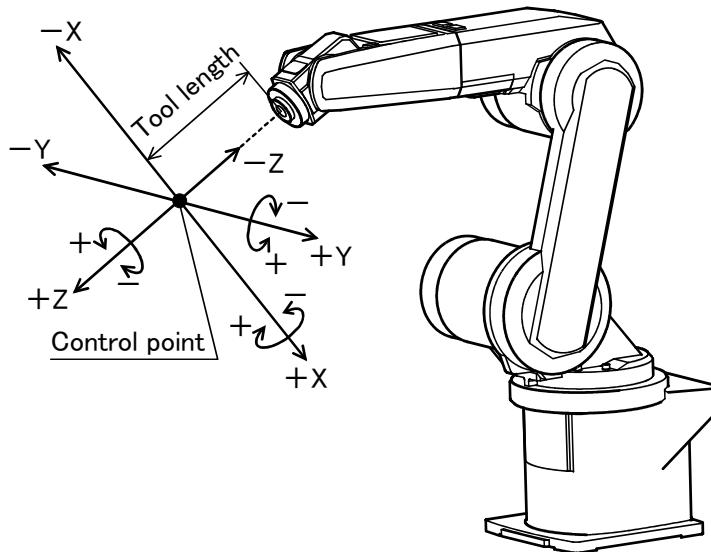

* While maintaining the flange surface posture, the axis moves straight along the tool coordinate system.
Also, while maintaining the flange surface position, the flange surface posture changes.


Fig.2-18 : TOOL jog operation

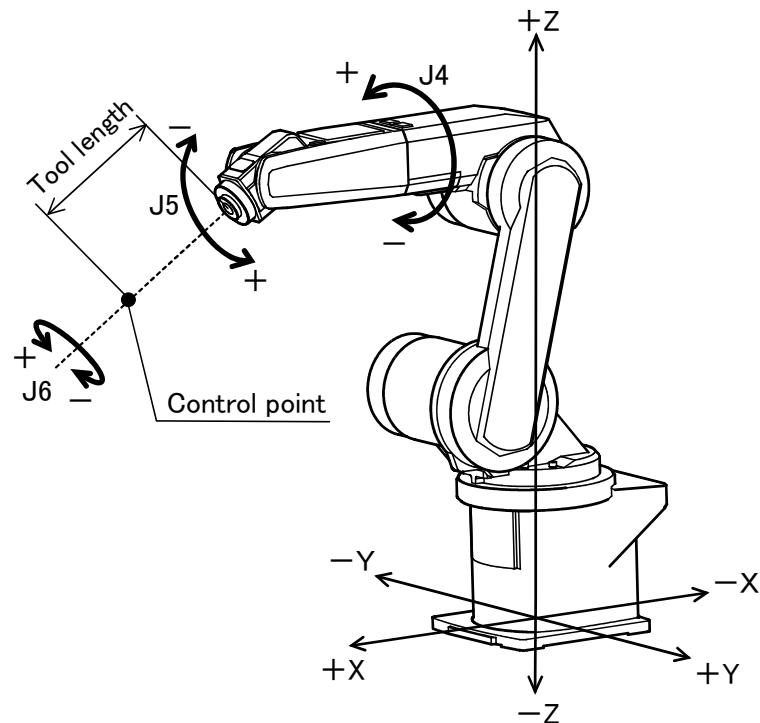

* The axis moves straight along the base coordinate system. At this time, the flange surface posture is not maintained.

Also, the flange surface posture changes. The flange surface position changes at this time.



Fig.2-19 : 3-axis XYZ jog operation

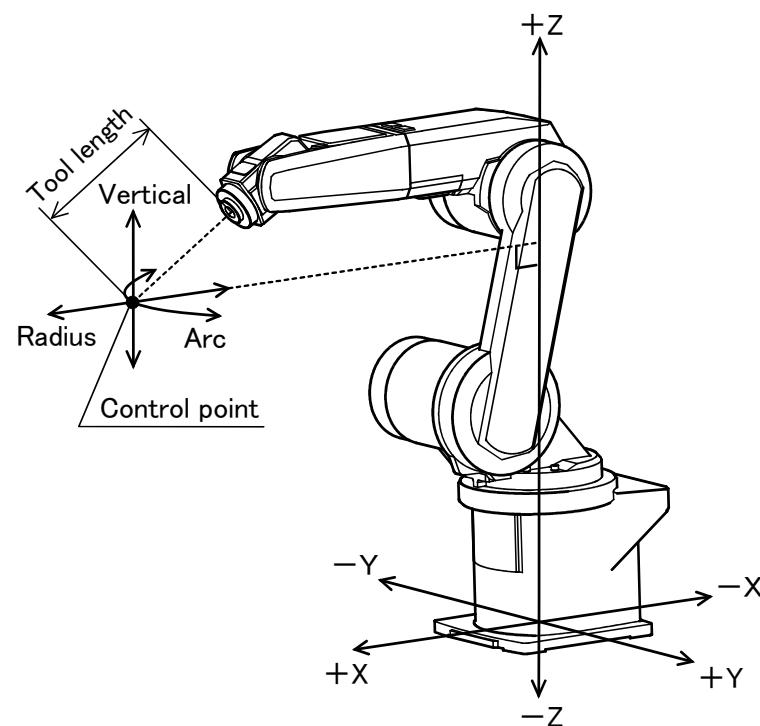

* The current position is set as the arc centering on the Z axis, and the axis moves along that arc, expands and contracts in the radius direction, and moves vertically. At this time, the flange surface posture is maintained. Also, while maintaining the flange surface position, the flange surface posture changes.

Fig.2-20 : CYLINDER jog operation

(1) JOINT jog operation

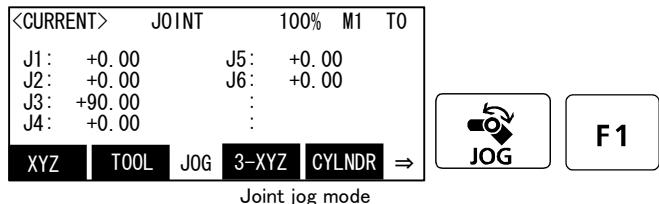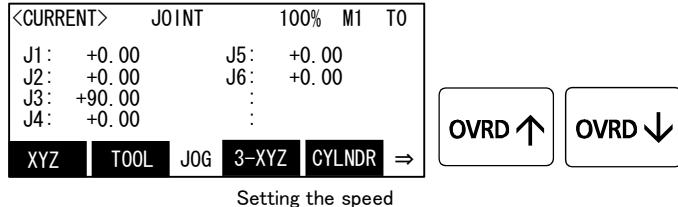Select joint jog modeSet jog speed

[JOG] Press the key and display the jog screen.
("JOG" is displayed on the screen bottom)

Check that the "joint" in jog mode is displayed on the screen.


If other jog modes are displayed, please press the function key corresponding to the "joint." (If the jog mode which he wishes under the screen is not displayed, it is displayed that the [FUNCTION] key is pressed)

If it finishes jog operation, press the [JOG] key again, or function key which correspond to "close."


Whenever it presses the key of [OVRD ↑], the override goes up. Conversely, if the [OVRD ↓] key is pressed, it will go down.

The current setting speed is displayed on screen upper right, and "STATUS NUMBER" of the controller.

Set the override to 10% here for confirmation work

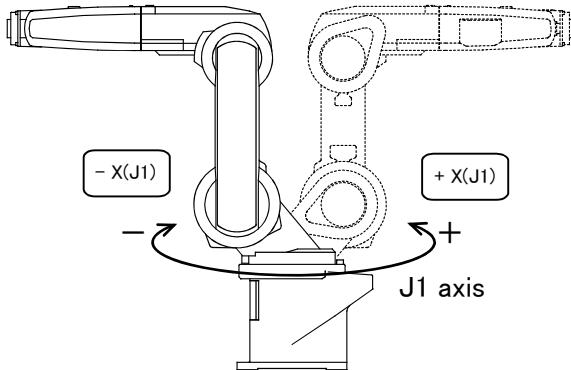J1 axis jog operation

- When the [+X (J1)] keys are pressed, the J1 axis will rotate in the plus direction.
- When the [-X (J1)] keys are pressed, Rotate in the minus direction.

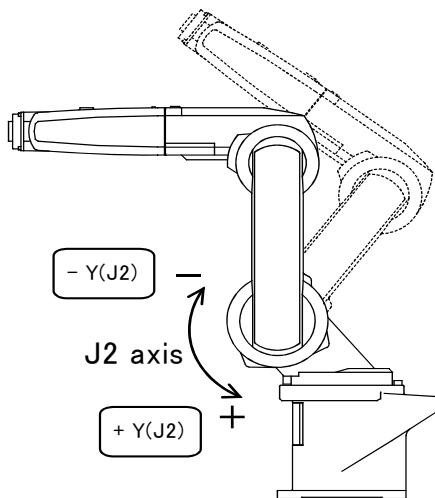
J2 axis jog operation

- When the [+Y (J2)] keys are pressed, the J2 axis will rotate in the plus direction.
- When the [-Y (J2)] keys are pressed, Rotate in the minus direction.

◆◆◆ When the robot is in the transportation posture ◆◆◆


The axes may be outside the movement area. Move these axes toward the inner side of the movement area.

J3 axis jog operation

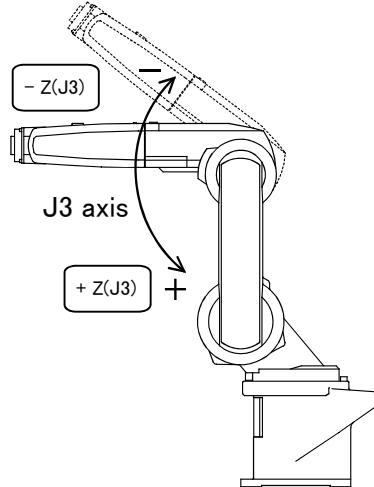

- When the [+Z (J3)] keys are pressed, the J3 axis will rotate in the plus direction.
When the [-Z (J3)] keys are pressed, Rotate in the minus direction.

J4, J5 and J6 axis jog


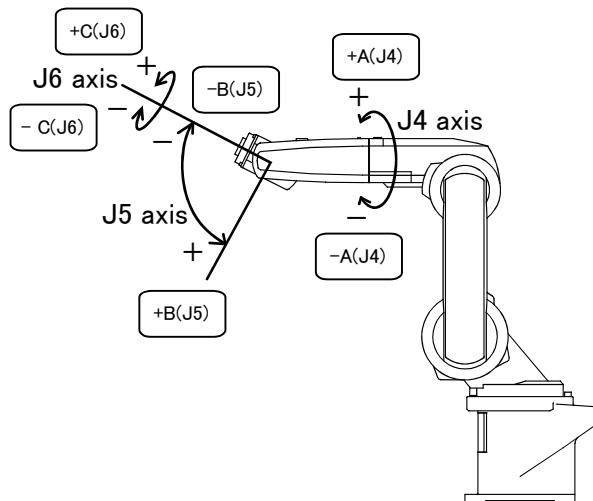


- When the [+A (J4)] keys are pressed, the J4 axis will rotate in the plus direction.
When the [-A (J4)] keys are pressed, Rotate in the minus direction.
- When the [+B (J5)] keys are pressed, the J5 axis will rotate in the plus direction
When the [-B (J5)] keys are pressed, Rotate in the minus direction.
- When the [+C (J6)] keys are pressed, the J6 axis will rotate in the plus direction
When the [-C (J6)] keys are pressed, Rotate in the minus direction.

◆◆◆ If the buzzer of T/B sounds and the robot does not move ◆◆◆

If it is going to move the robot across the operation range, the buzzer of T/B sounds and the robot does not move. In this case, please move to the counter direction.

(2) XYZ jog operation

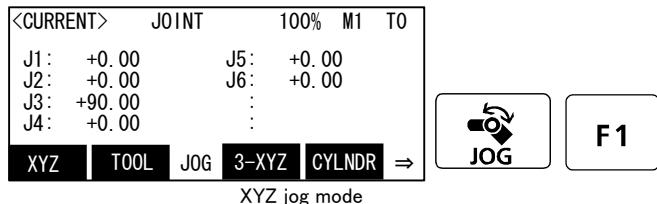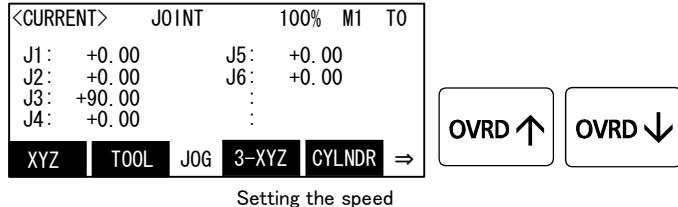Select XYZ jog modeSet jog speed

[JOG] Press the key and display the jog screen.
("JOG" is displayed on the screen bottom)

Check that the "XYZ" in jog mode is displayed on the screen.


If other jog modes are displayed, please press the function key corresponding to the "XYZ." (If the jog mode which he wishes under the screen is not displayed, it is displayed that the [FUNCTION] key is pressed)

If it finishes jog operation, press the [JOG] key again, or function key which correspond to "close."

Whenever it presses the key of [OVRD ↑], the override goes up. Conversely, if the [OVRD ↓] key is pressed, it will go down.

The current setting speed is displayed on screen upper right, and "STATUS NUMBER" of the controller.

Set the override to 10% here for confirmation work

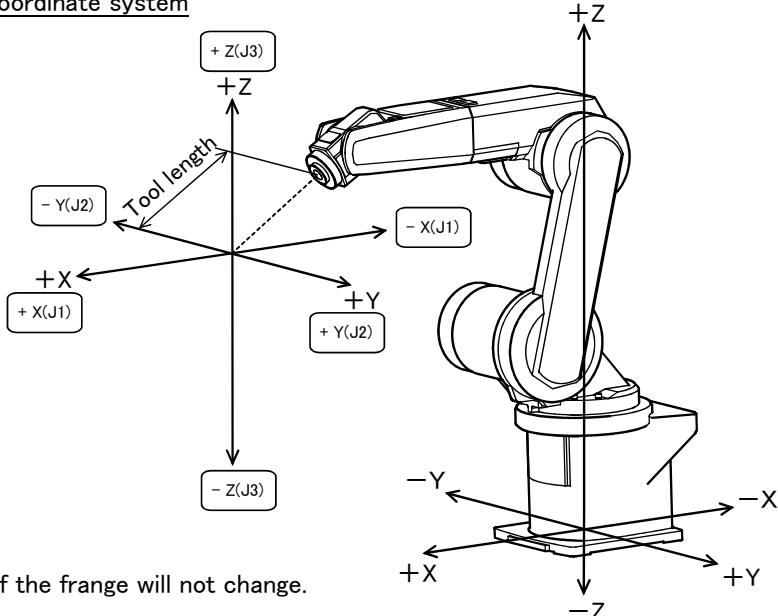Moving along the base coordinate system

* The direction of the frange will not change.

- When the [+X (J1)] keys are pressed, the robot will move along the X axis plus direction.
When the [-X (J1)] keys are pressed, Move along the minus direction.
- When the [+Y (J2)] keys are pressed, the robot will move along the Y axis plus direction.
When the [-Y (J2)] keys are pressed, Move along the minus direction.
- When the [+Z (J3)] keys are pressed, the robot will move along the Z axis plus direction.
When the [-Z (J3)] keys are pressed, Move along the minus direction.


◇◆◇ When the robot is in the transportation posture ◇◆◇

There are directions from which linear movement is not possible from the transportation posture. In this case, the robot will not move. Refer to section "(1) JOINT jog operation" on page 28, and move the robot to a position where linear movement is possible, and then carry out XYZ jog.

◆◆◆ If the buzzer of T/B sounds and the robot does not move ◆◆◆

If it is going to move the robot across the operation range, the buzzer of T/B sounds and the robot does not move. In this case, please move to the counter direction.

Changing the flange surface posture

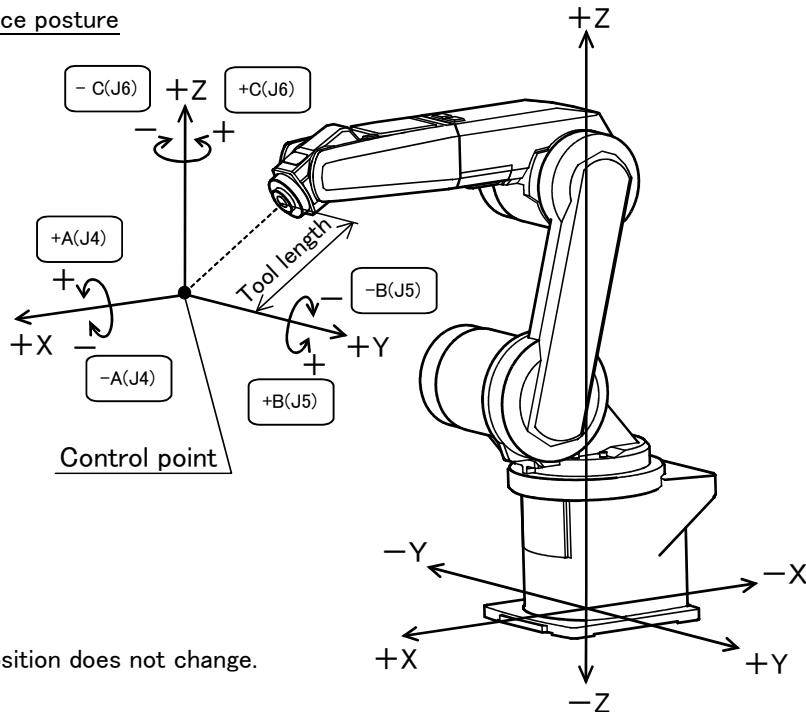

- When the [+A (J4)] keys are pressed, The X axis will rotate in the plus direction.
When the [-A (J4)] keys are pressed, Rotate in the minus direction.
- When the [+B (J5)] keys are pressed, The Y axis will rotate in the plus direction.
When the [-B (J5)] keys are pressed, Rotate in the minus direction.
- When the [+C (J6)] keys are pressed, The Z axis will rotate in the plus direction.
When the [-C (J6)] keys are pressed, Rotate in the minus direction.

◆◆◆ When alarm No. 5150 occurs ◆◆◆


If alarm No. 5150 (ORIGIN NOT SET) occurs, the origin has not been set correctly. Reconfirm the value input for the origin data.

◆◆◆ Tool length ◆◆◆


The default tool length is 0mm, and the control point is the center of the end axis.

After installing the hand, set the correct tool length in the parameters. Refer to the separate manual "Detailed Explanation of Functions and Operations" for details.

(3) TOOL jog operation

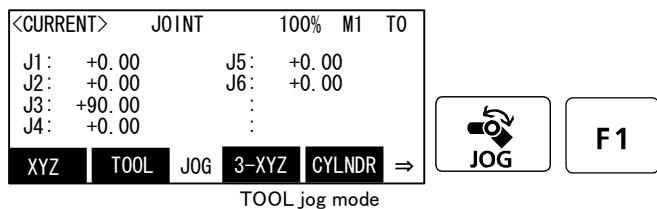Select TOOL jog mode

F1

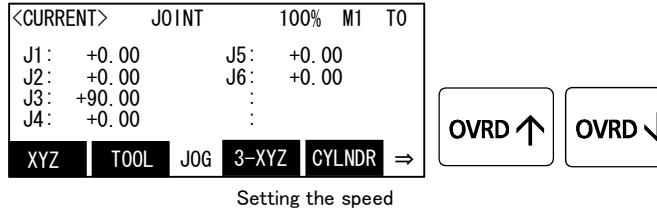Set jog speed

[JOG] Press the key and display the jog screen.
("JOG" is displayed on the screen bottom)

Check that the "TOOL" in jog mode is displayed on the screen.


If other jog modes are displayed, please press the function key corresponding to the "TOOL." (If the jog mode which he wishes under the screen is not displayed, it is displayed that the [FUNCTION] key is pressed)

If it finishes jog operation, press the [JOG] key again, or function key which correspond to "close."

Whenever it presses the key of [OVRD ↑], the override goes up. Conversely, if the [OVRD ↓] key is pressed, it will go down.

The current setting speed is displayed on screen upper right, and "STATUS NUMBER" of the controller.

Set the override to 10% here for confirmation work

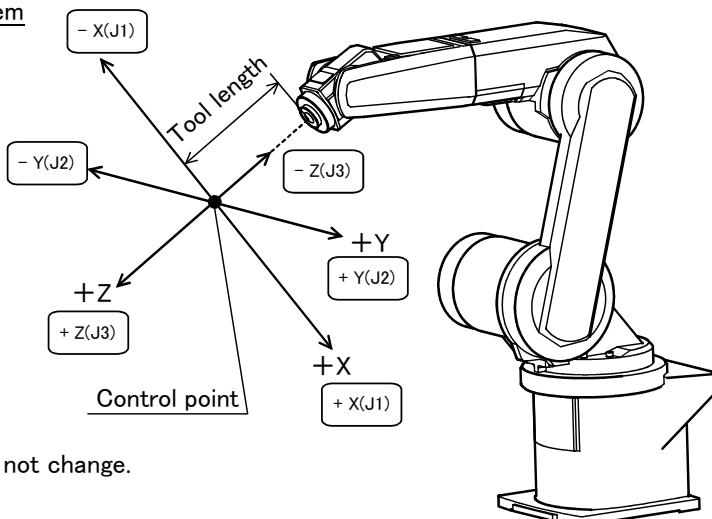Moving along the tool coordinate system

* The direction of the frange will not change.

- When the [+X (J1)] keys are pressed, the robot will move along the X axis plus direction of the tool coordinate system.
- When the [-X (J1)] keys are pressed, Move along the minus direction.
- When the [+Y (J2)] keys are pressed, the robot will move along the Y axis plus direction of the tool coordinate system.
- When the [-Y (J2)] keys are pressed, Move along the minus direction.
- When the [+Z (J3)] keys are pressed, the robot will move along the Z axis plus direction of the tool coordinate system.
- When the [-Z (J3)] keys are pressed, Move along the minus direction.


◇◆◇ When the robot is in the transportation posture ◇◆◇

There are directions from which linear movement is not possible from the transportation posture. In this case, the robot will not move. Refer to section "(1) JOINT jog operation" on page 28", and move the robot to a position where linear movement is possible, and then carry out XYZ jog.

◇◆◇ If the buzzer of T/B sounds and the robot does not move ◇◆◇

If it is going to move the robot across the operation range, the buzzer of T/B sounds and the robot does not move. In this case, please move to the counter direction.

Changing the flange surface posture

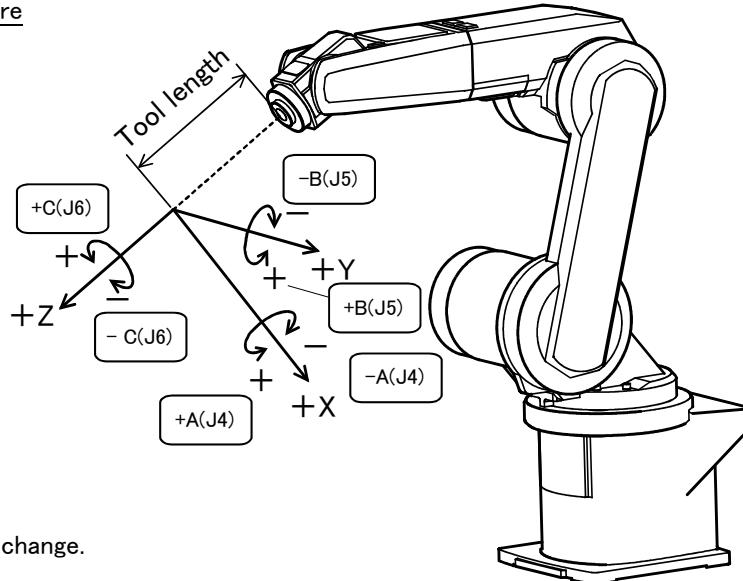

* The flange position does not change.

- When the [+A (J4)] keys are pressed, The X axis will rotate in the plus direction of the tool coordinate system.
When the[-A (J4)] keys are pressed, Rotate in the minus direction.
- When the[+B (J5)] keys are pressed, The Y axis will rotate in the plus direction of the tool coordinate system.
When the[-B (J5)] keys are pressed, Rotate in the minus direction.
- When the[+C (J6)] keys are pressed, The Z axis will rotate in the plus direction of the tool coordinate system.
When the[-C (J6)] keys are pressed, Rotate in the minus direction.

◇◆◇ When alarm No. 5150 occurs ◇◆◇



If alarm No. 5150 (ORIGIN NOT SET) occurs, the origin has not been set correctly. Reconfirm the value input for the origin data.

◇◆◇ Tool length ◇◆◇

The default tool length is 0mm, and the control point is the center of the end axis.

After installing the hand, set the correct tool length in the parameters. Refer to the separate manual "Detailed Explanation of Functions and Operations" for details.

(4) 3-axis XYZ jog operation

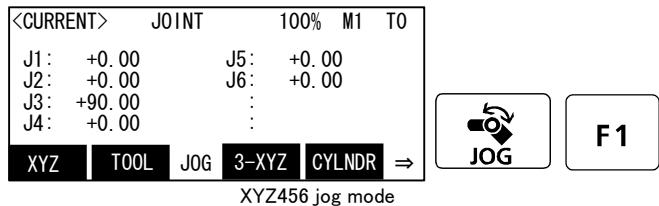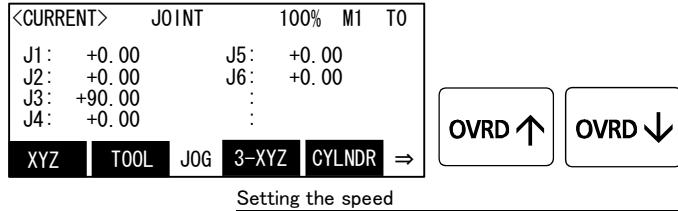Select XYZ456 jog modeSet jog speed

[JOG] Press the key and display the jog screen.
("JOG" is displayed on the screen bottom)

Check that the "XYZ456" in jog mode is displayed on the screen.


If other jog modes are displayed, please press the function key corresponding to the "XYZ456." (If the jog mode which he wishes under the screen is not displayed, it is displayed that the [FUNCTION] key is pressed)

If it finishes jog operation, press the [JOG] key again, or function key which correspond to "close."

Whenever it presses the key of [OVRD ↑], the override goes up. Conversely, if the [OVRD ↓] key is pressed, it will go down.

The current setting speed is displayed on screen upper right, and "STATUS NUMBER" of the controller.

Set the override to 10% here for confirmation work

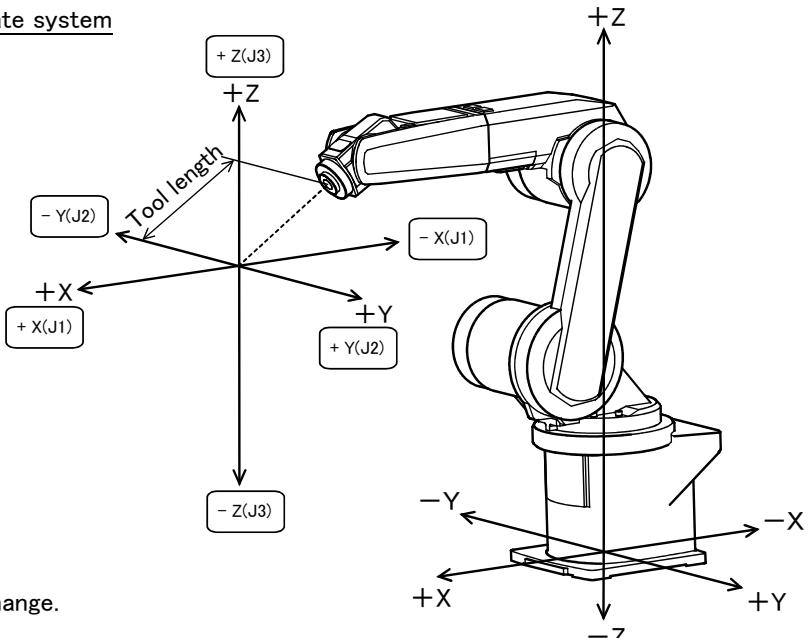Moving along the base coordinate system

* The flange position does change.


- When the [+X (J1)] keys are pressed, the robot will move along the X axis plus direction.
When the [-X (J1)] keys are pressed, Move along the minus direction.
- When the [+Y (J2)] keys are pressed, the robot will move along the Y axis plus direction.
When the [-Y (J2)] keys are pressed, Move along the minus direction.
- When the [+Z (J3)] keys are pressed, the robot will move along the Z axis plus direction.
When the [-Z (J3)] keys are pressed, Move along the minus direction.

◆◆◆ The flange surface end axis posture cannot be maintained with 3-axis XYZ jog. ◆◆◆

With 3-axis XYZ jog, the flange surface end axis posture (orientation) is not maintained when moving linearly in the X, Y or Z axis direction.

Use XYZ jog to maintain the posture.

Changing the flange surface posture

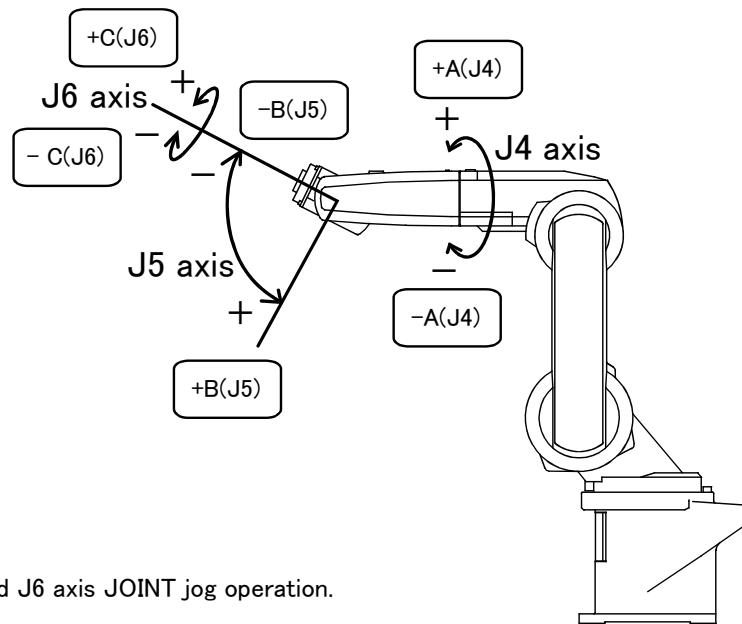

* The flange position changes.

This is the same as the J4, J5 and J6 axis JOINT jog operation.

- When the [+A (J4)] keys are pressed, the J4-axis will rotate in the plus direction.
When the [-A (J4)] keys are pressed, Rotate in the minus direction.
- When the [+B (J5)] keys are pressed, the J5-axis will rotate in the plus direction.
When the [-B (J5)] keys are pressed, Rotate in the minus direction.
- When the [+C (J6)] keys are pressed, the J6-axis will rotate in the plus direction.
When the [-C (J6)] keys are pressed, Rotate in the minus direction.


(5) CYLINDER jog operation

Select cylindrical jog mode

<CURRENT> JOINT 100% M1 T0
 J1: +0.00 J5: +0.00
 J2: +0.00 J6: +0.00
 J3: +90.00 :
 J4: +0.00 :
 XYZ TOOL JOG 3-XYZ CYLNDR ⇒
 CYLINDER jog mode

Set jog speed

<CURRENT> JOINT 100% M1 T0
 J1: +0.00 J5: +0.00
 J2: +0.00 J6: +0.00
 J3: +90.00 :
 J4: +0.00 :
 XYZ TOOL JOG 3-XYZ CYLNDR ⇒
 Setting the speed



[JOG] Press the key and display the jog screen.

("JOG" is displayed on the screen bottom)

Check that the "CYLINDER" in jog mode is displayed on the screen.


If other jog modes are displayed, please press the function key corresponding to the "CYLINDER." (If the jog mode which he wishes under the screen is not displayed, it is displayed that the [FUNCTION] key is pressed)

If it finishes jog operation, press the [JOG] key again, or function key which correspond to "close."

Whenever it presses the key of [OVRD ↑], the override goes up. Conversely, if the [OVRD ↓] key is pressed, it will go down.

The current setting speed is displayed on screen upper right, and "STATUS NUMBER" of the controller.


Set the override to 10% here for confirmation work

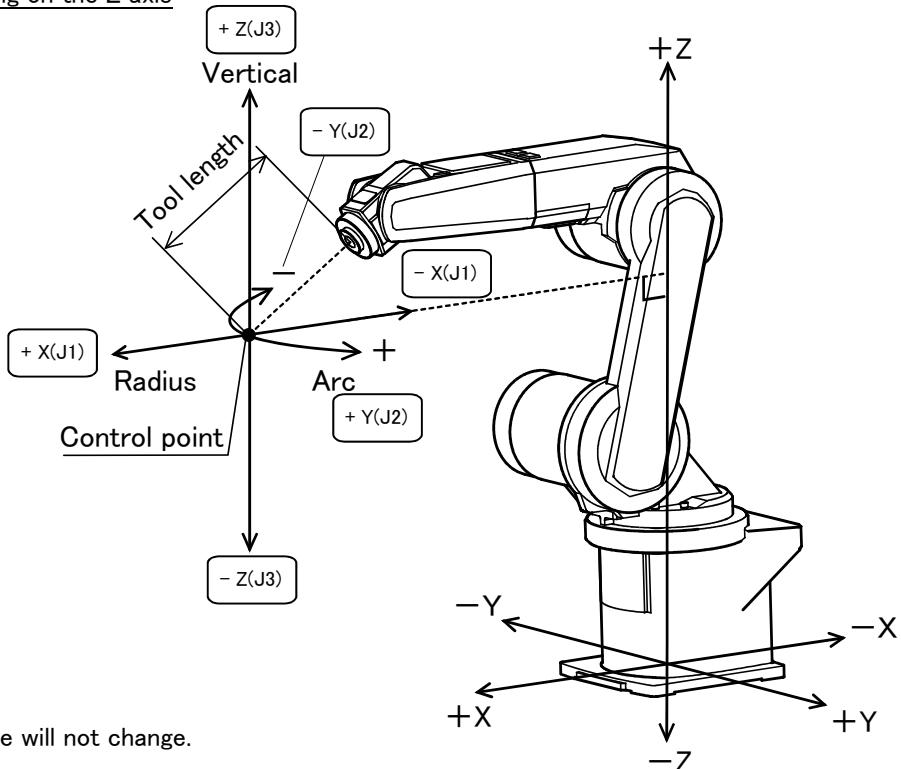Moving along an arc centering on the Z axis

* The direction of the frange will not change.

Assuming that the current position is on an arc centering on the Z axis, the robot moves along that arc.

- When the [+Y (J2)] keys are pressed, the robot will move along the arc in the plus direction.
When the [-Y (J2)] keys are pressed, Move in the minus direction.
- When the [+X (J1)] keys are pressed, the robot will expand in the radial direction.
When the [-X (J1)] keys are pressed, Contract in the radial direction.
- When the [+Z (J3)] keys are pressed, the robot will move along the Z axis plus direction.
When the [-Z (J3)] keys are pressed, Move along the minus direction.

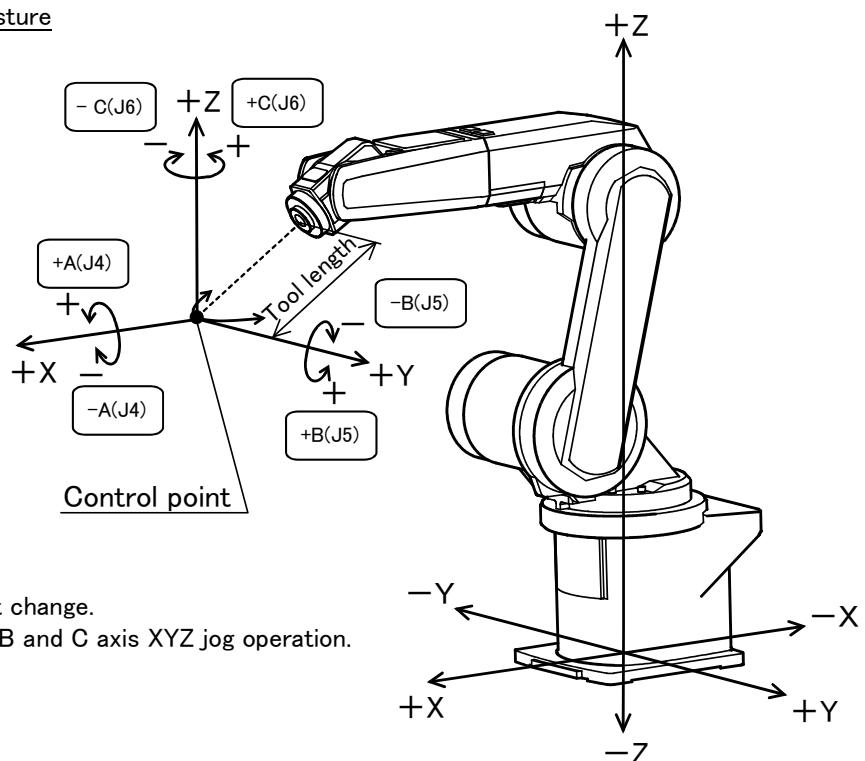Changing the flange surface posture

- * The flange position does not change.
This is the same as the A, B and C axis XYZ jog operation.

- When the [+A (J4)] keys are pressed, The X axis will rotate in the plus direction.
When the [-A (J4)] keys are pressed, Rotate in the minus direction.
- When the [+B (J5)] keys are pressed, The Y axis will rotate in the plus direction.
When the [-B (J5)] keys are pressed, Rotate in the minus direction.
- When the [+C (J6)] keys are pressed, The Z axis will rotate in the plus direction.
When the [-C (J6)] keys are pressed, Rotates in the minus direction.

1 Installing the option devices

1.1 Installing the solenoid valve set (1S-VD01-02/VD02-02/VD03-02/VD04-02)

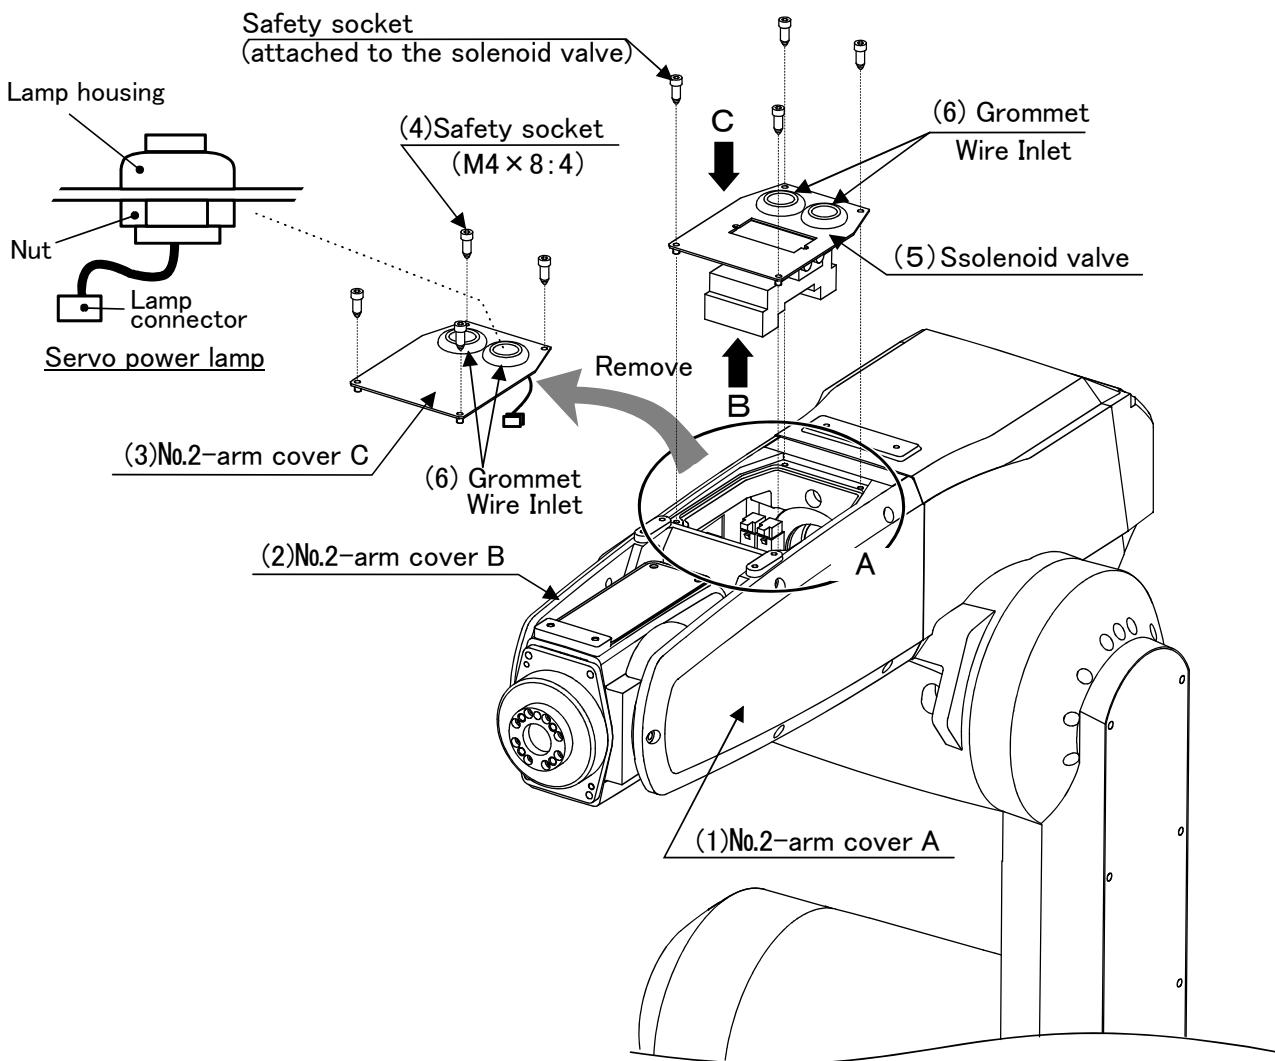


Fig.1-1 : Solenoid valve installation procedures

[Fig. 1-1](#) and [Fig. 1-2](#) shows the solenoid valve installation procedures and the solenoid valve connector connection procedures. The installation procedures are as follow. This work must be carried out with the controller power turned OFF.

- 1) Refer to "[1.3.2 Installing/removing the cover](#)" on page 53 and remove the No. 2 arm cover B <2>, and the No. 2 arm cover C <2>. The servo power indicator lamp is installed in the cover No. 2 arm cover C <2>. Disconnect the LAMP connector.
- 2) If you are not using the spare line (ADD: stored in a coil) in section A shown in [Fig. 1-1](#), remove it. The spare line is connected to a connector inside section A.

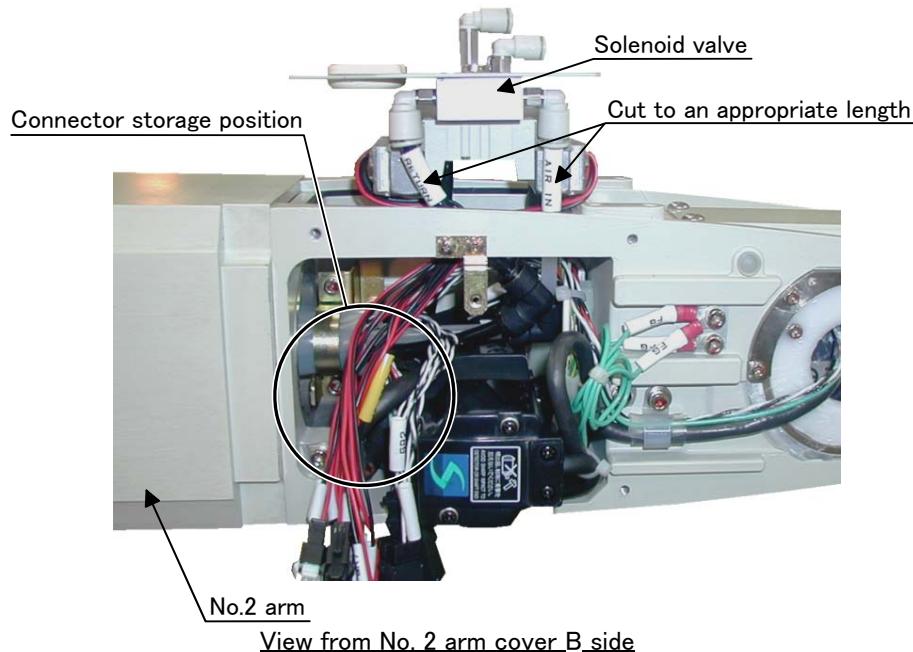


Fig.1-2 : Solenoid valve installation diagram details 1

- 3) Remove the nut and remove the servo power indicator lamp. O ring is inserted for the lamp and the cover. Since it uses at re-installation, don't lose.
- 4) Remove the D side between the two grommets installed in the solenoid valve. Remove the seal material which remained in the hole section of the metal plate.
- 5) Install the servo power indicator lamp in the hole which removed the grommet of the solenoid valve side. Put in O ring in between and fix securely with the nut. Take care that O ring not bites.
- 6) The length of the two air hoses (ϕ 6) stored in section A is longer than necessary by assuming the use of a solenoid valve set not manufactured by Mitsubishi. Cut off the air hoses to an appropriate length, and connect them to the couplings.
- 7) Of the two air hoses (ϕ 6), the one marked with "AIR IN" is for connecting the quick coupling (P port) <6> of the solenoid valves, and the other marked with "RETURN" is for connecting the quick coupling (R port) <7> of the solenoid valves. If you use the joint of "RETURN" on the base of robot, remove the cap for protection against dust. If it uses attached, exhaust pressure increases and the solenoid valve may not operate normally. And, the hose can be connected to this joint and the exhaust can be drawn.
- 8) Using the screw holes of the No. 2 arm cover C <3>, mount the solenoid valves with the socket bolts (four M4 x 8) attached to the solenoid valves. When mounting the solenoid valves, be careful not to damage the sponge sealing material attached to the opening of section A. If the sealing material is damaged, it may degrade the protection specification.
- 9) Connect the connectors of "GR1" and "GR2" stored in section A to the connectors of "GR1" and "GR2" coming out of the solenoid valves. Store the connectors near the location marked with O shown in Fig. 1-2.
- 10) Connect the "LAMP" connector of the servo power lamp to the "LAMP" connector in the fore arm.

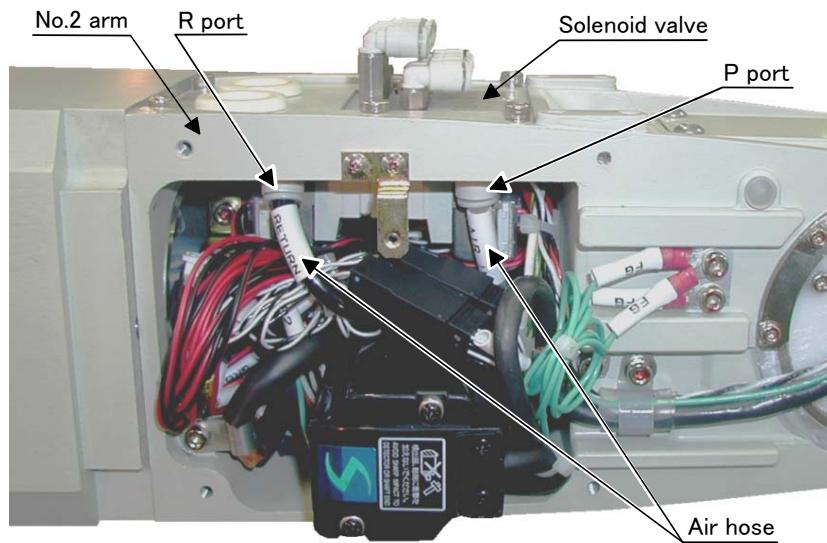


Fig.1-3 : Solenoid valve installation diagram details 2

- 11) When you have completed the installation, reinstall the No.2 arm cover B <2> to its original position, and be careful not to entangle the cables when you do so.

The connections after the installation appear as in [Table 1-1](#) for single type valves, hand 2 is not applicable.

Table 1-1 : Solenoid valve ports and hoses: Correspondence of couplings and hand ports

Hand	Hand port	Solenoid valve port	Solenoid valve used
Hand 1	OPEN	1	First set
	CLOSE	2	
Hand 2	OPEN	3	Second set
	CLOSE	4	
Hand 3	OPEN	5	Third set
	CLOSE	6	
Hand 4	OPEN	7	Fourth set
	CLOSE	8	

1.2 Installing the hand input cable

The procedure for installing the hand input cable is as follows. Conduct work by referring to “[Fig. 1-1Solenoid valve installation procedures](#)” on page 38 and “[Fig. 1-4Installing the hand input cable](#)” on page 41 below. This work must be carried out with the controller power turned OFF.

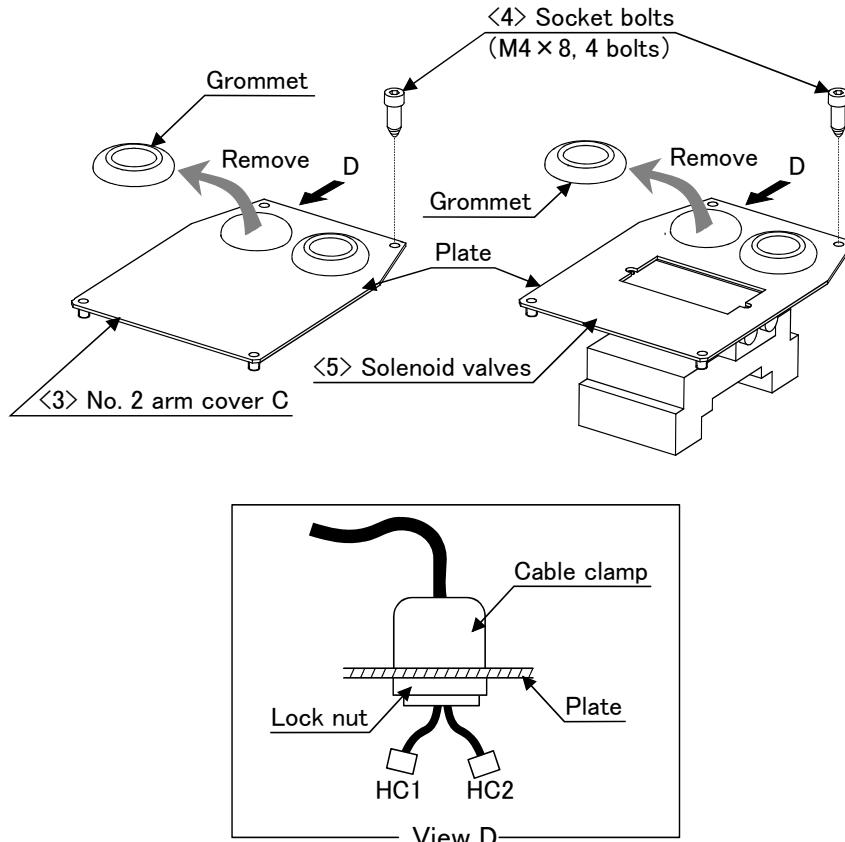


Fig.1-4 : Installing the hand input cable

- 1) Refer to “[1.3.2Installing/removing the cover](#)” on page 53 and remove the No. 2 arm cover B <2>, and the No. 2 arm cover C <3> or the solenoid valves <5>.
- 2) If you are not using the spare line (ADD: stored in a coil) in section A shown in [Fig. 1-1](#), remove it. The spare line is connected to a connector inside section A.
- 3) The hand input cable can be fixed to either the No. 2 arm cover C <3> or the solenoid valves <5>.
- 4) Remove one of the two grommets on either the No. 2 arm cover C <3> or the solenoid valves <5>. After removing the grommet, peal off the sealing material left on the hole section of the plate.
- 5) After removing the lock nut attached to the hand input cable, feed the connector side of the hand input cable (with a cable clamp) through the hole on the plate. Replace the removed lock nut in position and fasten it securely.
- 6) Connect the connectors of “HC1” and “HC2” stored in section A shown in [Fig. 1-1](#) to “HC1” and “HC2” of the hand input cable.
- 7) Mount the No. 2 arm cover C <3> or the solenoid valves <5> to section A shown in [Fig. 1-1](#). When mounting, be careful not to damage the sponge sealing material attached to the opening of section A. If it is damaged, the protection performance may be lowered.
- 8) When you have completed the installation, reinstall the No.2 arm cover B <2> to its original position, and be careful not to entangle the cables when you do so.

1.3 Installing the hand output cable

The procedure for installing the hand output cable is as follows. Conduct work by referring to “[Fig. 1-1Solenoid valve installation procedures](#)” on page 38 and “[Fig. 1-5Installing the hand output cable](#)” on page 42 below. This work must be carried out with the controller power turned OFF.

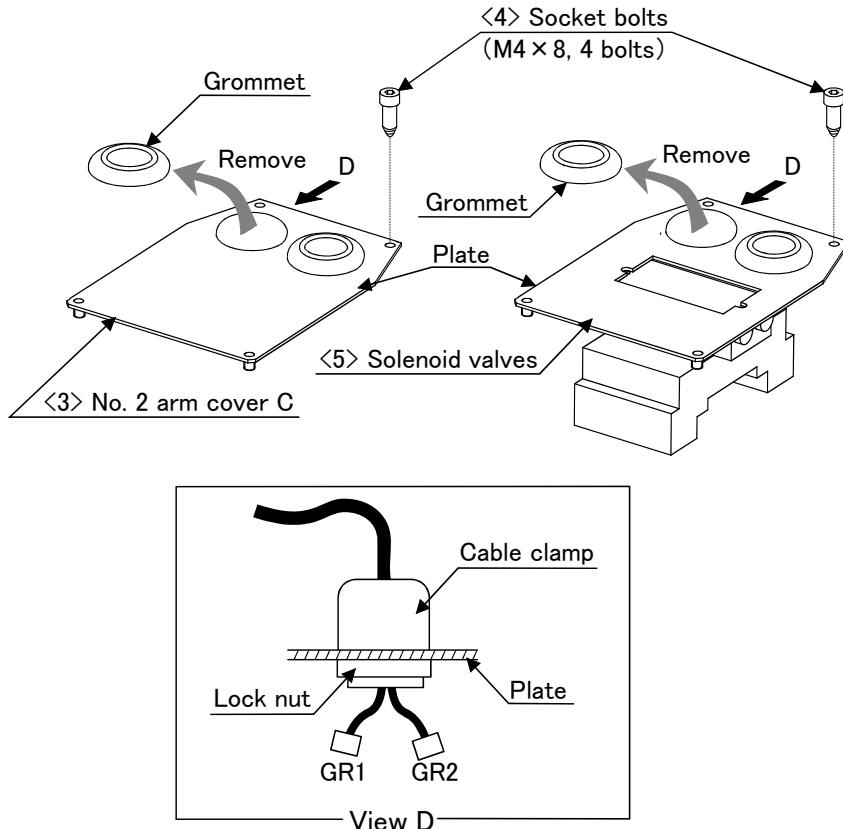


Fig.1-5 : Installing the hand output cable

- 1) Refer to “[1.3.2Installing/removing the cover](#)” on page 53 and remove the No. 2 arm cover B <2>, and the No. 2 arm cover C <3> or the solenoid valves <5>.
- 2) If you are not using the spare line (ADD: stored in a coil) in section A shown in [Fig. 1-1](#), remove it. The spare line is connected to a connector inside section A.
- 3) The hand output cable can be fixed to either the No. 2 arm cover C <3> or the solenoid valves <5>. (attached to the solenoid valve set)
- 4) Remove one of the two grommets on either the No. 2 arm cover C <3> or the solenoid valves <5>. After removing the grommet, peel off the sealing material left on the hole section of the plate.
- 5) After removing the lock nut attached to the hand output cable, feed the connector side of the hand output cable (with a cable clamp) through the hole on the plate. Replace the removed lock nut in position and fasten it securely.
- 6) Connect the connectors of “GR1” and “GR2” stored in section A shown in [Fig. 1-1](#) to “GR1” and “GR2” of the hand output cable.
- 7) Mount the No. 2 arm cover C <3> or the solenoid valves <5> to section A shown in [Fig. 1-1](#). When mounting, be careful not to damage the sponge sealing material attached to the opening of section A. If it is damaged, the protection performance may be lowered.
- 8) When you have completed the installation, reinstall the No.2 arm cover B <2> to its original position, and be careful not to entangle the cables when you do so.

1.4 Changing the operating range

1.4.1 J1 axis

The operating range of the J1 axis can be changed to the range shown in [Table 1-2](#). (Option)

[Table 1-2 : Operating range alternative range](#)

Axis		Standard	Alternative angle				
J 1	+side	Angle	+170	+135	+90	+45	One of the points shown on the left
		Insertion position	None	A	B	C	
	-side	Angle	-170	-135	-90	-45	One of the points shown on the left
		Insertion position	None	a	b	c	

Note) The insertion position given in the table indicates the insertion position for the operating range change stopper. (Refer to [Fig. 1-6](#).)


The operating range is changed with robot arm settings and parameter settings.

(1) Setting the robot arm



- 1) Move the upper arm to the posture as shown in [Fig. 1-6](#) by jog operation.
- 2) Turn OFF the controller power.
- 3) By referring to [Table 1-2](#) and [Fig. 1-6](#), insert the two stoppers (M10 x 20) used to change the movement range of J1 axis at the angular position to be changed, and fix securely by applying a clamping torque of 70 N · m to 86 N · m.



Do not remove the stopper for the standard specification of ± 170 degree shown in [Fig. 1-6](#).

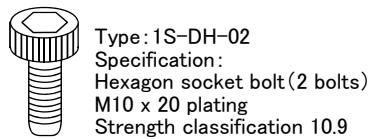

Detail of the stopper used to change the operating range of the J1 axis

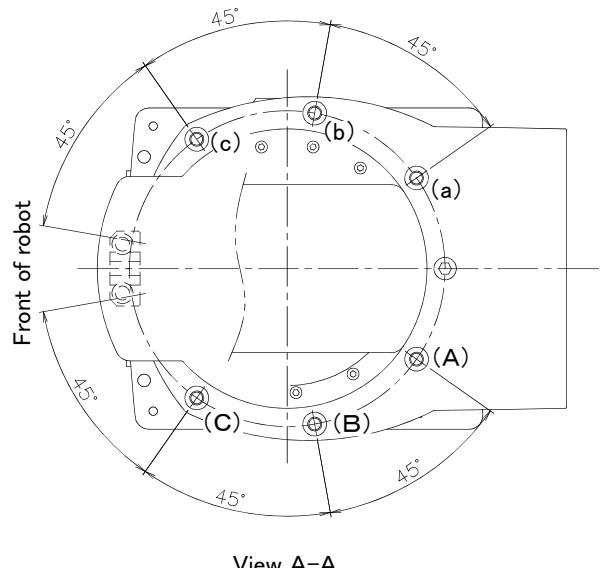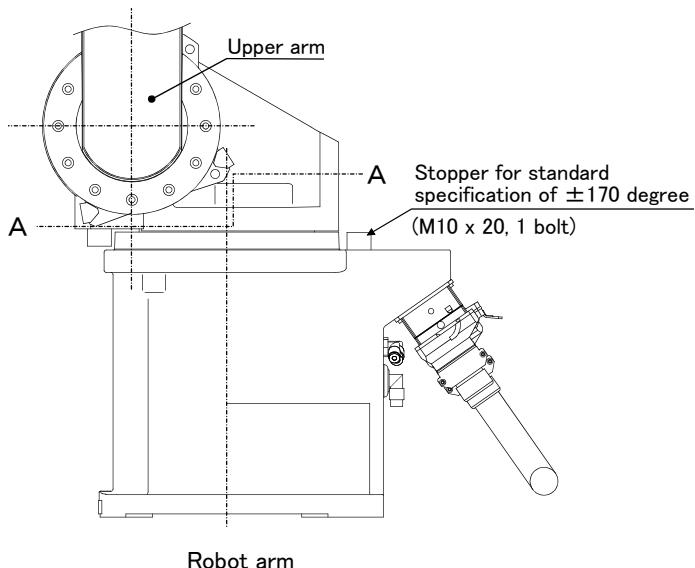

[Fig.1-6 : Installation of operating range change option](#)

(2) Setting the parameters

- 1) Change the values of the first element (J1 axis minus side) and second element (J1 axis plus side) of the joint operating range parameter MEJAR. Set the value to the angle corresponding to the position where the operating range change stopper was inserted in "[\(1\)Setting the robot arm](#)" above. Refer to the separate "Instruction Manual/Detailed Explanation of Functions and Operations" for details on changing the parameter.
- 2) When completed changing the parameters, turn the controller power OFF and ON. Move the waist axis to the operating range limit with JOINT jog operation, and confirm that the limit over occurs and the robot stops at the angle changed for both the +/- sides.

This completes setting the parameters and the changing of the operating range.

1.4.2 J2 and J3 axis

The operating range of the J2 and J3 axis can be changed to the range shown in [Table 1-2](#). (Option)

Table 1-3 : Operating range alternative range

Axis		Standard	Alternative angle	Remarks		
J2	-side	Angle	-92	-30		
J3	-side	Angle	-107	+3		
			-129	-19		
				RV-6SD-SUL/6SDC-SUL series		
				RV-6SDL-SUL/6SDLC-SUL series		

The operating range is changed with robot arm settings and parameter settings.

(1) Setting the robot arm

- 1) Tilt the robot arm with a crane until the bottom of the base is visible as shown in [Fig. 1-6](#).
- 2) Turn OFF the controller power.
- 3) Install the stopper with reference to the "[Fig.1-8 : Installation of stopper](#)" corresponding to the axis.
For J2 axis: Install the stopper of J2 axis with one bolt (M10 x 20) surely
Bolting torque is 70 to 86 Nm.
For J3 axis: Install the stopper of J3 axis with two bolts (M5 x 20) surely
Bolting torque is 8.6 to 10 Nm.



When transporting the robots, such as change of the installation location, always remove the stopper.

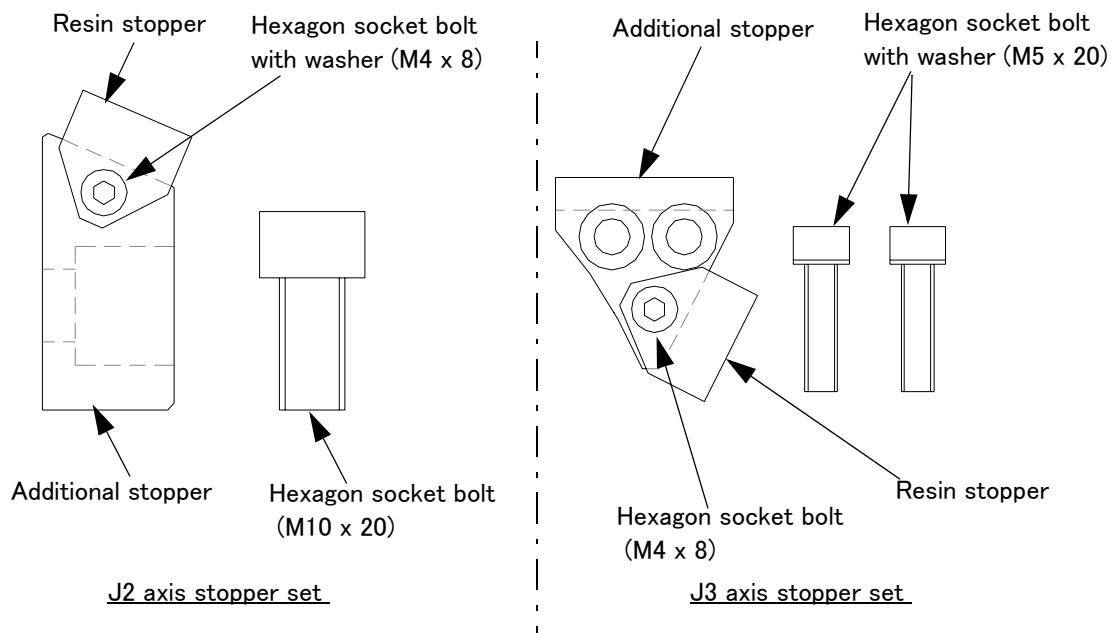


Fig.1-7 : Stopper set

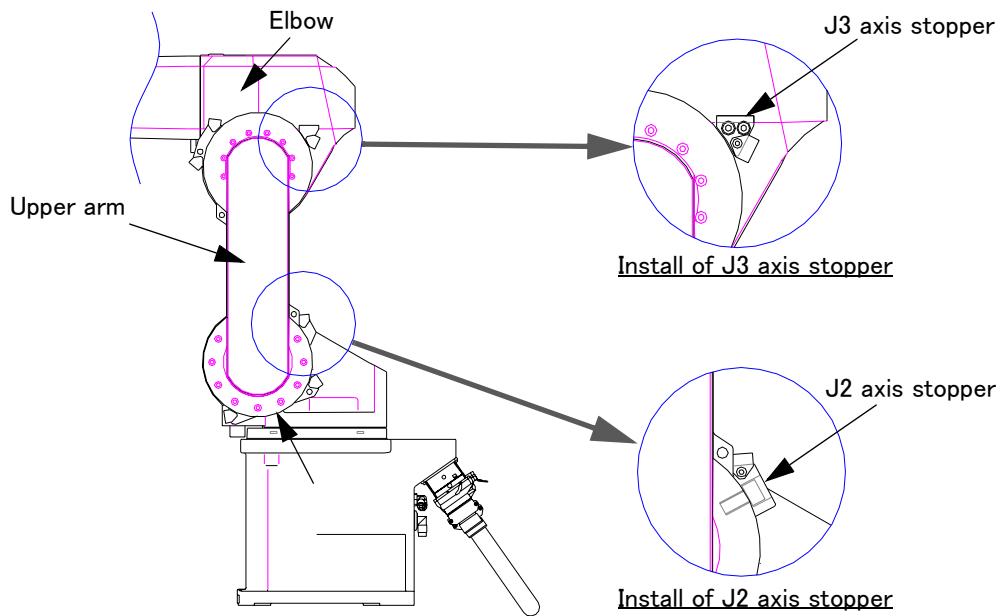


Fig.1-8 : Installation of stopper

(2) Setting the parameters

- 1) Change the values of 3rd element (J2 axis minus side) to change the J2 axis, or 5th element (J3 axis minus side) to change the J3 axis of the parameter: MEJR. Set the value to the angle corresponding to the position where the operating range change stopper was installed in "[\(1\)Setting the robot arm](#)" above. Refer to the separate "Instruction Manual/Detailed Explanation of Functions and Operations" for details on changing the parameter.
- 2) When completed changing the parameters, turn the controller power OFF and ON. Move the changed axis to the operating range limit with JOINT jog operation, and confirm that the limit over occurs and the robot stops at the angle changed for both the +/- sides.

This completes setting the parameters and the changing of the operating range.

1 Basic operations

The basic operations from creating the program to automatic operation are explained in section "4. Basic operations" in the "From Controller Setup to Maintenance" manual. Refer that manual as necessary.

1 Maintenance and Inspection

The maintenance and inspection procedures to be carried out to use the robot for a long time without trouble are described in this chapter. The types and replacement methods of consumable parts are also explained.

1.1 Maintenance and inspection interval

Maintenance and inspection are divided into the inspections carried out daily, and the periodic inspections carry out at set intervals. Always carry these out to prevent unforeseen trouble, to maintain the product for a long time, and to secure safety.

(1) Inspection schedule

In addition to the monthly inspection, add the following inspection items every three months (estimated at 500 Hr operation hours).

Operating time		Daily inspection			
0 Hr		Monthly inspection			
500 Hr		Monthly inspection	3-month inspection		
1,000 Hr		Monthly inspection	3-month inspection	6-month inspection	
1,500 Hr		Monthly inspection	3-month inspection		
2,000 Hr		Monthly inspection	3-month inspection	6-month inspection	Yearly inspection
6,000 Hr		Monthly inspection	3-month inspection	6-month inspection	Yearly inspection
					3-year inspection

⟨Guideline for inspection period⟩

For one shift

$$8 \text{ Hr/day} \times 20 \text{ days/month} \times 3 \text{ months} = \text{approx. } 500 \text{ Hr}$$

$$10 \text{ Hr/day} \times 20 \text{ days/month} \times 3 \text{ months} = \text{approx. } 600 \text{ Hr}$$

For two shifts

$$15 \text{ Hr/day} \times 20 \text{ days/month} \times 3 \text{ months} = \text{approx. } 1000 \text{ Hr}$$

[Caution] When using two lines, the 3-month inspection, 6-month inspection and yearly inspection must be carried out when half the time has passed.

Fig.1-1 : Inspection schedule

1.2 Inspection items

The inspection items for the robot arm are shown below.

Also refer to section "5. Maintenance and inspection" in the "Controller setup, basic operation, and maintenance" manual, and inspect the controller.

1.2.1 Daily inspection items

Carry out the daily inspections with the procedures given in [Table 1-1](#).

Table 1-1 : Daily inspection items (details)

Procedure	Inspection item (details)	Remedies
Before turning power ON (Check the following items before turning the power ON.)		
1	Are any of the robot installation bolts loose? (Visual)	Securely tighten the bolts.
2	Are any of the cover tightening screws loose? (Visual)	Securely tighten the screws.
3	Are any of the hand installation bolts loose? (Visual)	Securely tighten the bolts
4	Is the power supply cable securely connected? (Visual)	Securely connect.
5	Is the machine cable between the robot and controller securely connected? (Visual)	Securely connect.
6	Are there any cracks, foreign contamination or obstacles on the robot and controller cover?	Replace with a new part, or take remedial measures.
7	Is any grease leaking from the robot arm? (Visual)	After cleaning, replenish the grease.
8	Is there any abnormality in the pneumatic system? Are there any air leaks, drain clogging or hose damage? Is the air source normal? (Visual)	Drain the drainage, and remedy the air leaks (replace the part).
After turning the power ON (Turn the power ON while monitoring the robot.)		
1	Is there any abnormal motion or abnormal noise when the power is turned ON?	Follow the troubleshooting section.
During operation (try running with an original program)		
1	Check whether the movement points are deviated? Check the following points if there is any deviation. 1. Are any installation bolts loose? 2. Are any hand installation section bolts loose? 3. Are the positions of the jigs other than the robot deviated? 4. If the positional deviation cannot be corrected, refer to "Troubleshooting", check and remedy.	Follow the troubleshooting section.
2	Is there any abnormal motion or abnormal noise? (Visual)	Follow the troubleshooting section.

1.2.2 Periodic inspection

Carry out periodic inspection with the procedures given in [Table 1–2](#).

Table 1–2 : Periodic inspection items (details)

Procedure	Inspection item (details)	Remedies
Monthly inspection items		
1	Are any of the bolts or screws on the robot arm loose?	Securely tighten the bolts.
2	Are any of the connector fixing screws or terminal block terminal screws loose?	Securely tighten the screws.
3	Remove the cover at each section, and check the cables for wear damage and adherence of foreign matter.	Check and eliminate the cause. If the cables are severely damaged, contact the Mitsubishi Service Department.
3-month inspection items		
1	Is the timing belt tension abnormal?	If the timing belt is loose or too tense, adjust it.
6-month inspection items		
1	Is the friction at the timing belt teeth severe?	If the teeth are missing or severe friction is found, replace the timing belt.
Yearly inspection items		
1	Replace the backup battery in the robot arm.	Exchange it referring to "1.3.6Replacing the backup battery" on page 61 .
3-year inspection items		
1	Lubricate the grease at the harmonic reduction gears for each axis.	Lubricate it referring to "1.3.4Lubrication" on page 58 .

1.3 Maintenance and inspection procedures

The procedures for carrying out the periodic maintenance and inspection are described in this section. Thoroughly read the contents, and follow the instructions. This work can be commissioned to the Mitsubishi Service Department for a fee. (Never disassemble, etc., the parts not described in this manual.)

The maintenance parts, etc., required for the customer to carry out maintenance and inspection are described in “[1.4 Maintenance parts](#)” on page 63 of this manual. Always contact your dealer when parts are needed.



CAUTION

The origin of the machine system could deviate when this work is carried out.
“Review of the position data” and “re-teaching” will be required.

1.3.1 Robot arm structure

An outline structure drawing is shown in [..](#). Each part is as shown below.

- 1) The J1 axis rotation is driven by the J1 axis motor <1> and reduction gears <2> arranged in the base.
Non-excitation magnetic brakes are mounted in the J1 axis motor <1>.
- 2) The J2 axis rotation is driven by the J2 axis motor <3> and reduction gears <4> arranged in the shoulder.
Non-excitation magnetic brakes are mounted in the J2 axis motor <3>.
- 3) The J3 axis rotation is driven by the J3 axis motor <5> and reduction gears <6> arranged in the shoulder.
Non-excitation magnetic brakes are mounted in the J3 axis motor <5>.
- 4) The J4 axis rotation is driven by the J4 axis motor <7> and reduction gears <8> arranged in the elbow block.
Non-excitation magnetic brakes are mounted in the J4 axis motor <7>.
- 5) The rotation of the J5 axis motor <9> arranged in the forearm is conveyed to the reduction gears <11> via the timing belt <10> to rotate the wrist housing and following parts.
Non-excitation magnetic brakes are mounted in the J5 axis motor <9>.
- 6) The rotation of the J6 axis is driven by the J6 axis motor <12> arranged in the wrist housing and the reduction gears <13>.
Non-excitation magnetic brakes are mounted in the J6 axis motor <12>.

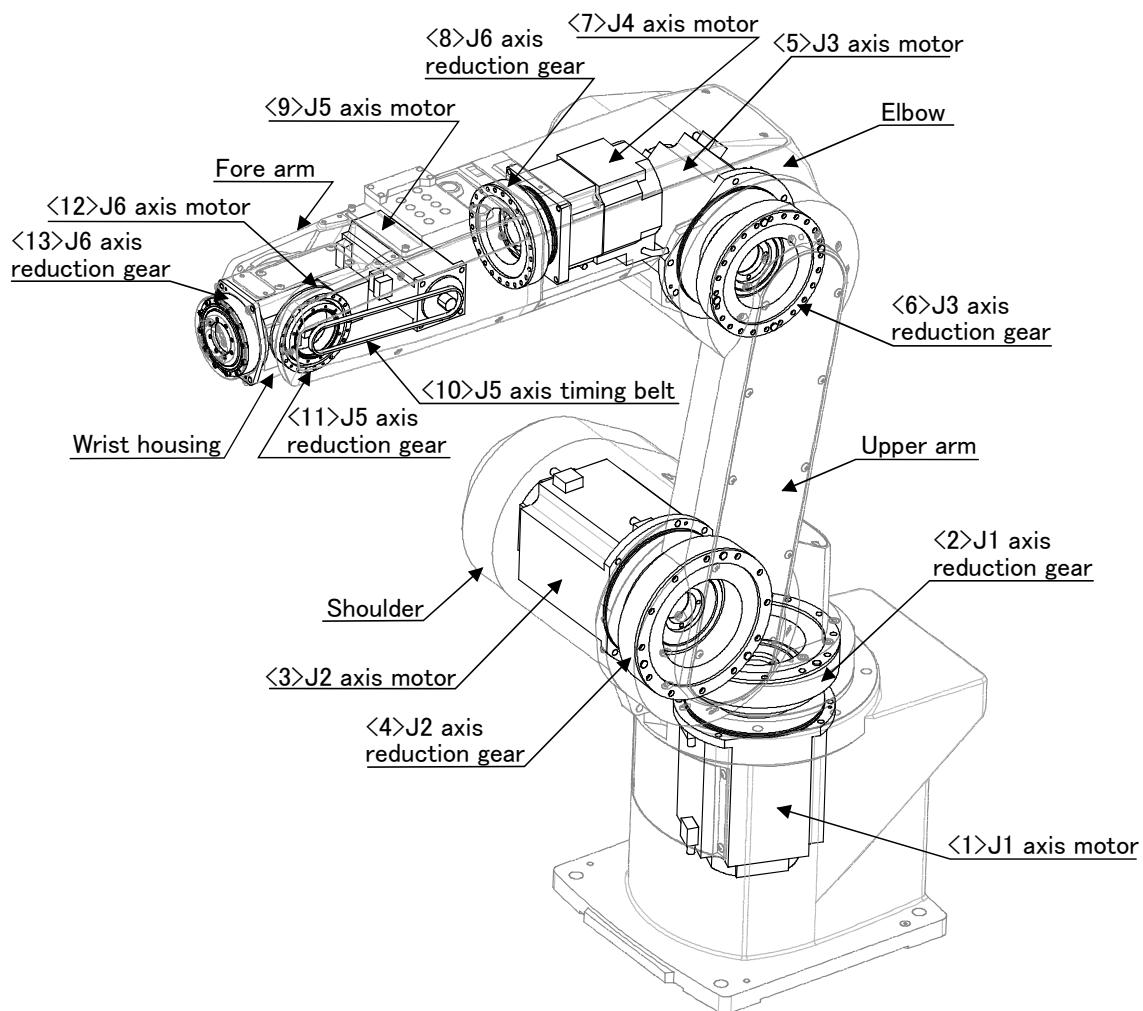


Fig 1-2 : Outline structure of robot arm

1.3.2 Installing/removing the cover

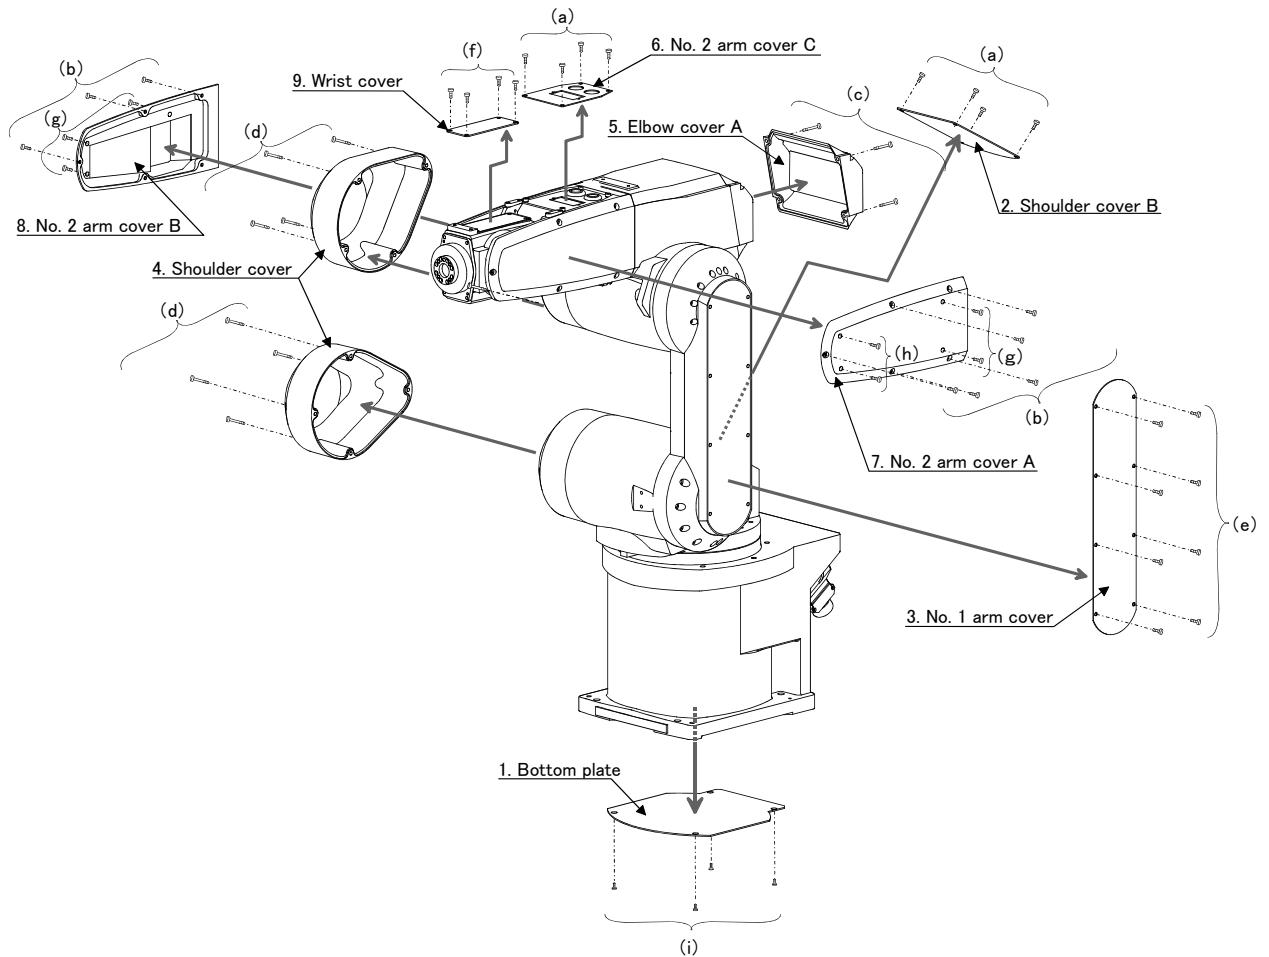


Fig.1-3 : Installing/removing the cover



CAUTION

Check to see that the packing has not been peeled off when the cover was mounted/removed. If it has been peeled off, report to dealer. If the cover is used with the packing peeled off, oil mist and others may enter inside the arm and cause a breakdown.

Table 1–3 : Cover names

No.	Cover names	Qty.	Remarks
①	Bottom plate	1	The packing is attached to the robot arm side.
②	Shoulder cover B	1	The packing is attached to the robot arm side.
③	No. 1 arm cover	1	The packing is attached to the robot arm side.
④	Shoulder cover	2	With shoulder packing
⑤	Elbow cover A	1	With elbow cover packing
⑥	No. 2 arm cover C	1	The packing is attached to the robot arm side.
⑦	No. 2 arm cover A	1	With NO2 arm cover packing
⑧	No. 2 arm cover B	1	With NO2 arm cover packing
⑨	Wrist cover	1	The packing is attached to the robot arm side.

Note) This robot has packing. Refer to “[Table 1–7 : Spare parts list](#)” on page 63 for type name of packing.

Table 1–4 : Cover installation screw list

No.	Installation screw name	Qty.	Remarks
a	Socket bolt (Safety socket) M4 × 8	4	
b	Socket bolt (Safety socket) M4 × 10	1 0	
c	Socket bolt (Safety socket) M4 × 30	4	
d	Socket bolt (Safety socket) M4 × 55	8	
e	Truss screw M4 × 10	8	RV-6SD/6SDC series
		1 0	RV-6SDL/6SDLC series
f	Truss screw M4 × 8	1 2	
g	Flat head screw M4 × 8	4	

- (1) Refer to [Fig. 1–3](#) and remove the cover.
- (2) The names of the covers are given in [Table 1–3](#), and a list of the cover installation screws is given in [Table 1–4](#).
- (3) There are some covers that may be difficult to remove due to the robot posture. In this case, change the robot posture with jog operation, and then remove the cover.
- (4) When attaching the cover after maintenance and inspection, use the detaching procedure in reverse.

The part Nos. and symbols in [Table 1–3](#) and [Table 1–4](#) correspond to [Fig. 1–3](#)[Table 1–3](#).



CAUTION

Check to see that the packing has not been torn or peeled off when the cover was mounted/removed. If it has been torn or peeled off, please contact your nearest Mitsubishi Electric System & Service office (please refer to the back side of this Standard Specifications Manual for the contact information). If the cover is used with the packing torn or peeled off, oil mist and other substances may enter inside the arm and cause a malfunction.

1.3.3 Inspection, maintenance and replacement of timing belt

This robot uses a timing belt for the drive conveyance system of the J5 axis. Compared to gears and chains, the timing belt does not require lubrication and has a low noise. However, if the belt usage method and tension adjustment are inadequate, the life could drop and noise could be generated. Sufficient aging to remove the initial elongation of the belt, and adjustment of the belt tension have been carried out before shipment from the factory. However, depending on the robot working conditions, elongation will occur gradually over a long time. The tension must be confirmed during the periodic inspection. The timing belt must be replaced in the following cases.

(1) Timing belt replacement period

The timing belt life is greatly affected by the robot working conditions, so a set time cannot be given. However, if the following symptoms occur, replace the belt.

- 1) When cracks form at the base or back of the belt teeth.
- 2) When the belt expands due to adherence of oil, etc.
- 3) When the belt teeth wear (to approx. half of the tooth width).
- 4) When the belt teeth jump due to belt teeth wear.
- 5) When the belt snaps.

CAUTION

Due to the manufacturing of the timing belt, initial wear will occur. Wear chips may accumulate in the cover after approx. 300 Hr of operating the robot, but this is not a fault. If the wear chips appear soon after wiping them off, replace the belt.

CAUTION

When the belt is replaced, the machine system origin may deviate. In this case, the position data must be reviewed.

(2) Inspection, maintenance and replacement of J5-axis timing belt

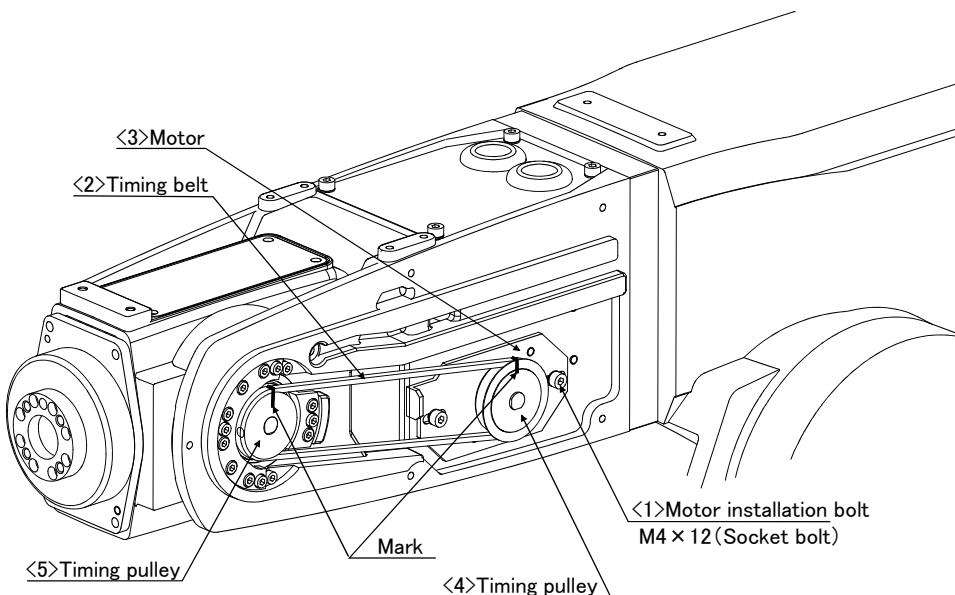


Fig.1-4 : Inspection, maintenance and replacement of J5-axis timing belt

■ Inspecting the J5 axis timing belt

- 1) Confirm that the robot controller power is OFF.
- 2) Refer to "[1.3.2 Installing/removing the cover](#)" on page 53, and remove the No. 2 arm cover A.
- 3) Visually confirm that the symptoms indicated in "[\(1\) Timing belt replacement period](#)" have not occurred with the timing belt.
- 4) Confirm that the belt tension is adjusted to slacken approx. 2.3mm when the center of the belt is lightly pressed with a finger (approx. 1.3N) as shown in "[Fig.1-5 : Belt tension](#)".

■ Adjusting the J5 axis timing belt

- 1) Carry out steps "1)" and "2)" indicated in "[■ Inspecting the J5 axis timing belt](#)" above.
- 2) Lightly loosen the two installation bolts <1>. (Do not loosen too much.)
- 3) Move the motor <3> in the directions of the arrows shown in Fig. 1-4, using the tension adjustment screw while checking the tension of the timing belt <2>. Lightly pushing the center of the belt with your finger (approximately 1.3 N), move the motor to the position where the belt flexes about 2.3 mm.
- 4) The belt tension will increase when moved in the direction of arrow "a", and will decrease when moved in the direction of arrow "b".
- 5) If the belt is loosened too much when adjusting the tension causing it to come off the timing pulleys <4> and <5>, or if the belt and pulley teeth engagement is deviated, the machine system's origin will deviate.
- 6) After adjusting, securely tighten the two motor installation bolts <1>. Improper tightening can cause the belt to loosen with vibration.

■ Replacing the J5 axis timing belt

- 1) [Fig. 1-4](#) shows the methods for inspecting, adjusting and replacing the timing belt.
- 2) Move the robot posture with the teaching pendant so that the J5 axis may be downward.(Turn it to the direction of gravity.)
- 3) Make sure that the pulleys do not move while replacing the belt.
- 4) If the pulley <4> and <5> position relation deviates, the position could deviate.
- 5) Make marks on the timing belt <2> and timing pulleys <4> and <5> with a felt-tip pen as shown in [Fig. 1-4](#) so that the engagement of the timing belt <2> and timing pulleys <4> and <5> does not deviate.
- 6) Loosen the two motor installation screws <1>, and remove the belt.
- 7) Copy the marks onto the new timing belt. Make sure that both belts are tense when making the marks.
- 8) Align the new timing belt with the marks on the timing pulleys <4> and <5>, and install.
- 9) Refer to steps "3)" to "6)" in "[■ Adjusting the J5 axis timing belt](#)" and "[\(3\) Timing belt tension](#)" to adjust the tension.
- 10) The position could deviate after the belt is replaced. Confirm that the position has not deviated. If deviated, refer to "[1.5 Resetting the origin](#)" on page 64, and reset the origin position.

(3) Timing belt tension

f : Pressing force s : Span d : Slack T : Tension								
<table border="1"> <thead> <tr> <th>Axis</th><th>Belt type</th><th>Span : s mm(ft)</th></tr> </thead> <tbody> <tr> <td>J5</td><td>393-3GT-4</td><td>145(0.47)</td></tr> </tbody> </table>			Axis	Belt type	Span : s mm(ft)	J5	393-3GT-4	145(0.47)
Axis	Belt type	Span : s mm(ft)						
J5	393-3GT-4	145(0.47)						
■ Inspection								
<table border="1"> <thead> <tr> <th>Tension : T (N)</th><th>Slack : d mm(ft)</th><th>Pressing force : f (N)</th></tr> </thead> <tbody> <tr> <td>9.8 or more and 30 or less</td><td>2.3(0.007)</td><td>0.7 or more and 2 or less</td></tr> </tbody> </table>			Tension : T (N)	Slack : d mm(ft)	Pressing force : f (N)	9.8 or more and 30 or less	2.3(0.007)	0.7 or more and 2 or less
Tension : T (N)	Slack : d mm(ft)	Pressing force : f (N)						
9.8 or more and 30 or less	2.3(0.007)	0.7 or more and 2 or less						
■ Adjustment								
<table border="1"> <thead> <tr> <th>Tension : T (N)</th><th>Slack : d mm(ft)</th><th>Pressing force : f (N)</th></tr> </thead> <tbody> <tr> <td>19.6</td><td>2.3(0.007)</td><td>1.3</td></tr> </tbody> </table>			Tension : T (N)	Slack : d mm(ft)	Pressing force : f (N)	19.6	2.3(0.007)	1.3
Tension : T (N)	Slack : d mm(ft)	Pressing force : f (N)						
19.6	2.3(0.007)	1.3						
■ Exchange (New article installation)								
<table border="1"> <thead> <tr> <th>Tension : T (N)</th><th>Slack : d mm(ft)</th><th>Pressing force : f (N)</th></tr> </thead> <tbody> <tr> <td>28</td><td>2.3(0.007)</td><td>1.9</td></tr> </tbody> </table>			Tension : T (N)	Slack : d mm(ft)	Pressing force : f (N)	28	2.3(0.007)	1.9
Tension : T (N)	Slack : d mm(ft)	Pressing force : f (N)						
28	2.3(0.007)	1.9						

Fig.1-5 : Belt tension

The timing belt can satisfactorily convey the drive and keep a durable force only when it has an adequate tension. The belt tension should not be too tight or too loose. Instead, it should be adjusted to a degree that elasticity is felt when the belt is pressed with the thumb. If the belt tension is too weak, the belt loosening side will vibrate. On the other hand, if the belt tension is too strong, a sharp sound will be heard and the belt tension side will vibrate. The detailed adjustment (tension) is shown in Fig. 1-5.

Check and adjust with the belt pressing force f and the slack amount d between span s .

1.3.4 Lubrication

(1) Lubrication position and specifications

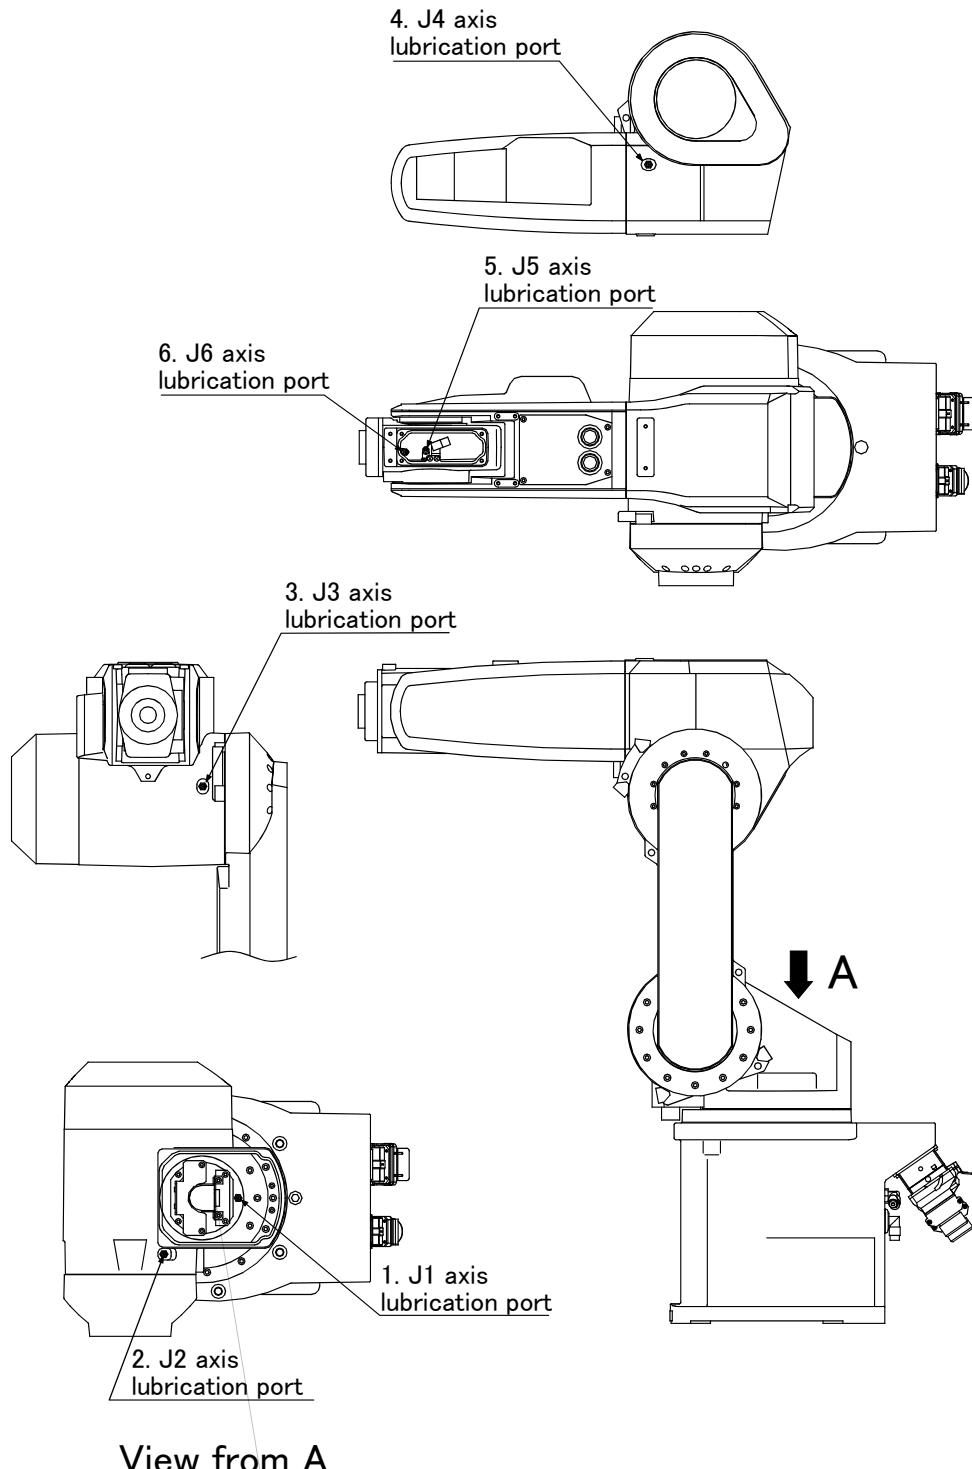


Fig.1-6 : Lubrication positions

Table 1-5 : Lubrication specifications

No.	Parts to be lubricated	Oiling method	Lubrication oil (maker)	Default charge amount	Lubrication interval	Lubrication amount	Cover to remove
1	J1 axis reduction gears	Grease nipple WA-610	Grease Harmonic grease SK-1A (Japan Harmonic Systems)	66ml(60g)	6000Hr	14ml(13g)	Shoulder cover B
2	J2 axis reduction gears			66ml(60g)		14ml(13g)	No.1 arm cover
3	J3 axis reduction gears			43ml(40g)		7.6ml(7g)	No.1 arm cover
4	J4 axis reduction gears			16g		4g	
5	J5 axis reduction gears			11ml(10g)		1.6ml(1.5g)	Wrist cover
6	J6 axis reduction gears			11ml(10g)		1.6ml(1.5g)	Wrist cover

The lubrication specifications for each place are shown in Fig. 1-6.

[Caution]

The "Lubrication interval" in Table 1-5 is usually based on the three-year inspection. 8Hr x 20 days x 36 months = 6,000Hr.)

- Depending on the robot operation state, the lubrication time will fluctuate, so determine the time according to the state so that the grease does not run out.
- With the maintenance forecast function of the personal computer support software (option), the guidance of lubrication time is calculated according to the operating environment of the customer.
- The numbers in the correspond to the supply positions in Fig. 1-6.
- Avoid excessive lubrication since it may lead to grease leak. Also, the number of lubrications is limited to 3 times.

(2) Lubrication method

- Set the robot to the posture shown in Fig. 1-6.
- Refer to the "1.3.2Installing/removing the cover" on page 53 and remove the covers.
- Remove the drain bolt or plug.
- Insert the grease shown in Table using a grease gun from the lubrication grease nipple.
- Install the drain bolt or plug.
- Replace the covers with the removal procedure in reverse.



CAUTION

Use manual grease gun, and inject grease with pressure 0.03Mpa or less. Do not use the grease gun, which derived by the factory air presser to avoid injecting by too high pressure.

1.3.5 Stopper exchange

The resin stopper is installed in the J1 axis – the J3 axis. This is the incorrect setup of the origin etc. and is for absorbing the energy at clashing with the mechanical stopper. Please exchange, if it clashes with the mechanical stopper and the resin stopper is damaged.

The resin stopper's type, the color, and the fixing screw change with the robot's manufacture periods.

The resin stopper is using either the cream-colored "resin stopper" or the gray "resin stopper A." If you get as service parts, please be sure to get the same thing as the resin stopper which is using it. Refer to the "table 5-8:robot body spare-parts list" 75-page

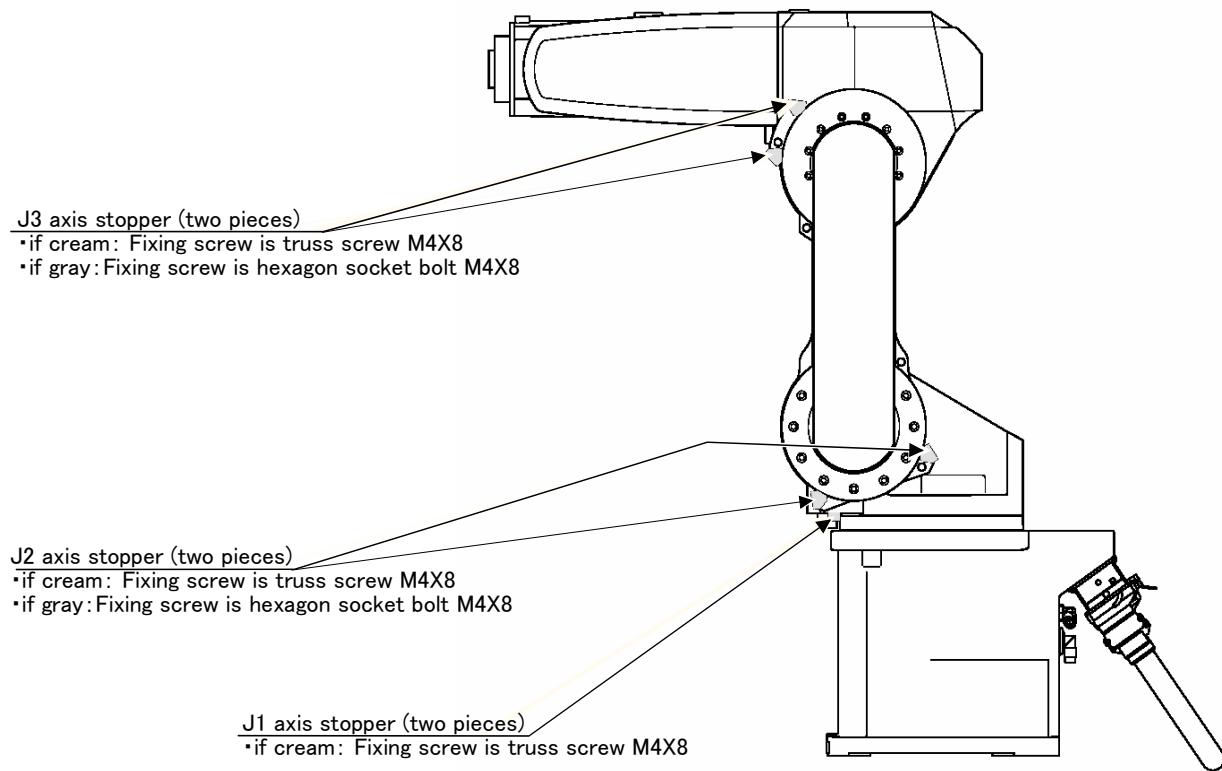


図 1-7 : Stopper installation position

1.3.6 Replacing the backup battery

An absolute encoder is used for the position detector, so the position must be saved with the backup battery when the power is turned OFF. The controller also uses a backup battery to save the program, etc. These batteries are installed when the robot is shipped from the factory, but as these are consumable parts, they must be replaced periodically by the customer.

The guideline for replacing the battery is one year, but this will differ according to the robot's usage state.

Error No. 7520 :Battery consumption time is over

Error No. 133n :Encoder battery voltage low. (n indicates the axis number.)
(The encoder battery voltage of the robot arm is low.)

Error No. 7510 :Battery voltage low (R/C)
(The battery voltage of the controller is low.)

Error No. 7500 :No battery voltage
(The battery of the controller is depleted.)



CAUTION

If error No. 7500 occurs, the program data and other data in the controller is lost and it becomes necessary to load the data again.

If any of the battery-related errors above occur and the robot continues to be used, the data integrity of the memory cannot be guaranteed. If an error occurs, replace the batteries of both the robot arm and controller promptly.

It is also recommended to save programs and position data on the personal computer side via the personal computer support software and so forth in advance.

(1) Replacing the robot arm battery



CAUTION

Don't disconnect connector, etc. While replacing the battery, the encoder position data is saved by the power supplied from the controller. Thus, if the cable connection is incomplete, the encoder position data will be lost when the controller power is turned OFF. Several batteries are used in the robot arm, but replace all old batteries with new batteries at the same time.

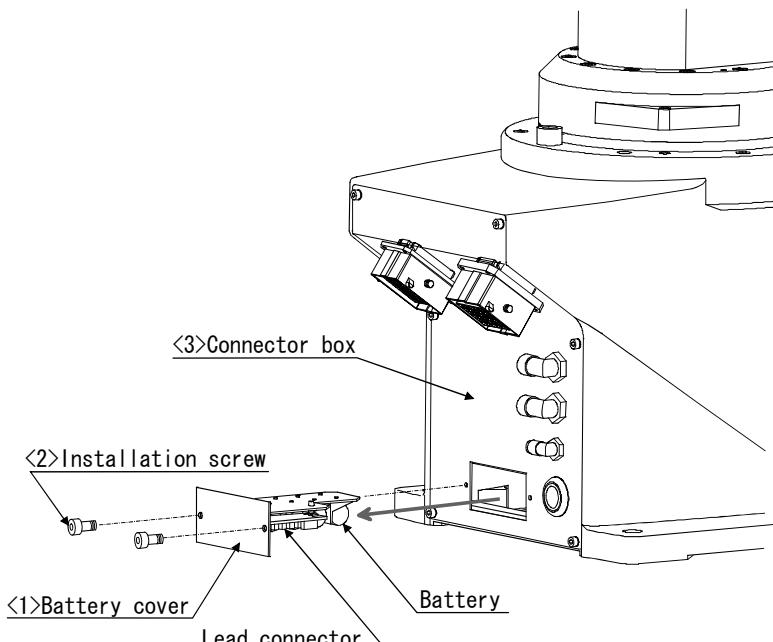


Fig.1-8 : Replacing the battery

- 1) Confirm that the robot arm and controller are connected with a cable.
- 2) Turn the controller control power ON.

The position data is retained by the power supplied from the controller while replacing the battery. Thus, if the cable is not connected correctly, or if the controller power is OFF, the position data will be lost.

- 3) Press the emergency stop button to set the robot in the emergency stop state. This is a measure for safety, and must always be carried out.
- 4) Remove the two installation screws <2>, and remove the battery cover <1>.
- 5) The battery holder is located in the connector box <3>. Remove the old battery from the holder, and disconnect the lead connector.
- 6) Insert the new battery into the holder, and connect the lead connector. Replace all batteries with new ones at the same time.
- 7) Carry out steps 4) in reverse to install the parts.
- 8) Initialize the battery consumption time.

Always carry out this step after replacing the battery, and initialize the battery usage time. Refer to the separate "Instruction Manual/Detailed Explanation of Functions and Operations" for details on the operation methods.

[Caution] If the old battery is replaced because it has been used up, it is necessary to set the origin again. Refer to "["1.5Resetting the origin" on page 64](#)" and reset the origin using the jig method or ABS origin method.

1.4 Maintenance parts

The consumable parts that must be replaced periodically are shown in [Table 1-6](#), and spare parts that may be required during repairs are shown in [Table 1-7](#). Purchase these parts from the dealer when required. Some Mitsubishi-designated parts differ from the maker's standard parts. Thus, confirm the part name, robot arm and controller serial No. and purchase the parts from the dealer.

Table 1-6 : Consumable part list

No.	Part name	Type Note1)	Usage place	Q'ty	Supplier
1	Timing belt		J5 axis	1	Mitsubishi Electric System & Service;Co.,Ltd.
2	Grease	SK-1A	Reduction gears of each axis	An needed	
3	Lithium battery	A6BAT	In battery cover	5	

Table 1-7 : Spare parts list

No.	Names	Type Note1)	Usage place	Q'ty	Supplier
1	AC servo motor		J1 axis	1	Mitsubishi Electric System & Service;Co.,Ltd
2			J2 axis	1	
3			J3 axis	1	
4			J4 axis	1	
5			J5 axis	1	
6			J6 axis	1	
7	Resin stopper (Cream)		J1 axis	2	
8			J2 axis、J3 axis ^{Note2)}	2 / axis	
9	Reduction gears (RV-6SD/6SDLC)		2 axis、J3 axis ^{注2)}	2 / axis	Mitsubishi Electric System & Service;Co.,Ltd
10			J1 axis	1	
11			J2 axis	1	
12			J3 axis	1	
13			J4 axis	1	
14			J5 axis	1	
15	Reduction gears(RV-6SD/6SDLC)		J6 axis	1	
16			J1 axis	1	
17			J2 axis	1	
18			J3 axis	1	
19			J4 axis	1	
20			J5 axis	1	
21	packing		J6 axis	1	
RV-6SD/6SDC (Standard specifications)					
22	Shoulder cover packing A		Shoulder cover	2	Mitsubishi Electric System & Service;Co.,Ltd
23	Shoulder cover packing B			2	
24	No. 1 arm cover packing A		No. 1 arm cover	1	
25	No. 1 arm cover packing B			1	
26	No. 1 arm cover packing C			2	
27	Elbow cover packing		Elbow cover A	1	
28	NO2 arm cover packing		No. 2 arm cover A No. 2 arm cover B	2	
29	NO2 arm cover C packing			1	
30	Wrist cover packing		Wrist cover	1	
31	Battery bracket packing		Battery cover	1	
RV-6SD/6SDLC (Standard specifications)					
32	Shoulder cover packing A		Shoulder cover	2	Mitsubishi Electric System & Service;Co.,Ltd
33	Shoulder cover packing B			2	
34	No. 1 arm cover L packing A		No. 1 arm cover	1	
35	No. 1 arm cover L packing B			1	
36	No. 1 arm cover L packing C			2	
37	Elbow cover packing		Elbow cover A	1	
38	NO2 arm cover packing		No. 2 arm cover A No. 2 arm cover B	2	
39	NO2 arm cover C packing			1	
40	Wrist cover packing		Wrist cover	1	
41	Battery bracket packing		Battery cover	1	

Note1) Confirm the robot arm serial No., and contact the dealer or service branch of Mitsubishi Electric Co., for the type.

Note2) The resin stopper's form and the color change with the robot's manufacture periods. Please specify and get the color.

1.5 Resetting the origin

The origin is set so that the robot can be used with a high accuracy. After purchasing the robot, always carry out this step before starting work. The origin must be reset if the combination of robot and controller being used is changed or if the motor is changed causing an encoder area. The types of origin setting methods are shown in [Table 1-8](#).

[Caution] If the old battery is replaced because it has been used up, it is necessary to set the origin again. Reset the origin using the jig method or ABS origin method.

Table 1-8 : Origin setting method

No	Method	Explanation	Remarks
1	Origin data input method	The origin data set as the default is input from the T/B.	The setting method is explained in " 2.3Setting the origin " on page 12 .
2	Jig method	The origin posture is set with the calibration jig installed.	The setting method is explained in " 1.5.1Jig method " on page 65 .
3	User origin method	A randomly designated position is set as the origin posture.	Before using this method, the origin must be set with the other method. The setting method is explained in " 1.5.3User origin method " on page 83.
4	ABS origin method	This method is used when the encoder backup data lost in the cause such as battery cutting.	Before using this method, the origin must be set with the other method with same encoder. The setting method is explained in " 1.5.2ABS origin method " on page 81.

Note) Although "OP setting" by the mechanical stopper method can also be selected, it is not recommended for this robot. Please use one of the methods listed in [Table 1-8](#).

1.5.1 Jig method

This method is using the origin setting tool. If the origin setting tool is required, please ask nearby dealer. The reference figure of the origin setting tool is shown in Fig. 1-9.

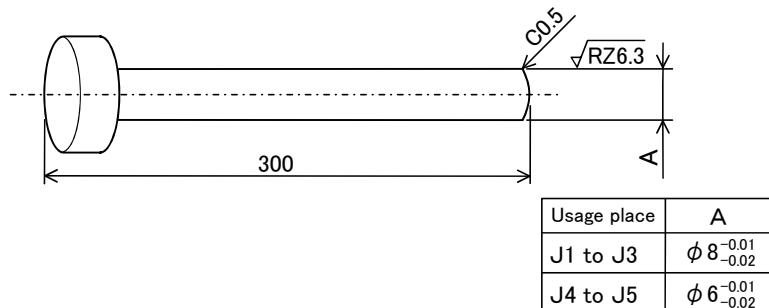


Fig.1-9 : Reference dimension of origin setting tool

The procedure of setting the origin with the origin setting tool is shown below.

Carry out this method for each axis.

First, set each axis by the origin position. There are the method of releasing the brake and adjusting with the origin position manually and the method of adjusting with the origin position by jog feed. Here, explain operation by brake release.

Then, do origin setting operation and set up the origin.




CAUTION


To ensure safety, the brake-release procedure described below should always be done by two persons.

This operation is carried out with the teaching pendant. Set the [MODE] switch on the front of the controller to "MANUAL", and set the [ENABLE] switch on the teaching pendant to "ENABLE" to enable the teaching pendant. Do the following operations, pressing down the enabling switch of T/B lightly.

(1) J1 axis origin setting



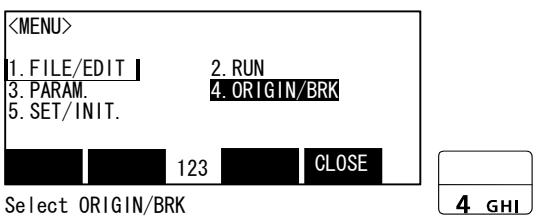


4 GHI


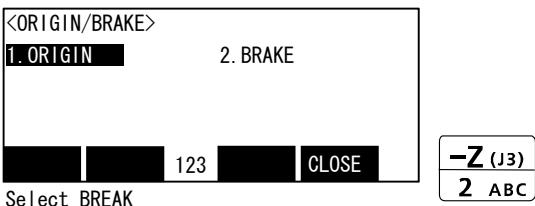


-Z (J3)

2 ABC

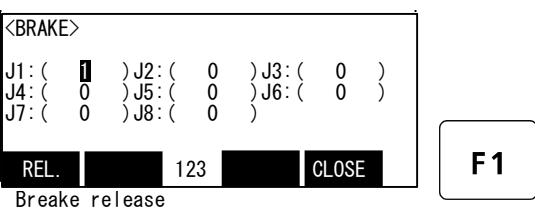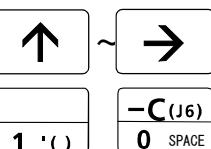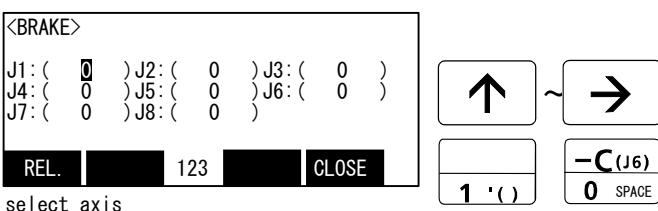

F1

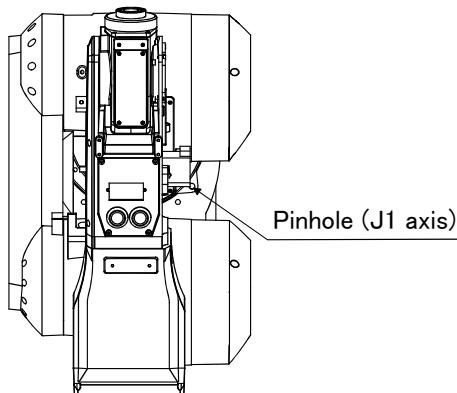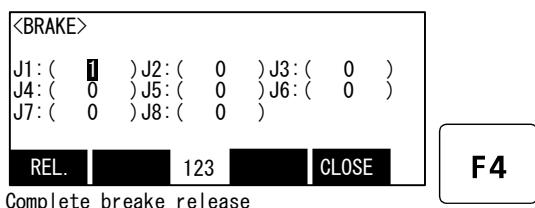Diagram of the robot viewed from the top

F4


1) Press the [4] key on the menu screen, and display the Origin/Break selection screen.

2) Press the [2] key , and display the Break release selection screen.


3) Release the brake of the J1 axis.
Input "1" into the J1 axis. Set "0" to other axes.

- 4) Confirm the axis for which the brakes are to be released.
5) Pressing the [F1] key is kept with the enabling switch of T/B pressed down. The brake is released while pressing the key.
6) Move the J1 axis slowly toward the front using both hands. Align the pinhole of the No.1 arm and the pinhole at the base section, feed through the origin jig ($\phi 8$) into the pinholes and fasten.


7) Detach the [F1] key and work the brake.
Press the [F4] key and return to the origin / brake screen.

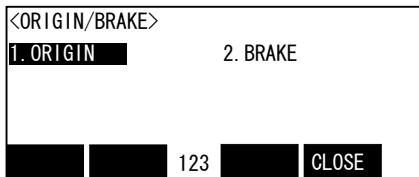

8) Press the [1] key , and display the Origin setting selection screen.

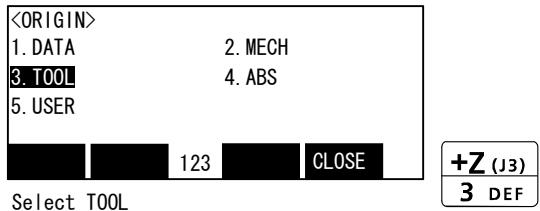


9) Press the [3] key , and display the Tool selection screen.

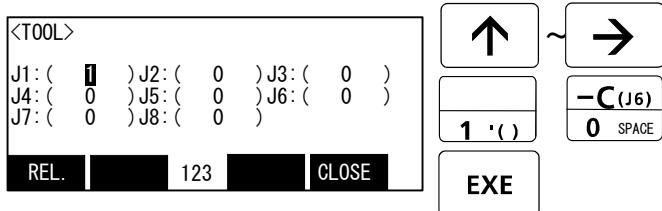


10) Input "1" into the J1 axis. Set "0" to other axes.

11) Press the [EXE] key , and display Confirmation screen.

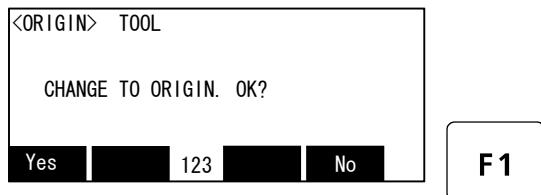

12) Press the [F1] key , and the origin position is set up.

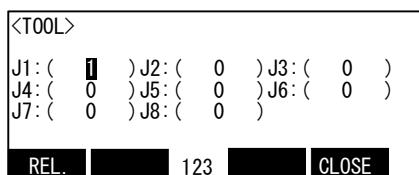

13) Setting of the origin is completed.

14) Refer to “[1.5.2ABS origin method](#)” on page 81 in this manual, and record the origin data on the origin data seal.


◇◆◇ Release the brake ◇◆◇

Do cursor movement into the parenthesis of each axis by the arrow key. The brakes can be released only for the axis for which a “1” is displayed on the screen. If the brakes are not to be released, press the [0] key and display a “0”. If the [F1] key on the teaching pendant or the enabling switch is detached while the brakes are released, the brakes will work immediately.


◇◆◇ Select the axis of origin setting ◇◆◇

Do cursor movement into the parenthesis of each axis by the arrow key. The origin is set only for the axis for which a “1” is displayed on the screen. If the origin is not to be set, press the [0] key and display a “0”.


(2) J2 axis origin setting

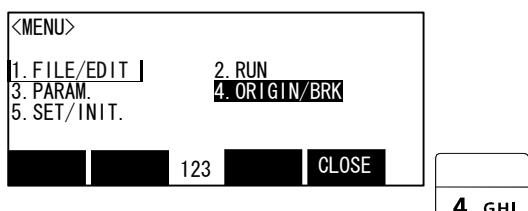


- 1) Press the [4] key on the menu screen, and display the Origin/Break selection screen.

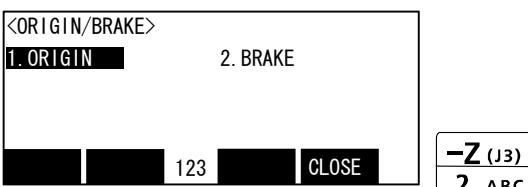

- 2) Press the [2] key , and display the Break release selection screen.

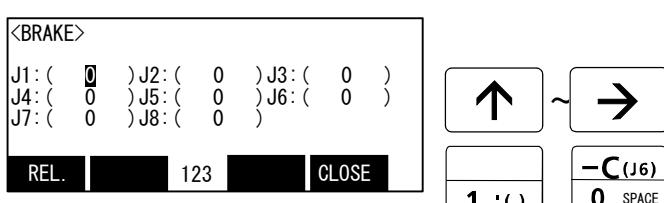


- 3) Release the brake of the J2 axis.
Input "1" into the J1 axis. Set "0" to other axes.

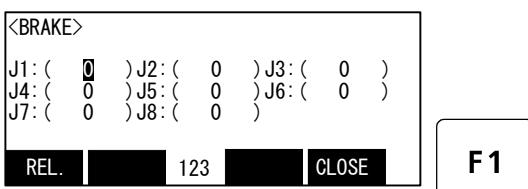

- 4) Confirm the axis for which the brakes are to be released.


- 5) One worker must securely support the upper arm with both hands.

- 6) Pressing the [F1] key is kept with the enabling switch of T/B pressed down. The brake is released while pressing the key.
with both hands. Align the pinholes of the No. 1 arm and shoulder, feed through the origin jig (ϕ 8) into the pinholes and fasten.

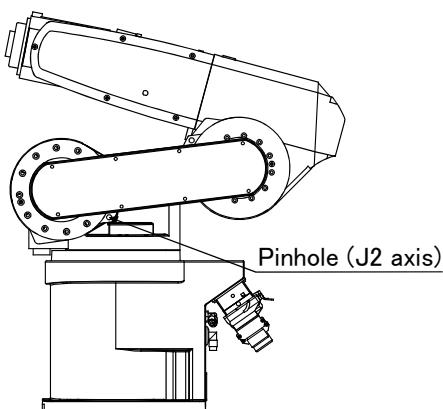


CAUTION For safety purposes, the step for releasing the brakes must be carried out by two workers. One worker must operate the T/B, and the other must support the arm. When the brakes are released, the robot arm could drop by its own weight depending on the posture.


CAUTION If [F1] key or enable switch of T/B is released, the brakes will be work immediately.

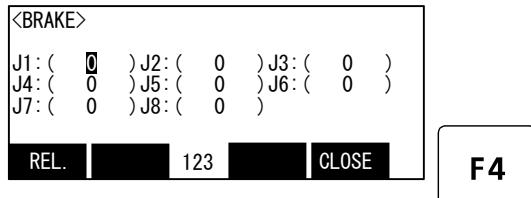


- 8) Detach the [F1] key and work the brake.
Press the [F4] key and return to the origin / brake screen.

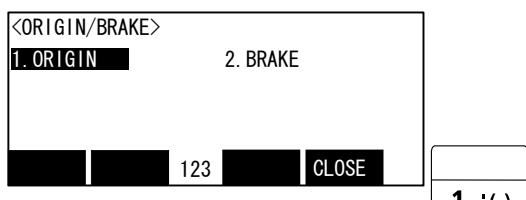

- 9) Press the [1] key , and display the Origin setting selection screen.

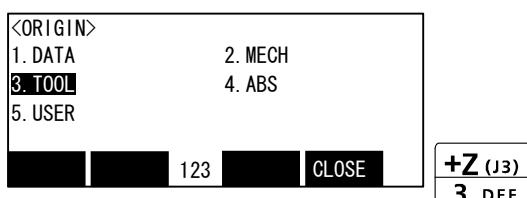


- 10) Press the [3] key , and display the Tool selection screen.

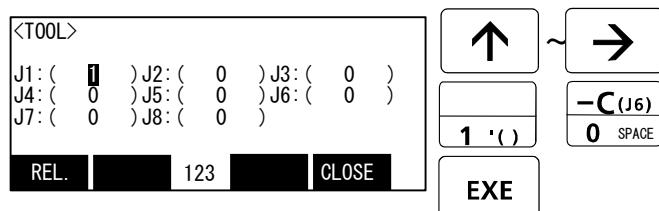


- 11) Input "1" into the J2 axis. Set "0" to other axes.

- 12) Press the [EXE] key , and display Confirmation screen.

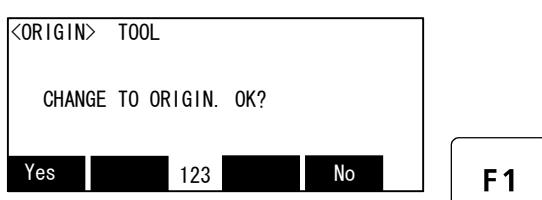

- 13) Press the [F1] key , and the origin position is set up.

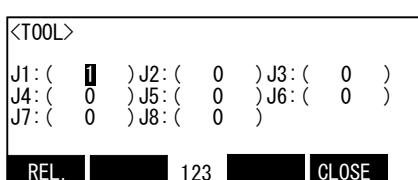

- 14) Setting of the origin is completed.

- 15) Refer to “[1.5.2ABS origin method](#)” on page 81 in this manual, and record the origin data on the origin data seal.


◇◆◇ Release the brake ◇◆◇

Do cursor movement into the parenthesis of each axis by the arrow key. The brakes can be released only for the axis for which a "1" is displayed on the screen. If the brakes are not to be released, press the [0] key and display a "0". If the [F1] key on the teaching pendant or the enabling switch is detached while the brakes are released, the brakes will work immediately.


◇◆◇ Select the axis of origin setting ◇◆◇

Do cursor movement into the parenthesis of each axis by the arrow key. The origin is set only for the axis for which a "1" is displayed on the screen. If the origin is not to be set, press the [0] key and display a "0".


(3) J3 axis origin setting

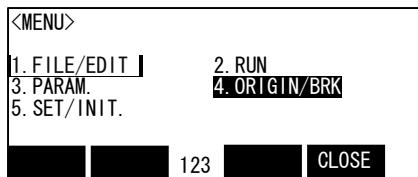

4 GHI

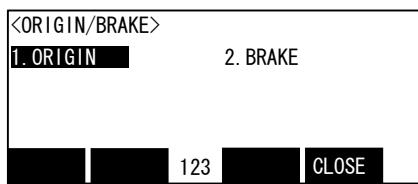

**-Z (J3)
2 ABC**

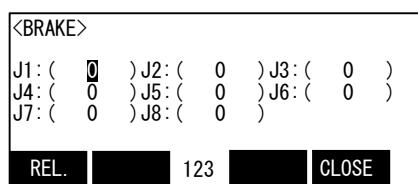


**↑ ~ →
1 ' () -C (J6)
0 SPACE**

- 1) Press the [4] key on the menu screen, and display the Origin/Break selection screen.

- 2) Press the [2] key , and display the Break release selection screen.

- 3) Release the brake of the J3 axis.
Input "1" into the J3 axis. Set "0" to other axes.


- 4) Confirm the axis for which the brakes are to be released.
5) One worker must securely support the upper arm with both hands.

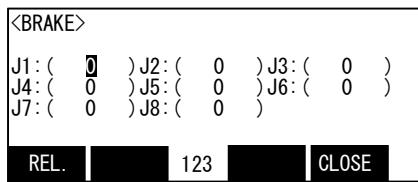

F1

- 6) Pressing the [F1] key is kept with the enabling switch of T/B pressed down. The brake is released while pressing the key.

- 7) Move the J3 axis slowly toward the front using both hands. Align the pinhole of the No.1 arm and the pinhole at the base section, feed through the origin jig (ϕ 8) into the pinholes and fasten.

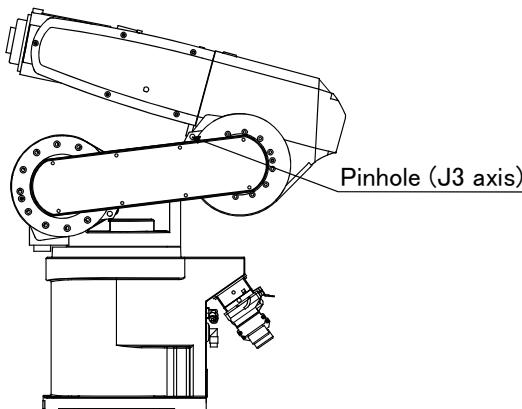**CAUTION**

For safety purposes, the step for releasing the brakes must be carried out by two workers. One worker must operate the T/B, and the other must support the arm. When the brakes are released, the robot arm could drop by its own weight depending on the posture.

⚠ CAUTION

If [F1] key or enable switch of T/B is released, the brakes will be work immediately.

<BRAKE>								
J1:(0)	J2:(0)	J3:(0)
J4:(0)	J5:(0)	J6:(0)
J7:(0)	J8:(0)			
REL.		123		CLOSE				

F4

<ORIGIN/BRAKE>							
1. ORIGIN				2. BRAKE			
		123		CLOSE			

- 8) Detach the [F1] key and work the brake.
Press the [F4] key and return to the origin / brake screen.

<ORIGIN>							
1. DATA				2. MECH			
3. TOOL				4. ABS			
5. USER							
		123		CLOSE			

+Z (J3)
3 DEF →

- 9) Press the [1] key , and display the Origin setting selection screen.

<TOOL>								
J1:(1)	J2:(0)	J3:(0)
J4:(0)	J5:(0)	J6:(0)
J7:(0)	J8:(0)			
REL.		123		CLOSE				

↑ ~ -C (J6)
0 SPACE
1 '()
EXE

- 10) Press the [3] key , and display the Tool selection screen.
- 11) Input "1" into the J3 axis. Set "0" to other axes.
12) Press the [EXE] key , and display Confirmation screen.

<ORIGIN> TOOL							
CHANGE TO ORIGIN. OK?							
Yes		123		CLOSE			

F1

- 13) Press the [F1] key , and the origin position is set up.

<TOOL>								
J1:(1)	J2:(0)	J3:(0)
J4:(0)	J5:(0)	J6:(0)
J7:(0)	J8:(0)			
REL.		123		CLOSE				

- 14) Setting of the origin is completed.

- 15) Refer to “[1.5.2ABS origin method](#)” on page 81 in this manual, and record the origin data on the origin data seal.


◇◆◇ Release the brake ◇◆◇

Do cursor movement into the parenthesis of each axis by the arrow key. The brakes can be released only for the axis for which a "1" is displayed on the screen. If the brakes are not to be released, press the [0] key and display a "0". If the [F1] key on the teaching pendant or the enabling switch is detached while the brakes are released, the brakes will work immediately.


◇◆◇ Select the axis of origin setting ◇◆◇

Do cursor movement into the parenthesis of each axis by the arrow key. The origin is set only for the axis for which a "1" is displayed on the screen. If the origin is not to be set, press the [0] key and display a "0".


(4) J4 axis origin setting (6-axis type only)

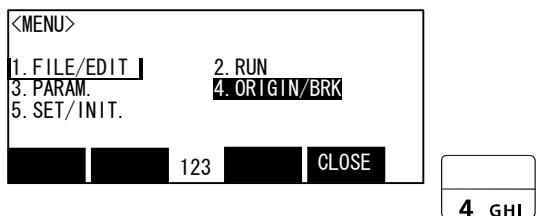


- 1) Press the [4] key on the menu screen, and display the Origin/Break selection screen.

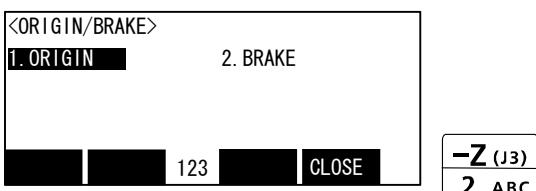

- 2) Press the [2] key , and display the Break release selection screen.

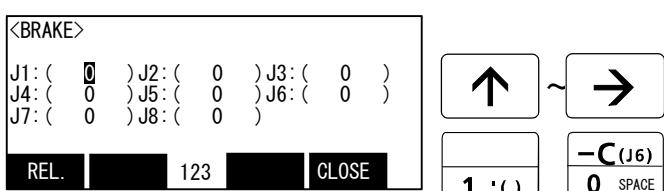

- 3) Release the brake of the J4 axis.
Input "1" into the J4 axis. Set "0" to other axes.

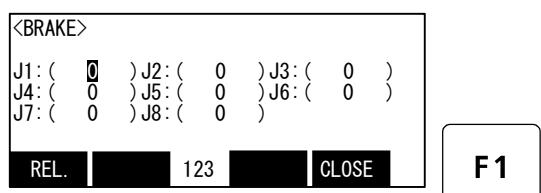



- 4) Confirm the axis for which the brakes are to be released.

- 5) One worker must securely support the upper arm with both hands.


- 6) Pressing the [F1] key is kept with the enabling switch of T/B pressed down. The brake is released while pressing the key.

- 7) Slowly rotate the J2 axis in the direction of minus with both hands. Align the pinholes of the No. 1 arm and shoulder, feed through the origin jig (ϕ 8) into the pinholes and fasten.

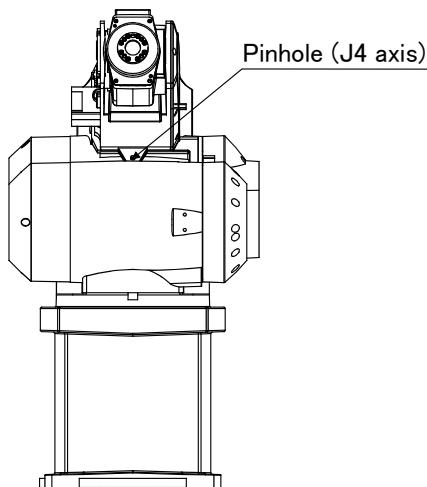


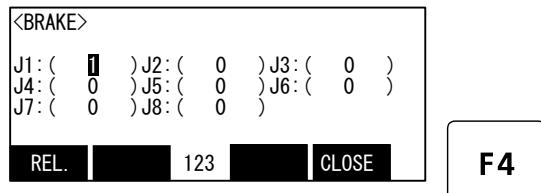


- 8) Detach the [F1] key and work the brake.
Press the [F4] key and return to the origin / brake screen.

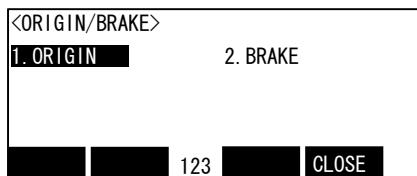

- 9) Press the [1] key , and display the Origin setting selection screen.

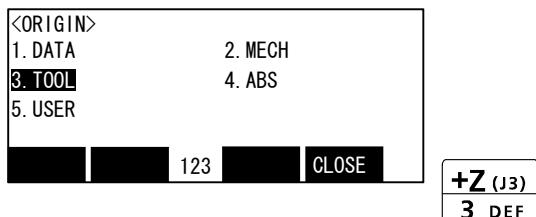


- 10) Press the [3] key , and display the Tool selection screen.

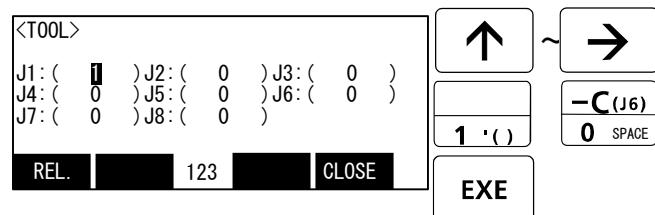

- 11) Input "1" into the J1 axis. Set "0" to other axes.

- 12) Press the [EXE] key , and display Confirmation screen.

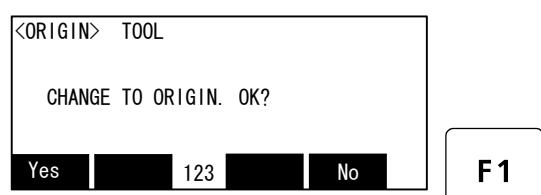

- 13) Press the [F1] key , and the origin position is set up.



- 14) Setting of the origin is completed.

- 15) Refer to “[1.5.2ABS origin method](#)” on page 81 in this manual, and record the origin data on the origin data seal.


◇◆◇ Release the brake ◇◆◇

Do cursor movement into the parenthesis of each axis by the arrow key. The brakes can be released only for the axis for which a "1" is displayed on the screen. If the brakes are not to be released, press the [0] key and display a "0". If the [F1] key on the teaching pendant or the enabling switch is detached while the brakes are released, the brakes will be work immediately.


◇◆◇ Select the axis of origin setting ◇◆◇

Do cursor movement into the parenthesis of each axis by the arrow key. The origin is set only for the axis for which a "1" is displayed on the screen. If the origin is not to be set, press the [0] key and display a "0".


(5) J5 axis origin setting

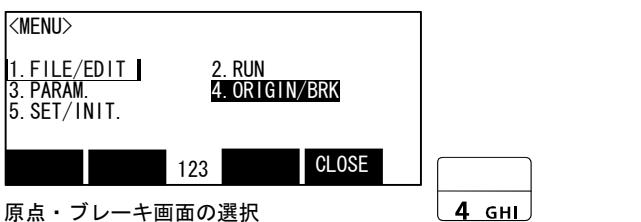


- 1) Remove the No. 2 arm cover A (on the left side facing the front of the robot). There is a pin hole in the cover.
- 2) Press the [4] key on the menu screen, and display the Origin/Break selection screen.

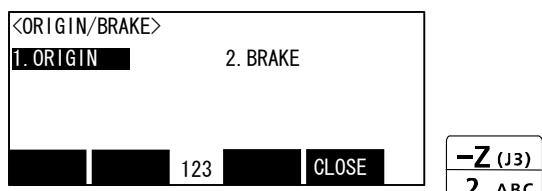

- 3) Press the [2] key , and display the Break release selection screen.

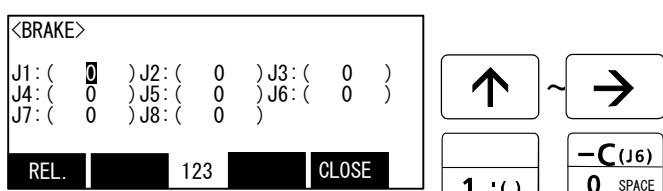

- 4) Release the brake of the J5 axis.
Input "1" into the J5 axis. Set "0" to other axes.

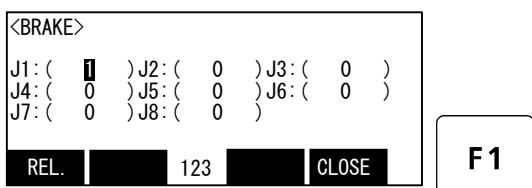


- 5) Confirm the axis for which the brakes are to be released.

- 6) One worker must securely support the upper arm with both hands.

- 7) Pressing the [F1] key is kept with the enabling switch of T/B pressed down. The brake is released while pressing the key.

8) Slowly rotate the J5 axis in the direction of plus 90°

with both hands. Align the pinholes of the No. 2 arm and wrist housing , feed through the origin jig ($\phi 8$) into the pinholes and fasten.

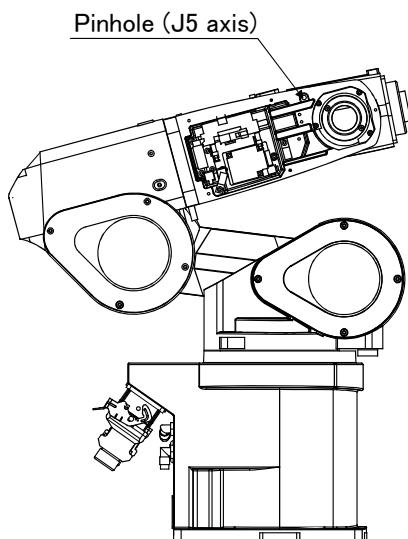

⚠ CAUTION

For safety purposes, the step for releasing the brakes must be carried out by two workers. One worker must operate the T/B, and the other must support the arm. When the brakes are released, the robot arm could drop by its own weight depending on the posture.

⚠ CAUTION

If [F1] key or enable switch of T/B is released, the brakes will be work immediately.

<BRAKE>

J1: (1)	J2: (0)	J3: (0)
J4: (0)	J5: (0)	J6: (0)
J7: (0)	J8: (0)	

REL. | 123 | CLOSE

F4

- 9) Detach the [F1] key and work the brake.
Press the [F4] key and return to the origin / brake screen.

<ORIGIN/BRAKE>

1. ORIGIN	2. BRAKE
-----------	----------

123 | CLOSE

1 '()

- 10) Press the [1] key , and display the Origin setting selection screen.

<ORIGIN>

1. DATA	2. MECH
3. TOOL	4. ABS
5. USER	

123 | CLOSE


+Z (J3)
3 DEF

- 11) Press the [3] key , and display the Tool selection screen.

<TOOL>

J1: (1)	J2: (0)	J3: (0)
J4: (0)	J5: (0)	J6: (0)
J7: (0)	J8: (0)	

REL. | 123 | CLOSE

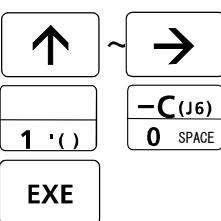

- 12) Input "1" into the J5 axis. Set "0" to other axes.

- 13) Press the [EXE] key , and display Confirmation screen.

<ORIGIN> TOOL

CHANGE TO ORIGIN. OK?

Yes | 123 | No

F1

- 14) Press the [F1] key , and the origin position is set up.

<TOOL>

J1: (1)	J2: (0)	J3: (0)
J4: (0)	J5: (0)	J6: (0)
J7: (0)	J8: (0)	

REL. | 123 | CLOSE

- 15) Setting of the origin is completed.

- 16) Refer to “[1.5.2ABS origin method](#)” on page 81 in this manual, and record the origin data on the origin data seal.
Replace the cover.


◇◆◇ Release the brake ◇◆◇

Do cursor movement into the parenthesis of each axis by the arrow key. The brakes can be released only for the axis for which a "1" is displayed on the screen. If the brakes are not to be released, press the [0] key and display a "0". If the [F1] key on the teaching pendant or the enabling switch is detached while the brakes are released, the brakes will work immediately.


◇◆◇ Select the axis of origin setting ◇◆◇

Do cursor movement into the parenthesis of each axis by the arrow key. The origin is set only for the axis for which a "1" is displayed on the screen. If the origin is not to be set, press the [0] key and display a "0".


(6) J6 axis origin setting

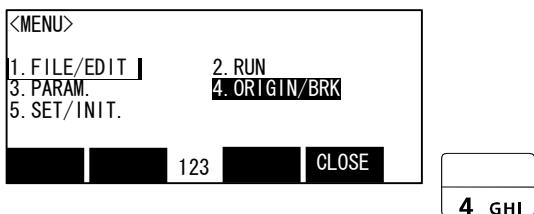


4 GHI

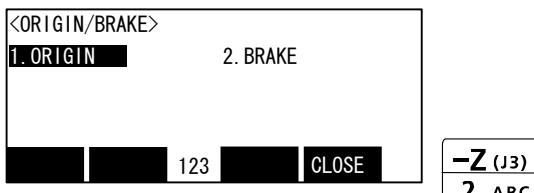


**-Z (J3)
2 ABC**

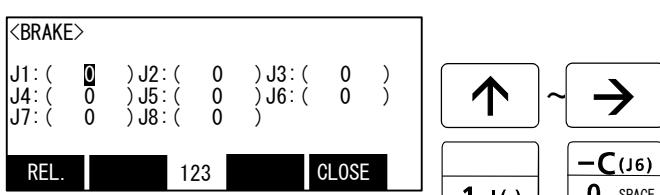


**↑ ~ →
1 ' () -C (J6)
0 SPACE**

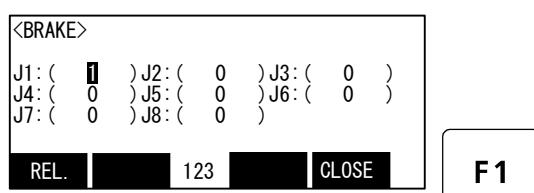

F1

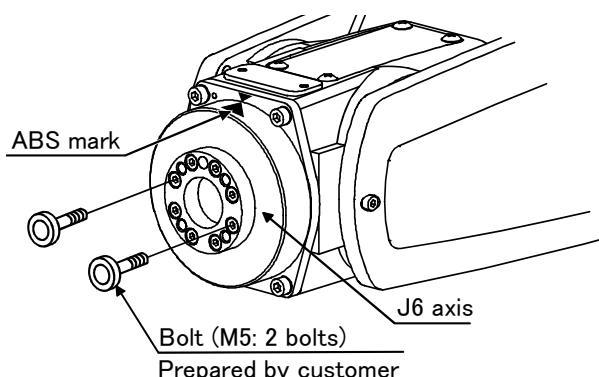

The J6-axis dose not have a mechanical stopper. When setting the origin position, do not rotate the axis more than themotion range(± 200 deg.).

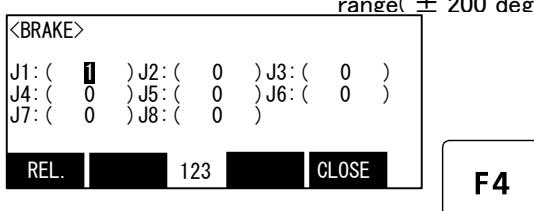

F4

- 1) Install the bolts (two M5 bolts prepared by customer) at opposing positions on the mechanical interface.
- 2) Press the [4] key on the menu screen, and display the Origin/Break selection screen.


- 3) Press the [2] key , and display the Break release selection screen.

- 4) Release the brake of the J6 axis. Input "1" into the J6 axis. Set "0" to other axes.


- 5) Confirm the axis for which the brakes are to be released.
- 6) Pressing the [F1] key is kept with the enabling switch of T/B pressed down. The brake is released while pressing the key.

- 7) Hold the bolts mounted in step "1)" above with hands, rotate them slowly and line up the ABS mark of the J6 axis with the ABS mark of the wrist area.


- 8) Detach the [F1] key and work the brake. Press the [F4] key and return to the origin / brake screen.

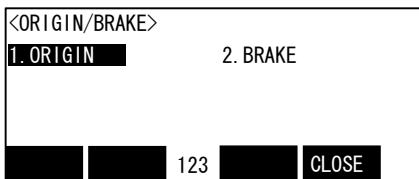

9) Press the [1] key , and display the Origin setting selection screen.

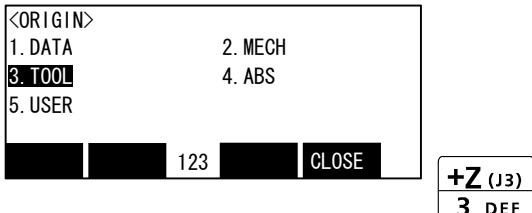


10) Press the [3] key , and display the Tool selection screen.

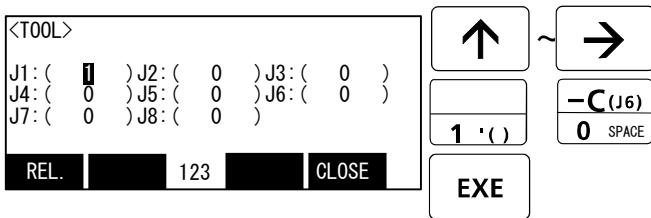


11) Input "1" into the J6 axis. Set "0" to other axes.

12) Press the [EXE] key , and display Confirmation screen.

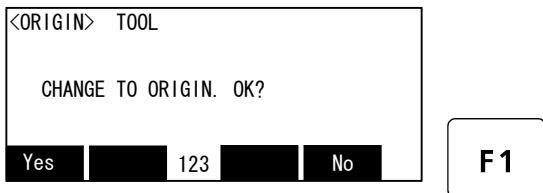

13) Press the [F1] key , and the origin position is set up.

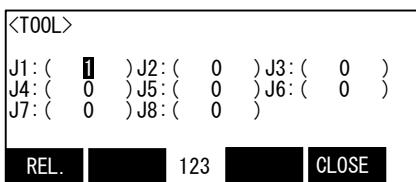

14) Setting of the origin is completed.

15) Refer to “[1.5.2ABS origin method](#)” on page 81 in this manual, and record the origin data on the origin data seal.

◇◆◇ Release the brake ◇◆◇

Do cursor movement into the parenthesis of each axis by the arrow key. The brakes can be released only for the axis for which a “1” is displayed on the screen. If the brakes are not to be released, press the [0] key and display a “0”. If the [F1] key on the teaching pendant or the enabling switch is detached while the brakes are released, the brakes will be work immediately.

◇◆◇ Select the axis of origin setting ◇◆◇

Do cursor movement into the parenthesis of each axis by the arrow key. The origin is set only for the axis for which a “1” is displayed on the screen. If the origin is not to be set, press the [0] key and display a “0”.

1.5.2 ABS origin method

When the origin setting of the robot is performed for the first time, this product records the angular position of the origin within one rotation of the encoder as the offset value. If the origin setting is performed according to the ABS origin method, this value is used to suppress variations in the origin setting operations and to reproduce the initial origin position accurately.

This operation is carried out with the teaching pendant. Set the [MODE] switch on the front of the controller to "MANUAL", and set the [ENABLE] switch on the teaching pendant to "ENABLE" to enable the teaching pendant. First, set to the ABS mark arrow of the axis for which the origin is to be set with jog operation. This can be set for all axes simultaneously or each axis independently.

When setting the ABS mark, always view the operations from the mark, and set at the end of the triangular mark. The positions where the ABS mark is attached are shown in below. Refer to "[1.5Confirming the operation](#)" on [page 24](#) for details on the jog operation.

Note that if the ABS marks are peeled off, the positions can be matched using the following alternative methods.
*Match the ruling lines of the ABS mark mounting position surfaces. In this case, the installing and removing of the cover are unnecessary.


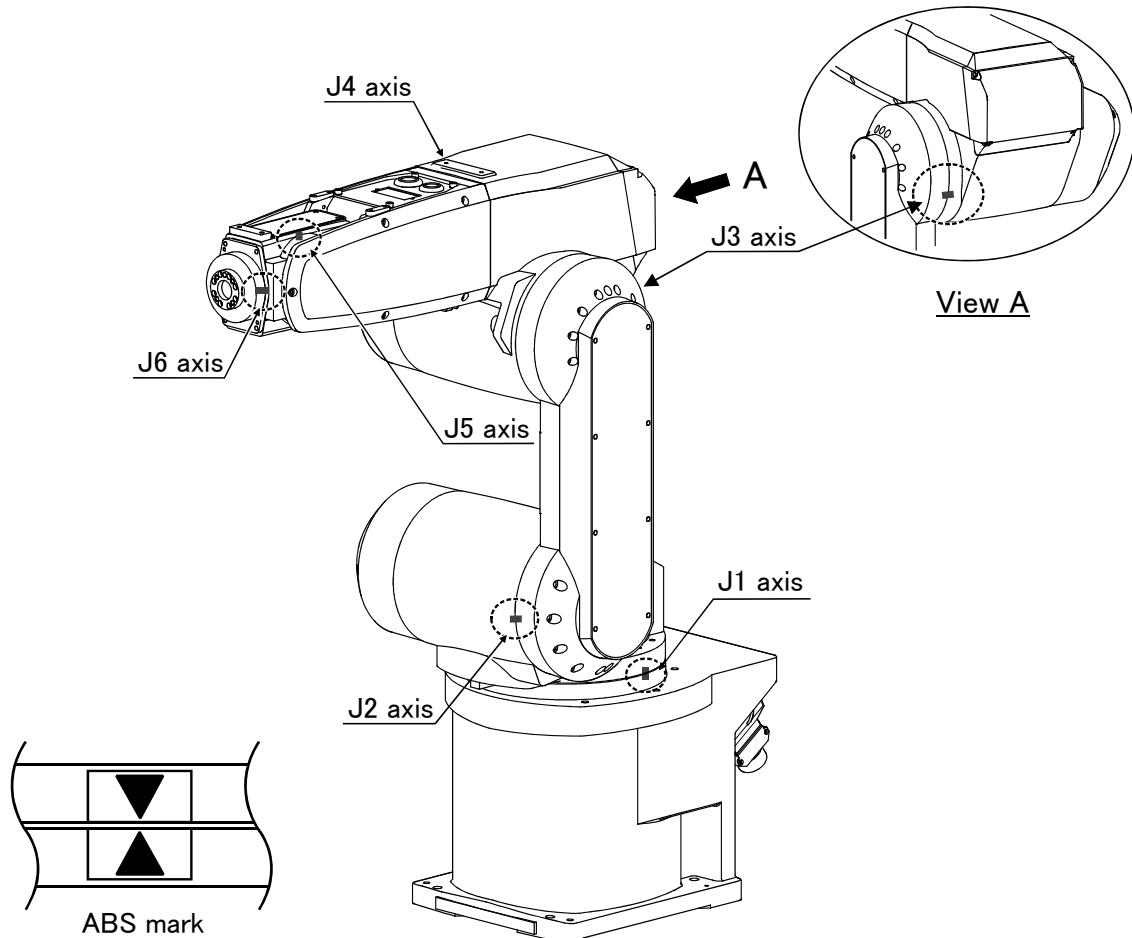


Fig.1-10 : ABS mark attachment positions

The procedures for setting the origin with the ABS method are explained below.


(1) Select the T/B

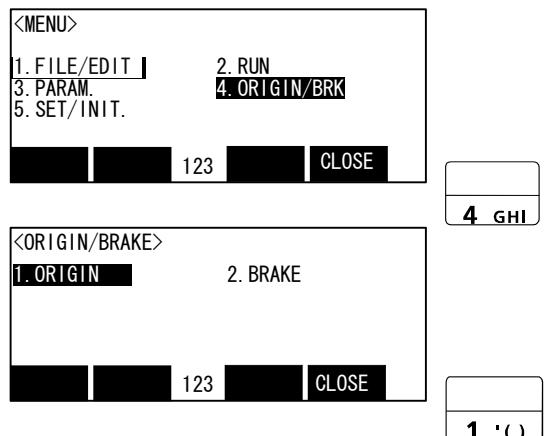


1) Press the [4] key on the menu screen, and display the Origin/Break selection screen.

2) Press the [1] key , and display the Origin setting selection screen.


3) Press the [4] key , and display the ABSI selection screen.

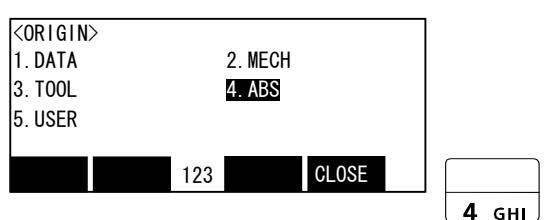

4) Input "1" into the axis to origin setting. Press the [EXE] key , and display Confirmation screen.

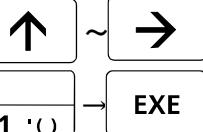

5) Press the [F1] key , and the origin position is set up.

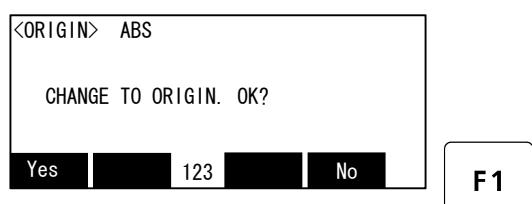

This completes the setting of the origin with the ABS method.



1.5.3 User origin method

CAUTION

Before using this method, the origin must be set with the other method.
The setting method is explained in “[Table 1-8 : Origin setting method](#)” on page 64.

The procedure for setting the origin with the user origin method is explained below.

This operation is carried out with the teaching pendant. Set the [MODE] switch on the front of the controller to “AMNUAL”, and set the [ENABLE] switch on the teaching pendant to “ENABLE” to enable the teaching pendant. The operation method is shown below.

When setting the origin for the first time using this method, carry out the operations in order from step 1). For the second and following time, move the robot arm to the user origin position with jog operation, and accurately position all axes. Then start the procedure from step 4).

1) Determine the user origin position

Move the robot to the position to be set as the origin with jog operation. Refer to “[1.5.2ABS origin method](#)” on page 81 for details on the jog operation.


CAUTION

Choose the user origin position as the position where it doesn't move by the gravity.
This position is left as a guideline to position all axes with jog operation when setting the origin again with this method.

2) Enter the JOINT jog mode, and display the joint coordinates on the teaching pendant screen. Record the value of the axis for which the origin is to be set.

3) Input the value recorded in the “user designated origin parameter (USRORG)”.

The parameter details and input methods are described in the separate “Instruction Manual/Detailed Explanation of Functions and Operations”. Refer to that manual and input the user designated origin position.

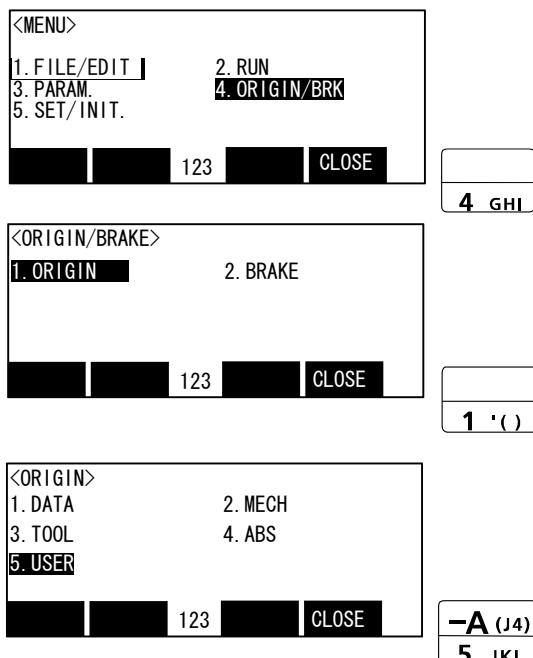


4) Next, set the origin.

Display the menu screen.


5) Press the [4] key on the menu screen, and display the Origin/Break selection screen.

6) Press the [1] key , and display the Origin setting selection screen.

7) Press the [5] key , and display the User selection screen.

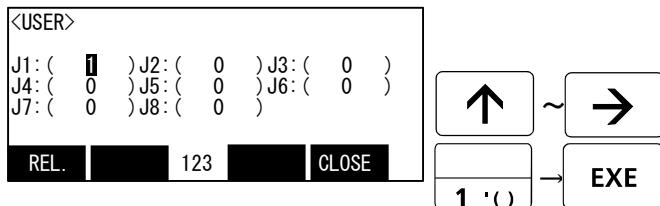

8) Input "1" into the axis to origin setting. Press the [EXE] key , and display Confirmation screen.

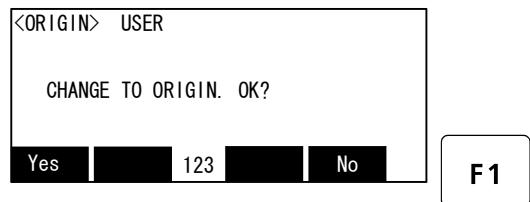

9) Press the [F1] key , and the origin position is set up.

This completes the setting of the origin with the user origin method.

1.5.4 Recording the origin data

When the origin has been set with the jig method, record that origin data on the origin data label. With this, the origin can be set with the origin data input method the next time.

Confirm the origin data on the teaching pendant screen (origin data input screen). The origin data label is enclosed with the arm or attached on the back of the shoulder cover B.

The teaching pendant operation method and shoulder cover B removal method for confirming the origin data is the same as the methods for setting the origin with the origin data input method. Refer to "[2.3.2Setting the origin with the origin data input method](#)" on page 13, and write the origin data displayed on the teaching pendant onto the origin label.

(1) Confirming the origin data label

Remove the shoulder cover B.

Refer to "[1.3.2Installing/removing the cover](#)" on page 53, and remove the shoulder cover B.

(2) Confirming the origin data

Confirm the value displayed on the teaching pendant's Origin Data Input screen.

Refer to "[2.3.2Setting the origin with the origin data input method](#)" "(5)Inputting the origin data", and display the Origin Data Input screen on the teaching pendant display screen.

(3) Recording the origin data

Write the origin data displayed on the teaching pendant to the origin data label attached to the back of the shoulder cover B. Refer to "[Fig. 2-8Origin data label \(an example\)](#)" on page 13, and "[Fig. 2-9Correspondence of origin data label and axis](#)" on page 16 for details on the origin data label.

(4) Installing the cover

Install the shoulder cover B removed in step "(1)Confirming the origin data label" above.

Refer to "[1.3.2Installing/removing the cover](#)" on page 53, and replace the cover B.

This completes the recording of the origin data.

1 Appendix

Appendix 1 : Configuration flag

The configuration flag indicates the robot posture.

For the 6-axis type robot, the robot hand end is saved with the position data configured of X, Y, Z, A, B and C. However, even with the same position data, there are several postures that the robot can change to. The posture is expressed by this configuration flag, and the posture is saved with FL1 in the position constant (X, Y, Z, A, B, C) (FL1, FL2).

The types of configuration flags are shown below.

(1) RIGHT/LEFT

P is center of flange in comparison with the plane through the J1 axis vertical to the ground.

Q is center of J5 axis rotation in comparison with the plane through the J2 axis vertical to the ground.

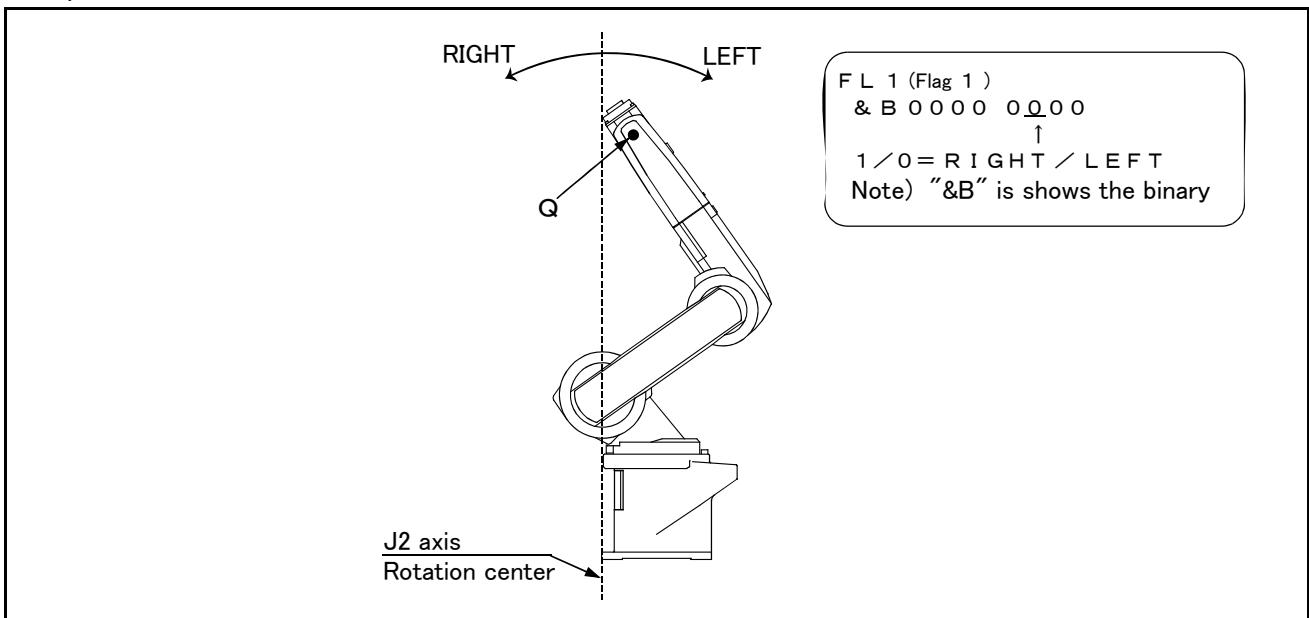


Fig.1-1 : Configuration flag (RIGHT/LEFT)

(2) ABOVE/BELOW

Q is center of J5 axis rotation in comparison with the plane through both the J3 and the J2 axis..

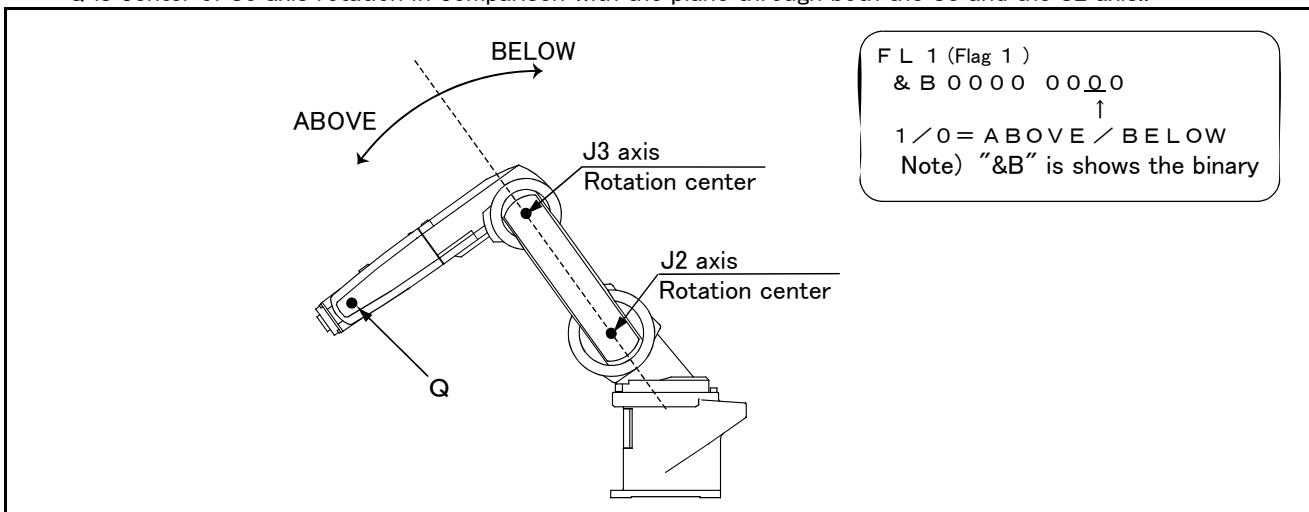


Fig.1-2 : Configuration flag (ABOVE/BELOW)

(3) NONFLIP/FLIP (6-axis robot only.)

This means in which side the J6 axis is in comparison with the plane through both the J4 and the J5 axis. .

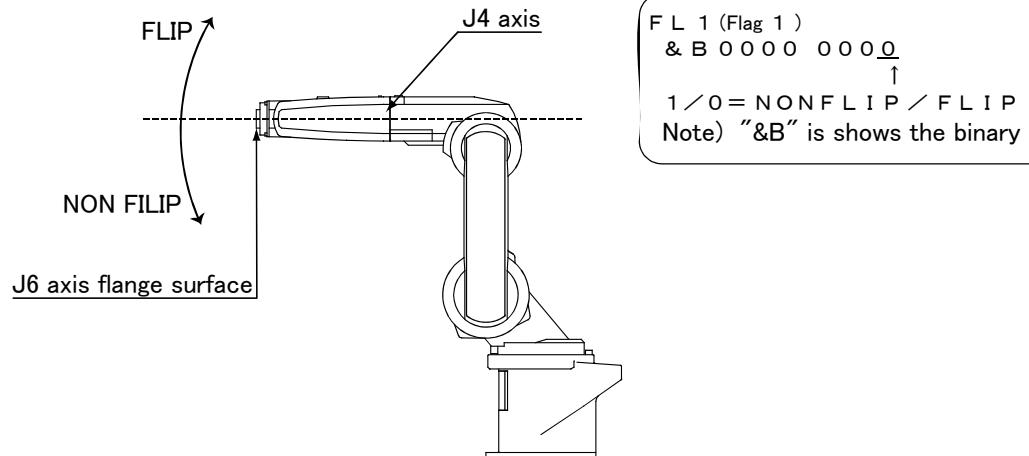


Fig.1-3 : Configuration flag (NONFLIP/FLIP)



HEAD OFFICE: TOKYO BUILDING, 2-7-3, MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN
NAGOYA WORKS: 5-1-14, YADA-MINAMI, HIGASHI-KU, NAGOYA 461-8670, JAPAN